



*Quick Start Guide*

# **5.8 GHz Corded/Cordless Telephone/Answering System E5909B**

---

 
**with Caller ID & Call Waiting**

---




# Installation & setup


After battery installation, place the cordless handset in the charger and allow to charge for at least 16 hours before use. You can keep the battery charged by returning the cordless handset to the charger after each use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about five hours depending on environmental conditions, and the standby time is approximately five days.




Press in and downward on the tab to open the battery compartment cover.

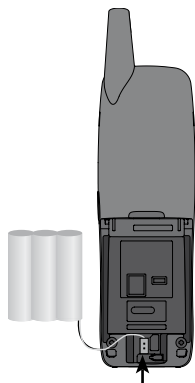

 Plug the battery connector into the handset.



 Place the battery pack and wires in the compartment.





Slide battery compartment cover up until it clicks closed.



Plug power adapter into jack on underside of charger as shown, then plug into an electrical outlet not controlled by a wall switch.

  Plug the large power adapter into an electrical outlet not controlled by a wall switch.




Plug long telephone line cord into telephone jack.



Place handset in charger for at least 16 hours before first use.



**Caution:** Use only the supplied rechargeable battery pack or AT&T replacement battery model 3301 (SKU 91076. Part number 80-5071-00-00).

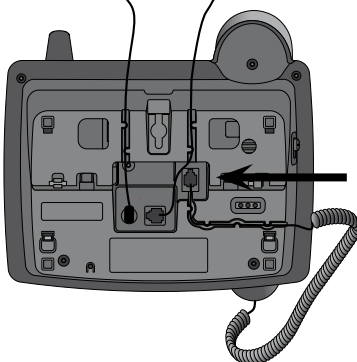

Plug handset cord into handset and jack at the bottom of the base.



## NOTE:

1. Use only the power cord supplied with this product. If you need a replacement, call 1 (800) 222-3111. In Canada, call 1 (866) 288-4268.
2. Be sure to use an electrical outlet not controlled by a wall switch.

# Quick reference guide

## Cordless Handset

### SELECT/TRANSFER

Press to store a programming option. During a call, press to transfer a call between cordless handsets.

### CID (volume down)

When phone is idle, press **CID** to display Caller ID information.

While entering names or phone numbers, press to delete last character entered. While programming, press to change menu item or value.

During a call, press **CID** to adjust listening volume.

### PHONE/FLASH

Press to make or answer a call.

During a call, press to receive an incoming call if Call Waiting is activated.

### HOLD

Press to place a call on hold. Press again to resume your call.

Press to customize the handset's operation.

During a call, press to switch to another channel if there is interference.

### MENU/CHAN

### DIR (volume up)

When phone is idle, press **DIR** to display Directory entries.

While entering letters in names, press to advance or press twice to enter space.

While programming, press to change menu item or value.

During a call, press **DIR** to adjust listening volume.

### OFF/CLEAR

During a call, press to hang up.

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

### INT/DELETE

While phone is idle, press to page base or press and hold to delete all Caller ID entries.

While a Caller ID entry is displayed, press to delete displayed entry.

### REDIAL/PAUSE

Before dialing, press to display last number called.

While dialing or entering numbers into your directory, press to insert a 4-second dialing pause.



**NOTE:** For more information, please refer to the user's manual.

# Quick reference guide

## Telephone Base

**RINGER VOLUME:** Set switch on side of base (Off, Low, High). (see page 13)

**CONTRAST:** Press to adjust screen contrast.

**INDICATOR LIGHTS:** See page 44.



- **CLEAR:** While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.
- **ⓈCID:** Press when phone is idle to display Caller ID information (see page 30). While entering numbers or letters, press to delete last character entered.
- **SELECT:** Press to store a programming option (see page 13), or to store a directory entry in memory (see page 21).
- **ⓈDIR:** Press when phone is idle to display directory entries (see page 26). While entering or modifying names, press to advance cursor.
- **DISP DIAL:** Press to dial number currently displayed.
- **HOLD:** Press to place call on hold. Press again to resume call (see page 16).
- **⬆️VOLUME:** During a call, press **⬆️** or **⬆️** to adjust listening volume (see page 16).
- **MUTE:** Press to silence microphone; press again to resume your conversation (see page 16).
- **ⓀSPEAKER:** Press to turn speaker on or off (begin or end a call).

- **INTERCOM/CID DEL:** Press to delete displayed Caller ID entry (see page 32). While phone is idle, press to page cordless handsets (see page 15), or press and hold to delete all Caller ID entries (see page 33).
- **MENU:** Press to customize the telephone's operation (see page 13).
- **FLASH:** During a call, press to receive an incoming call if Call Waiting is activated (see page 16).
- **REDIAL/PAUSE:** Before dialing any numbers, press to display last number called (see page 13).  
While dialing or entering numbers into your directory, press to insert a 4-second dialing pause (see page 25).
- **CLOCK:** Press to review or set clock (see page 36).
- **SETUP:** Press repeatedly to hear setup options (see page 38).
- **ANNC:** Press to review or record announcement; press again to quit (see page 37).
- **RECORD:** Press to record a memo (see page 40) or after pressing **ANNC** to record an outgoing announcement (see page 37).
- **▶️PLAY/STOP:** Press to start or stop message playback (see page 39).
- **DELETE:** Press to delete message currently playing; hold to delete all old messages (see page 39).
- **ⓀANSWER ON:** Press to turn answering system on or off.
- **⬅️REPEAT:** Press to repeat message; press **twice** to play previous message (see page 39).
- **▶️SKIP:** Press to skip message (see page 39).