 
 


This quick start guide provides you with basic instructions only. For more complete instructions, refer to your Abridged user's manual provided in the package, or see the online Complete user's manual at www.telephones.att.com/manuals.

Telephone base installation

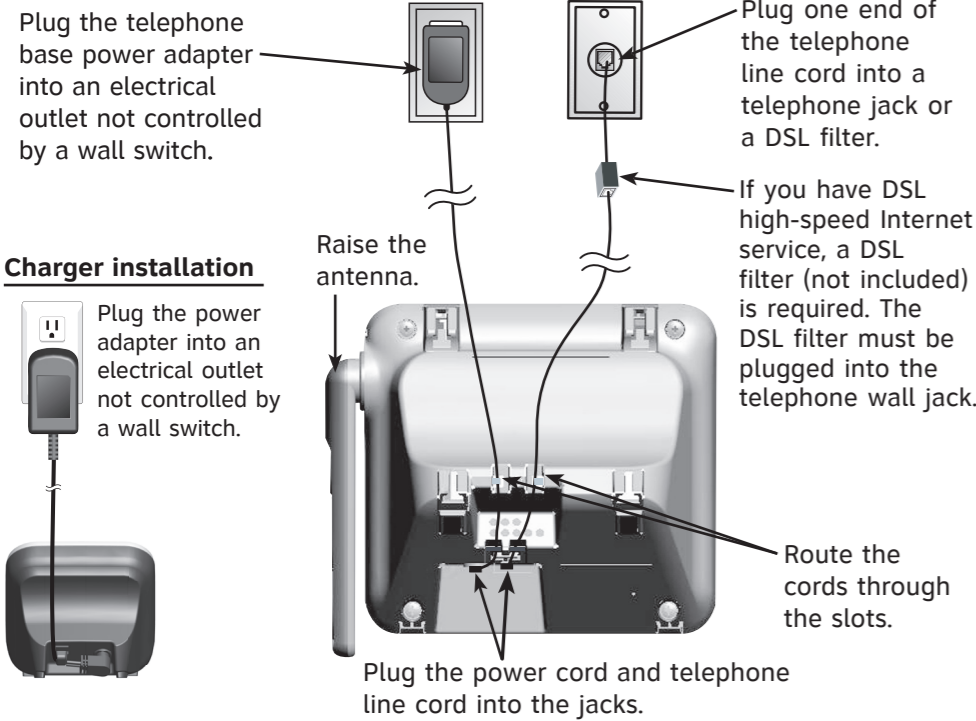

Charger installation

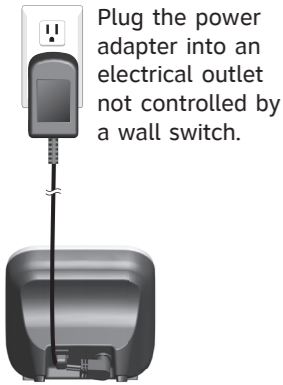

Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Battery installation

Install the battery as shown below. Charge your handset(s) before initial use. The battery is fully charged after 10 hours of continuous charging.



1. Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery with the label **THIS SIDE UP** facing up as indicated.
2. Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.
3. Charge the handset by placing it face forward in the telephone base or charger.

Caution: Use only the supplied rechargeable battery or replacement battery (model BT183342).

Quick reference guide

Handset

- ▲DIR/VOLUME**
 - Show directory entries.
 - Scroll up in menus.
 - Move cursor to the right when entering names or numbers.
 - Increase listening volume when on a call.
- ▼CID/VOLUME**
 - Show caller ID history.
 - Scroll down in menus.
 - Move cursor to the left when entering names or numbers.
 - Decrease listening volume when on a call.
- RECALL/PAUSE**
 - Press repeatedly to view the last 10 numbers dialed.
 - Press and hold to insert a dialing pause while entering numbers.
- PHONE/FLASH**
 - Make or answer a call.
 - Answer a call waiting call during a call.
- 1**
 - Press repeatedly to add or remove 1 in front of the call log entry before dialing or saving it to the directory.
 - Press and hold to set or dial your voicemail number.
- TONE ***
 - Press to switch to tone dialing temporarily during a call if you have pulse service.
- EQ**
 - Change the audio quality to best suit your hearing.
- ▲/SPEAKER**
 - Mute the microphone during a call.
 - Delete the displayed entry while in the directory, call log or redial list.
 - Delete digits or characters when using the dialing keys.
- SELECT/MENU**
 - Show the menu.
 - Select an item or save an entry or setting while in the menu.
- OFF/CANCEL**
 - Hang up a call.
 - Press to cancel an operation, back up to the previous menu, or exit the menu display, or press and hold to return to idle mode.
 - Press and hold in idle mode to erase the missed call indicator.
- QUIET # (pound key)**
 - Press repeatedly to display other dialing options when reviewing a caller ID log entry.
 - Press and hold to enter the QUIET mode setting screen, or to deactivate QUIET mode.
- AUDIO ASSIST®**
 - Voices will sound louder and clearer when you press **AUDIO ASSIST®** while you are on a call using the handset.
- MUTE/DELETE**
 - Mute the microphone during a call.
 - Delete the displayed entry while in the directory, call log or redial list.
 - Delete digits or characters when using the dialing keys.

CHARGE indicator
On when the handset is charging in the telephone base or charger.

PHONE/FLASH
Make or answer a call.
Answer a call waiting call during a call.

1
Press repeatedly to add or remove 1 in front of the call log entry before dialing or saving it to the directory.
Press and hold to set or dial your voicemail number.

TONE *
Press to switch to tone dialing temporarily during a call if you have pulse service.

EQ
Change the audio quality to best suit your hearing.

▲/SPEAKER
Switch between the speakerphone and handset.

 
SELECT/MENU
Show the menu.
Select an item or save an entry or setting while in the menu.

OFF/CANCEL
Hang up a call.
Press to cancel an operation, back up to the previous menu, or exit the menu display, or press and hold to return to idle mode.
Press and hold in idle mode to erase the missed call indicator.

QUIET # (pound key)
Press repeatedly to display other dialing options when reviewing a caller ID log entry.
Press and hold to enter the QUIET mode setting screen, or to deactivate QUIET mode.

AUDIO ASSIST®
Voices will sound louder and clearer when you press **AUDIO ASSIST®** while you are on a call using the handset.

MUTE/DELETE
Mute the microphone during a call.
Delete the displayed entry while in the directory, call log or redial list.
Delete digits or characters when using the dialing keys.

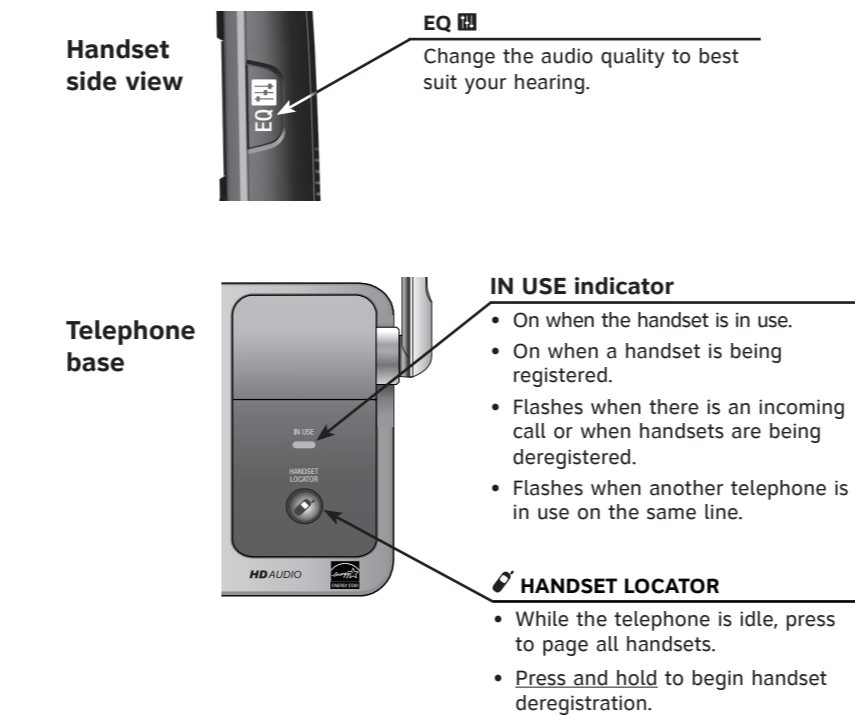

Initial settings

We recommend you program your telephone system before use.

The following are a few examples of common features to set before using the telephone. Refer to the **Handset settings** in the Abridged user's manual or the online Complete user's manual for detailed instructions on setting all telephone features.

Set date/time

Set the date/time before using the telephone.

1. **MENU** -> ▼ or ▲ -> **Set date/time** -> **SELECT**.
2. Enter the month, day and year using the dialing keys -> **SELECT**.
3. Enter the hour and minute using the dialing keys.
4. ▼ or ▲ to choose **AM** or **PM** -> **SELECT**.

Handset ringer volume

You can set the ringer volume level to one of the six levels or turn the ringer off.

1. **MENU** -> ▼ or ▲ -> **Ringers** -> **SELECT**.
2. **SELECT** to select **Ringer volume**.
3. ▼ or ▲ to choose the desired level -> **SELECT**.

Language

If you have accidentally changed the screen display language and want to switch it back to English, follow the steps below.

- **MENU** in idle mode -> enter **364#**.

Telephone operation

Operation	Steps
Making a call	Press PHONE or SPEAKER -> Enter the telephone number.
On-hook dialing (predialing)	Enter the telephone number -> Press PHONE or SPEAKER to call.
Answering a call	Press PHONE or SPEAKER , or press any dialing key (0-9 , TONE * or #).
Ending a call	Press OFF or return the handset to the telephone base or charger.
Speakerphone	During a call, press SPEAKER to switch between handsfree speakerphone and normal handset use.
Redial	Press REDIAL repeatedly to select the desired entry -> PHONE or SPEAKER to call.
Volume control	Press VOLUME ▼ to decrease or press VOLUME ▲ to increase the listening volume during a call.
Call waiting (Requires subscription from telephone service provider)	Press FLASH to put current call on hold and to take the new call; press again to switch back and forth between calls.

Caller ID

This product supports caller ID services offered by most telephone service providers. The telephone stores caller ID information for the last 50 incoming calls in the telephone base. This information is common to all handsets.

Missed call indicator
When a handset is in idle mode and has new or missed calls, its screen shows XX Missed calls . You can erase the missed call indicator either by reviewing the call log one by one, or by <u>pressing and holding</u> CANCEL on the handset in idle mode.
Review and dial a number in the call log
1. CID in idle mode -> ▼ or ▲ to scroll through the list. 2. PHONE or SPEAKER to call when the desired entry is displayed.

Directory

The directory can store up to 50 entries, which are shared by all system handsets.

Operation	Steps
Adding an entry	1. MENU . 2. ▼ or ▲ -> Directory -> SELECT . 3. ▼ or ▲ -> Add contact -> SELECT . 4. Enter a telephone number up to 30 digits -> SELECT . 5. Enter a name up to 15 characters -> SELECT .
Searching/dialing an entry	1. DIR in idle mode. 2. Press ▼ or ▲ to browse through the directory, or press the dialing keys (0-9) to start a name search. 3. Press PHONE or SPEAKER to call.

For more detailed instructions, please refer to the Abridged user's manual provided in your package, or for a full set of installation and operation instructions, refer to the online **CRL81112/CRL81212 DECT 6.0 cordless telephone with caller ID/call waiting** Complete user's manual at www.telephones.att.com/manuals.

For customer service or product information, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.