



Quick start guide

5.8 GHz Cordless Telephone/Answering System E5945B


with Caller ID & Call Waiting



Installation & setup



Press in and downward on the tab to open the battery compartment cover.

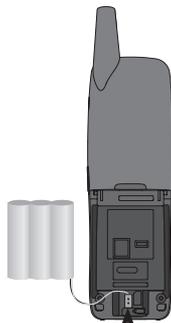

Plug the battery connector into handset battery compartment, matching the color coded label.



Place the battery and wires neatly inside the compartment.




Slide battery compartment cover towards the center until it clicks closed.

After battery installation, place the cordless handset in the telephone base or charger and allow to charge for at least 16 hours before use. Keep the battery charged by returning the cordless handset to the telephone base or charger after each use. When the battery is fully depleted, a recharge takes about 16 hours. The talk time on a fully charged battery is about five hours depending on environmental conditions, and the standby time is approximately five days. Actual battery life depends on usage conditions, and age of battery.



Plug power adapter into jack on underside of charger as shown, then plug into an electrical outlet not controlled by a wall switch.

Plug one end of the telephone line cord into a modular telephone jack, and the other end into the telephone jack at the bottom of the telephone base.

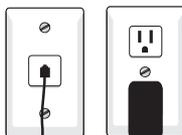


Plug the larger power adapter into an electrical outlet not controlled by a wall switch, and plug the other end into the bottom of the telephone base.



Place handset in charger for at least 16 hours before first use.



Caution: Use only the supplied rechargeable battery pack or AT&T replacement battery model 3301 (SKU 91076. Part number 80-5071-00-00).

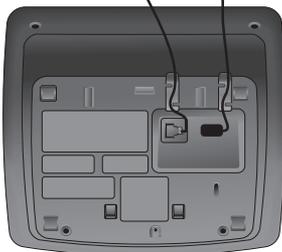

NOTES:

1. Use only the power cord supplied with this product. If you need a replacement, call 1 (800) 222-3111. In Canada, call 1 (866) 288-4268.
2. Be sure to use an electrical outlet not controlled by a wall switch.

Quick reference guide

Cordless handset

PHONE/FLASH

Press to make or answer a call.
During a call, press to receive an incoming call if call waiting is activated.

CID

While in menus, press to scroll down.
When the telephone is not in use, press to display call log entries.
While entering names or numbers, press to delete last character entered.
During a call, press **CID** to lower listening volume.

DIR

While in menus, press to scroll up.
When the telephone is not in use, press to display directory entries.
While entering names, press to advance the cursor to the next space.
During a call, press **DIR** to increase listening volume.

MENU

Press to display menu.

DELETE

When the telephone is in **CID** mode, press either the **CHAN** or **DELETE** button to delete the displayed caller ID entry, or press and hold the **CHAN** or **DELETE** button to delete all caller ID entries.

SELECT/TRANSFER

Press to store a programming option.
During a call, press to transfer a call between cordless handsets.

OFF/CLEAR


During a call, press to hang up.
While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

CHAN

When the telephone is off the hook, for example, when on a call, pressing the **CHAN** or **DELETE** button causes the telephone to scan for a clearer channel when there is static or interference on the line.

REDIAL/PAUSE

While the telephone is idle, press to display the last number called.
While dialing or entering numbers into the directory, press to insert a four-second dialing pause.

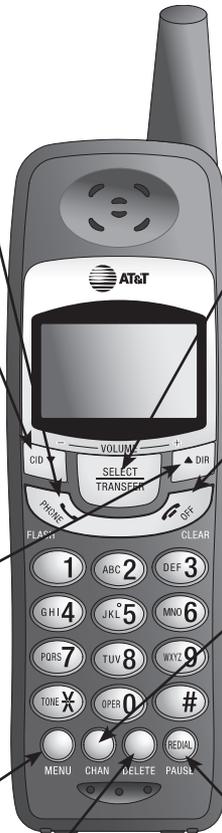

NOTE: For more information, please refer to the user's manual.

Quick reference guide

Telephone base



CHARGE/IN USE

Flashes when one of the cordless handsets is in use.
On steady when the cordless handset is properly positioned to be charged in the telephone base.
Flashes when there is an incoming call.

HANDSET LOCATOR

Press to page the cordless handsets, if none of the handsets is in the telephone base. Press again to cancel the page. Press **OFF/CLEAR** on cordless handset, or place cordless handset in the telephone base or charger to cancel the page on that handset only; all other handsets are still being paged.



Answering system controls



Press to play or stop playing messages.

- ANSWER ON Press to turn answering system on or off.
- CLOCK Press to review or set the answering system clock.
- SETUP Press repeatedly to listen to the setup options.
- ANNC Press to review or record announcement. Press again to quit.
- RECORD Press to record a memo, or after pressing ANNC to record an outgoing announcement.
- DELETE Press to delete a message during playback. Press and hold to delete all old messages when idle.
- REPEAT Press to repeat message. Press twice to play previous message.
- SKIP Press to skip message.