



*User Manual (Part 2)*

## **2.4 GHz Cordless Telephone/Answering System E2600B**

---

**with Caller ID & Call Waiting**

---



**You must install and charge batteries before using the telephone**

**STOP!**

**See page 7 for easy instructions**



For customer service or product information, visit our web site at **[www.telephones.att.com](http://www.telephones.att.com)** or call 1-800-222-3111

Please also read ***Important Product Information*** Enclosed in product package

**Add new handsets to make your phone more versatile (see page 36)**

Your telephone can accommodate up to eight cordless handsets. You can add new handsets (Model E250, sold separately) at any time. Up to four handsets at a time can be used.

The handsets provided with your telephone are automatically registered as Handsets 1 and 2. Additional handsets will be assigned numbers in the order they are registered (3, 4, etc.) up to a maximum of eight handsets.



Handset 1



Handset 2



Handset 3



*User Manual (Part 2)*

**2.4 GHz Cordless Telephone/Answering System E2600B**



**Table of contents**

**Getting Started**

Quick reference .....2  
 Parts checklist.....4  
 Before you begin .....5  
 Telephone base & charger installation...6  
 Battery installation & charging .....7  
 Wall mounting .....8  
 Belt clip & optional headset.....9

**Telephone Operation**

Basic handset operation ..... 10  
 Basic base operation ..... 11  
 Options during calls ..... 12  
 Intercom calls ..... 13  
 Handset settings..... 14  
 Base settings..... 15  
 Handset clock settings..... 16

**Phonebooks**

Handset and base phonebooks..... 17  
 New phonebook entries ..... 18  
 Phonebook search ..... 19  
 To dial, edit or delete a listing ..... 20

**Caller ID Logs**

How Caller ID works ..... 21  
 To review Caller ID logs..... 22  
 To dial a Caller ID entry ..... 23

**Answering System Operation**

Answering system operation ..... 24  
 Day and time announcements ..... 25  
 Outgoing announcements ..... 26  
 Announce Only mode ..... 27  
 Changing feature options ..... 28  
 Message playback (at base) ..... 29  
 Message playback (at handset) ..... 30  
 Recording and playing memos ..... 31  
 Message window displays..... 32  
 Remote access..... 33

**Appendix**

Display screen status icons..... 34  
 Alert tones & indicator lights..... 35  
 Adding new handsets ..... 36  
 Charging spare batteries ..... 37  
 In case of difficulty ..... 38  
 INDEX..... 40  
 Technical specifications ..... 42  
 Remote access wallet card ..... 43

Getting Started

**Quick reference guide**

**Handset**

**Softkeys**


Press a softkey to select a menu item displayed just above the key.

**Phone/Flash**

Press to begin a call, then dial a number.  
 During a call, press to receive an incoming call, if Call Waiting is activated (see page 12).

**Speaker**

Press to activate handset speaker-phone. Press again to switch call back to earpiece.

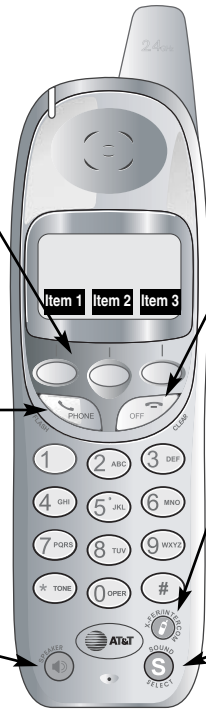

**Off/Clear**

During a call, press to hang up.  
 While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.


**Xfer/Intercom**

Press to transfer a call or initiate an intercom conversation (see pages 10 & 13).

**Sound Select**

Press to customize the sound at the ear-piece for clear conversations. (see page 12)

**Screen menus**

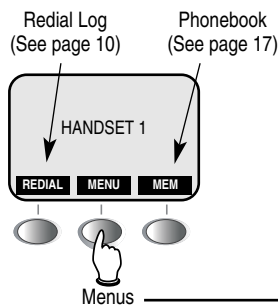

**Main Menu**

- Calls Log .....See page 21
- Play Messages .....See page 30
- Handset Settings .....See menu
- Set Time .....See page 16
- Clock Mode .....See page 16
- Register .....See page 36


**Handset Settings**

- Ringer Volume .....See page 14
- Ringer Melody .....See page 14
- Low Batt Tone .....See page 14
- Range Tone .....See page 14
- Keypad Tone .....See page 14
- Contrast .....See page 14
- Language.....See page 14

Getting Started

**Quick reference guide**

**Base/Speakerphone**

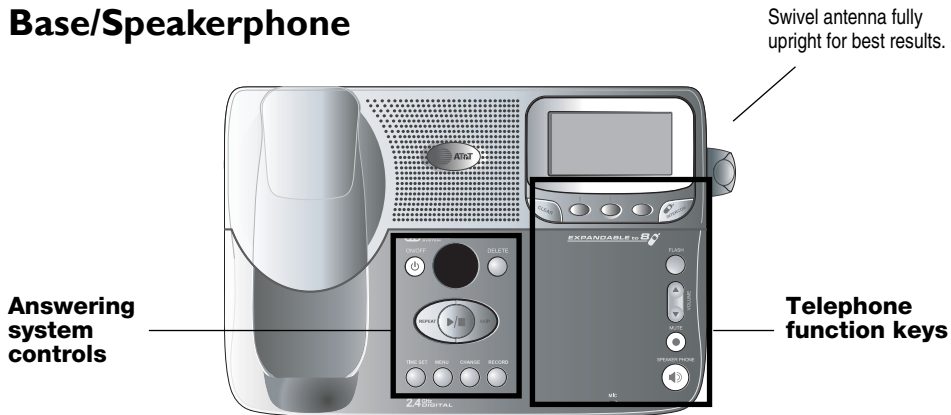

**Telephone function keys** (see pages 11-15)

- SOFTKEYS** .....Press to select menu item displayed just above the key.
- CLEAR** .....Press to cancel an operation, back up to the previous menu, or exit the menu display.
- INTERCOM** .....Press to transfer a call or initiate an intercom conversation.
- FLASH** .....During a call, press to receive an incoming call, if Call Waiting is activated.
- VOLUME** .....Press to adjust speakerphone listening volume.
- MUTE** .....Press to silence microphone; press again to resume.
- SPEAKERPHONE**....Press to turn speakerphone on or off (answer or end a call).



**Answering system controls** (see pages 24-33)

Press to repeat message. Press twice to hear previous message.



Press to skip to next message.

Press to play or stop playing messages.

- ON/OFF** .....Press to turn answering system on or off.
- DELETE** .....Press to delete message currently playing.
- TIME SET** .....Press to set date and time.
- MENU** .....Press to review or change answering system options.
- CHANGE** .....Press to change a menu option.
- RECORD** .....Press to record a memo or outgoing announcement.


Getting Started

## Parts checklist

Remember to save your sales receipt and original packaging in case you ever need to ship your telephone for warranty service. Check to make sure the telephone package includes the following:



Telephone base

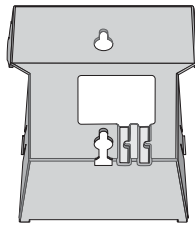


Wall mount bracket




Long telephone line cord



Short telephone line cord

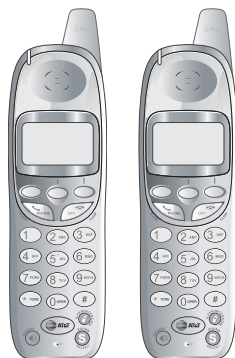


Telephone handsets

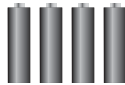


Batteries (4)




Handset charger

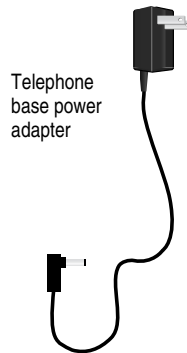

Telephone base power adapter

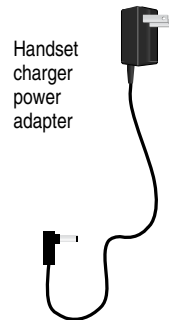

Handset charger power adapter

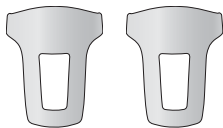

Belt clips

*Getting Started***Before you begin****About Caller Identification**

Caller ID with Call Waiting features in this telephone let you see who's calling before you answer the phone, even when you're on another call. These features require services provided by your local telephone company.

Contact your telephone service provider if:

- You have both Caller ID and Call Waiting, but as separate services (you may need combined service);
- You have only Caller ID service, or only Call Waiting service;
- You don't subscribe to any Caller ID or Call Waiting services.

You can use this phone with regular Caller ID service, and you can use its other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service. There may be fees for these services, and they may not be available in all areas.

Caller ID features will work only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

See Caller ID Operation, beginning on page 21, for more details about how these features work.

**Telephone operating range**

This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and base can communicate over only a certain distance — which can vary with the locations of the base and handset, the weather, and the construction of your home or office. For best performance, keep the base antenna fully upright.

**If you receive a call while you are out of range**, the handset might not ring — or if it does ring, the call might not connect when you press **PHONE**. Move closer to the base, then press **PHONE** to answer the call.

**If you move out of range during a phone conversation**, you might hear noise or interference. To improve reception, move closer to the base.

**If you move out of range without pressing OFF**, your phone will be left "off the hook." To hang up properly, walk back toward the telephone base, periodically pressing **OFF** until the call is disconnected.


Getting Started

## Telephone base & charger installation

Install the charger and speakerphone base as shown below. Choose a location away from electronic equipment, such as personal computers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

**i** **NOTE:** Use only the power cords supplied with this product. If you need a replacement, call 1 800 222-3111.

Be sure to use electrical outlets not controlled by a wall switch.

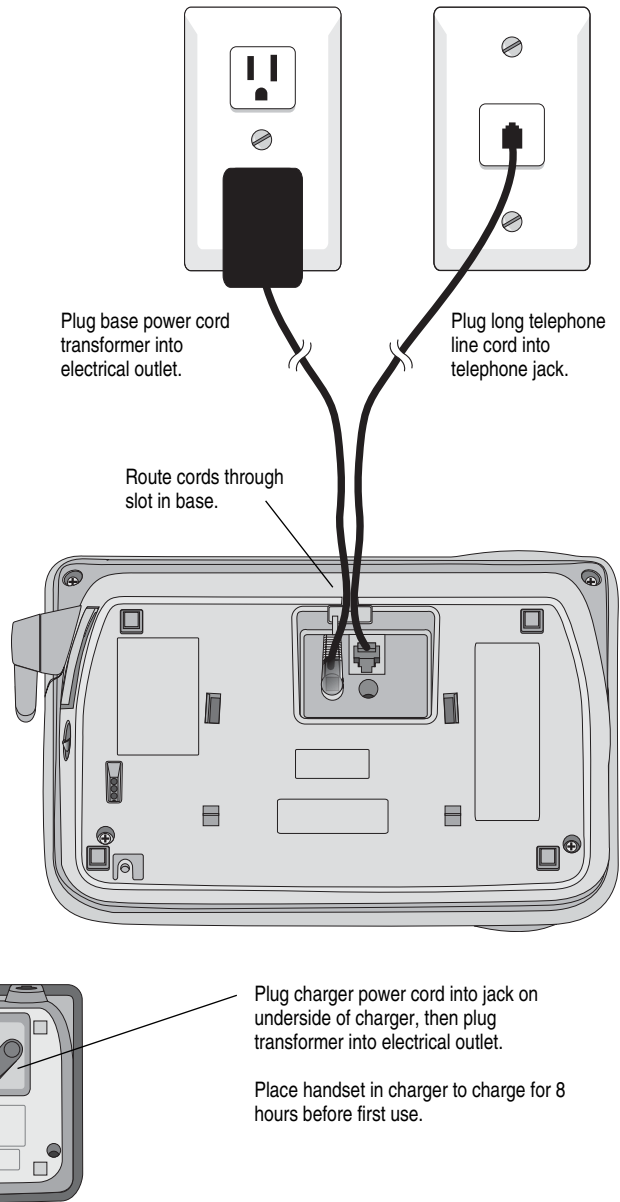





Getting Started

## Battery installation & charging

After installation, place handsets in the base and charger for at least 8 hours before use. You can keep batteries charged by returning the handsets to the base or charger after each use. When battery power is fully depleted, a full recharge takes about 6 hours.

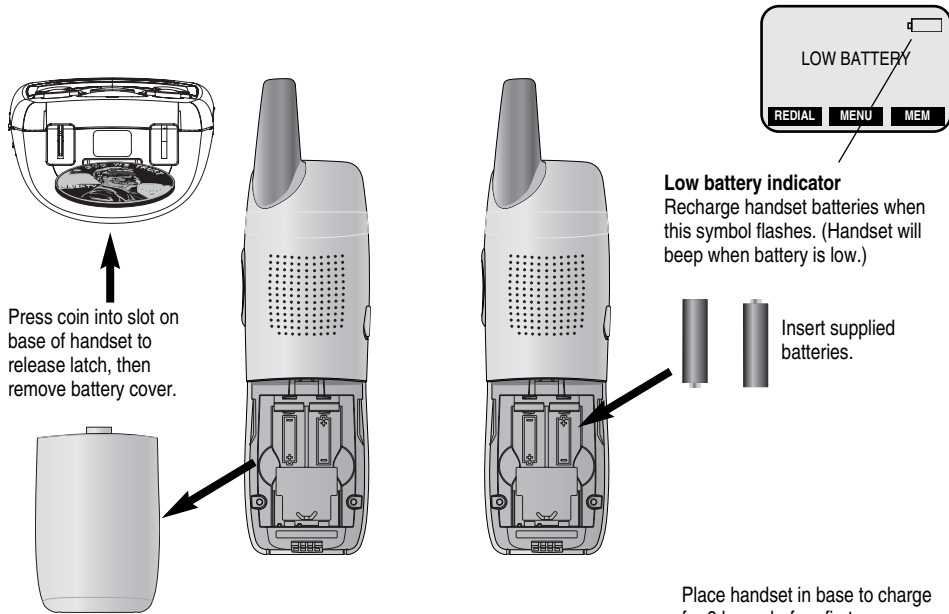

**To replace battery cover**

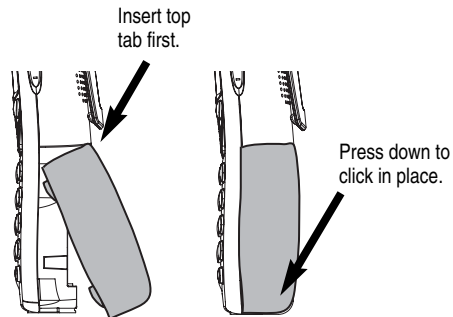

Place handset in base to charge for 8 hours before first use. Rotate antenna to fully upright position.



**Caution:** Use only the supplied NiCd battery (80-5469-00-00) or AT&T model 2AA NiMH replacement battery (SKU 26820). **Do not use alkaline batteries.**

**DID YOU KNOW?**

Optional spare batteries can be kept charged in the base, for quick replacement when handset batteries become depleted (see page 37).


Getting Started

## Wall mounting

The telephone base can be installed on any standard wall-phone outlet as shown below. Choose a location away from electronic equipment, such as personal computers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

Connect cords as shown, then press and slide down firmly so base is held securely on outlet mounting pegs.

Clip wall-mount bracket securely into notches on underside of base.

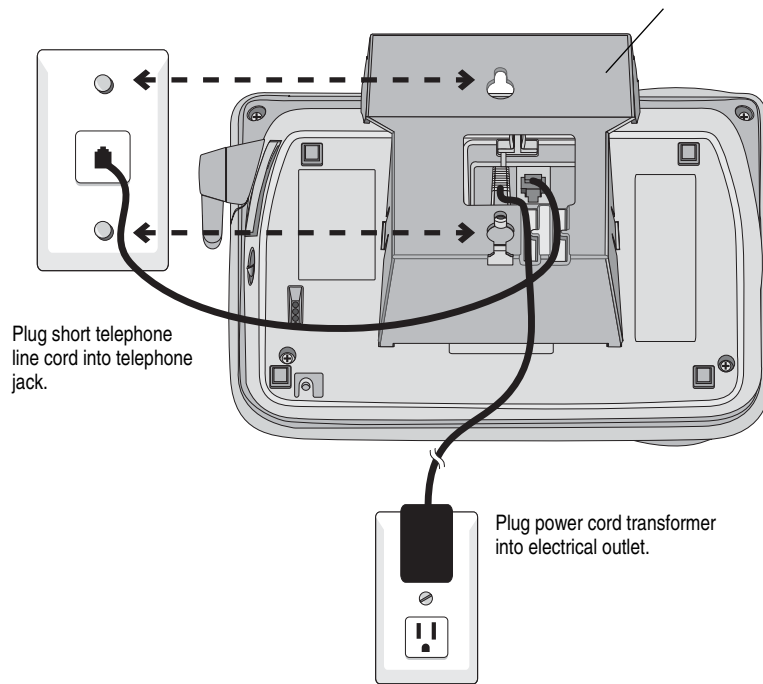

Place handset in base to charge for 8 hours before first use.




Rotate antenna to fully upright position.

*Getting Started*

## Belt clip & optional headset

Install belt clip as shown below if desired.

For hands-free telephone conversations, you can use any industry standard 2.5 mm headset (purchased separately). For best results use an AT&T 2.5 mm headset.

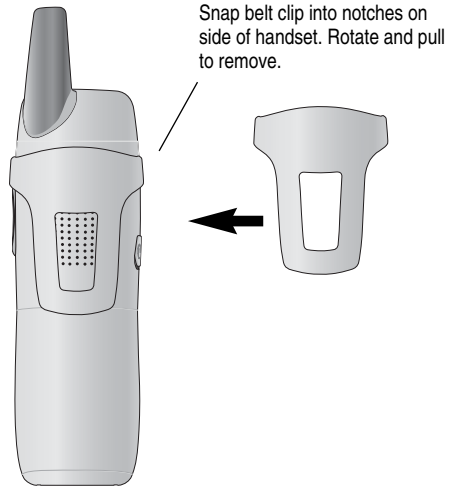

Telephone Operation

## Basic handset operation

### Making and answering calls

To answer a call, press **PHONE** or any dial pad button.  
To make a call, press **PHONE**, then dial a number. Press **OFF** to hang up.

To preview numbers before dialing, enter numbers first, then press **PHONE** to dial. Press **CLEAR** at any time to make corrections as you are entering numbers. Press **PAUSE** to enter a 3-second dialing pause.

### Hands-free speakerphone calls

To answer a call, press **SPEAKER**. To make a call, press **SPEAKER**, then dial a number. During a call you can press **SPEAKER** to toggle between hands-free speakerphone and normal handset use. Press **OFF** to hang up.

### Last number redial

Press **REDIAL** to display the last 10 numbers called (up to 32 digits each). Use the **▲** **▼** buttons to select a number, then press **PHONE** to dial. Press **SELECT** then **ERASE** to delete this number from the redial memory, or **SAVE** to copy the number into your phonebook.

### Hold and mute

Press **HOLD** to place a call on hold. Press **PHONE** (or **SPEAKER**) to resume the call.





Press **MUTE** to silence the microphone. You will be able to hear, but your caller will not be able to hear you until you press **MUTE** again to resume speaking.


### Call transfer

During a conversation you can transfer the call to the base speakerphone or to another handset.

Press **XFER** to display a list of sets. Use the **▲** **▼** buttons to highlight the set you want, then press **OK** to transfer the call to the remote set.

The call will be placed on hold. Press **PHONE** or **SPEAKER** at the remote set to resume the call.

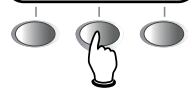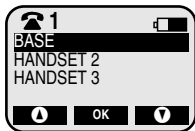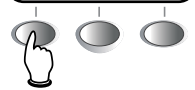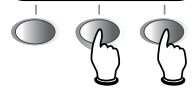

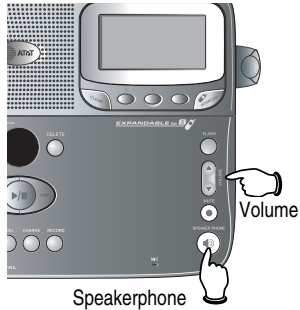

*Telephone Operation*

## Basic base operation

### Answering calls

To answer an incoming intercom page or external call, press **SPEAKERPHONE**. Press **SPEAKERPHONE** again to hang up.

### Hold and mute

Press **HOLD** to place a call on hold. Press **SPEAKERPHONE** to resume the call.




Press **MUTE** to silence the microphone. You will be able to hear, but your caller will not be able to hear you until you press **MUTE** again to resume speaking.


### Call transfer

During a conversation you can transfer the call to a handset.

Press **XFER** to display a list of sets. Use the **▲** **▼** buttons to highlight the set you want, then press **OK** to transfer the call to the remote set.

The call will be placed on hold. Press **PHONE** or **SPEAKER** at the remote set to resume the call.

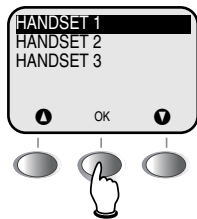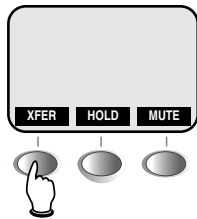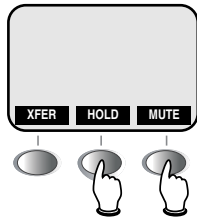

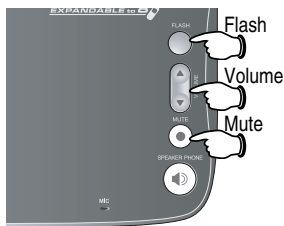

### Telephone Operation

## Options while on calls

### To adjust volume or sound quality

Press **VOLUME** buttons on the handset or the base to adjust listening volume. Each button press raises or lowers volume by one level.

During a handset call you can press **SOUND SELECT** to change the sound quality heard through the earpiece. You can choose Natural Audio, Bass Boost, Mid Boost or Treble Boost. Each button press changes to the next tone type.

### Call waiting

If you have Call Waiting service, you will hear a beep if someone calls while you are already on a call. Press **FLASH** to put your current call on hold and take the new call. You can press **FLASH** at any time to switch back and forth between calls.

### Ring silencing

To silence the ringer, press **OFF** at the handset (or **MUTE** at the base) while the phone is ringing. You can still answer, or let the caller leave a message.

### 3-way conference calls

During an outside call, you can use both the handset and base (or two local handsets) to allow a three-way conversation.

While a call is in progress, others can press **PHONE** or **SPEAKER** to join the conference call. Others can press **OFF** (or **SPEAKER**) to drop out of the conference call, but the call will not be terminated until all sets hang up.

### Temporary tone dialing

If you have dial pulse (rotary) service, you can switch to touch tone dialing during a call by pressing **TOUCH TONE**. This can be useful if you need to send tone signals for access to answering systems or long-distance services.

*Telephone Operation*

## Intercom calls

### Intercom calls

The intercom allows conversation between the handset and base, or between handsets.

Press the **INTERCOM** button at a handset or at the base. Scroll down to select a station, or select **GLOBAL PAGE** to page all stations. Press **OK** to page the selected station.


At a handset, press **PHONE** to answer an intercom page. At the base, the phone will ring once, then answer the intercom page automatically.

When your intercom call is finished, press **OFF** at the handset (or **INTERCOM** at the base) to end the call.


### Handling incoming calls

The phone will beep if you receive an outside call during an intercom conversation.


- At the handset, press **PHONE** to terminate the intercom call and answer the incoming call.
- At the base, press **INTERCOM** to terminate the intercom call, then press **SPEAKERPHONE** to answer the incoming call.

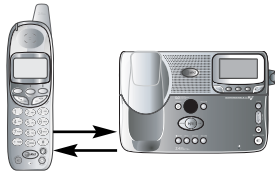


Press **INTERCOM**

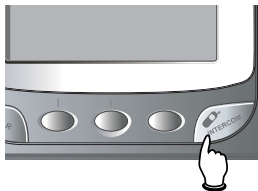


Select station to page

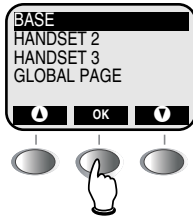


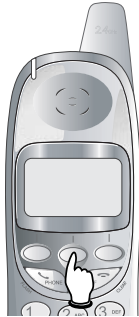


Select **MENU**

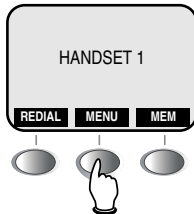


Select **HANDSET SETTINGS**

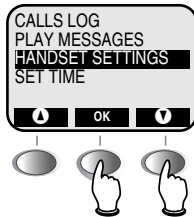

Scroll to choose desired item

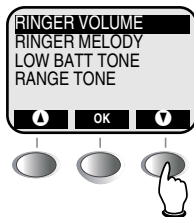

Press **OK** to select

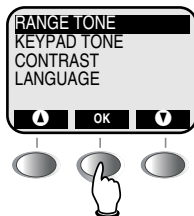

*Telephone Operation*

## Handset settings

### Ringer volume

At this menu you can set a default ring volume level (1-4), or turn the ringer off. Press the buttons to hear an example of each level. Press **OK** to save your selection.

### Ringer melody

This feature allows you to choose one of eight incoming call melodies. Press the buttons to hear an example of each. Press **OK** to save your selection.

### Low battery tone

The handset is factory programmed to alert you with a tone when the battery is low and needs recharging. Use the **ON/OFF** menu buttons to turn this feature on or off. Press **OK** to save your selection.

### Out-of-range tone

The handset is factory programmed to alert you with a tone when the handset is too far from the base. Use the **ON/OFF** menu buttons to turn this feature on or off. Press **OK** to save your selection.

### Keypad tone

The handset is factory programmed to beep at each keypress. Use the **ON/OFF** menu buttons to turn this feature on or off. Press **OK** to save your selection.


### Contrast

At this menu you can adjust screen contrast to one of 16 levels. Use the buttons to select the level you prefer. Press **OK** to save your selection.


### Language

At this menu you can select the language used in all menus and screen displays. Use the buttons to select English, Spanish or French. Press **OK** to save your selection.




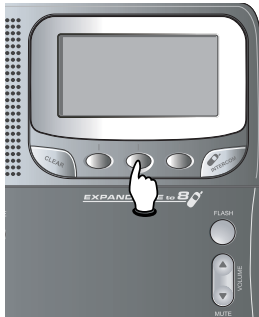


Select **MENU**

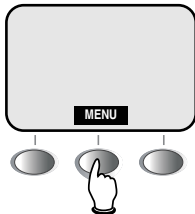


Select **BASE SETTINGS**

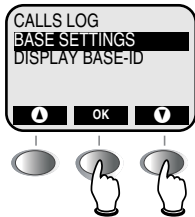

Scroll to choose desired item

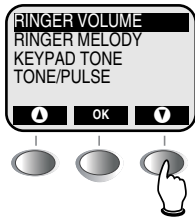

Press **OK** to select

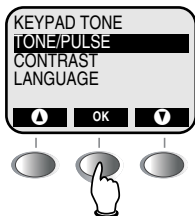

## Telephone Operation

### Base settings

#### Ringer volume

At this menu you can set a default ring volume level (1-6), or turn the ringer off. Press the **◀ ▶** buttons to hear an example of each level. Press **OK** to save your selection.

#### Ringer melody

This feature allows you to choose one of eight incoming call melodies. Press the **◀ ▶** buttons to hear an example of each. Press **OK** to save your selection.

#### Keypad tone

The handset is factory programmed to beep at each keypress. Use the **ON/OFF** menu buttons to turn this feature on or off. Press **OK** to save your selection.

#### Tone/pulse

Factory default setting is **TONE**. Change this to **PULSE** only if you do not have touch-tone dialing service. Press **OK** to save your selection.

#### Contrast

At this menu you can adjust screen contrast to one of 16 levels. Use the **◀ ▶** buttons to select the level you prefer. Press **OK** to save your selection.

#### Language

At this menu you can select the language used in all menus and screen displays. Use the **◀ ▶** buttons to select English, Spanish or French. Press **OK** to save your selection.

Telephone Operation

## Handset clock settings

### To set time

Follow steps at left to set the handset clock time. Use the keypad to enter four digits (i.e., 09:15), then press **AM/PM** to toggle the display between AM and PM. When the correct time is displayed, press **SAVE**.


**NOTE:** You can choose to set the time manually, or you can allow it to be set automatically with incoming Caller ID information. The time will be set automatically only if you subscribe to Caller ID service provided by your local telephone company (see page 5).

To set the answering system clock, see page 25.


### To turn clock on or off

The handset time display is optional. To turn it on or off, select **MENU**, press **▼** until **CLOCK MODE** is highlighted, then press **OK**.


Press **ON** or **OFF** buttons to enable or disable the clock display, then press **OK**.

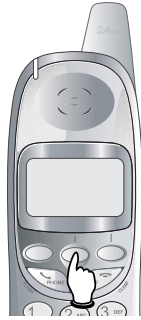


Select **MENU**

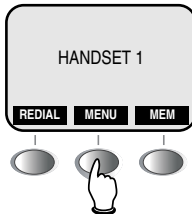


Select **SET TIME**

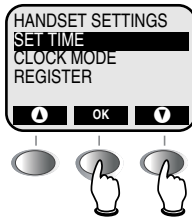

Enter time, press **AM/PM**, then **SAVE**

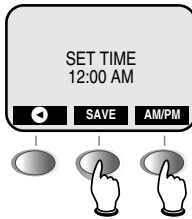

To turn clock on or off

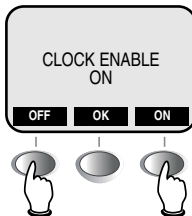



## Phonebook

### Memory capacity

---

The phonebook can store up to 50 entries. Each entry can contain a number up to 32 digits, and a name up to 16 letters long. A convenient search feature can help you find and dial numbers quickly (see page 19).


### Timeouts and error tones

---



If you pause for too long while making an entry the procedure will time out and you will have to begin again.

If all memory locations are in use, an error tone will sound when you attempt to enter a new number. This means the memory is full, and you will not be able to store a new number until you delete an existing one.

Enter number, then press **MEM**

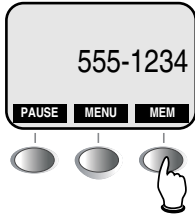

Enter name, then press **SAVE**

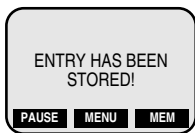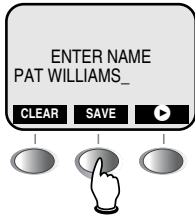

## Phonebooks

### New phonebook entries


#### To enter a number

Use the dial pad to enter up to 32 digits. When the number is complete, press **MEM**.

- Press **CLEAR** to erase numbers if you make a mistake.
- Press **PAUSE** to enter a 3-second dialing pause.

#### To enter a name

Press dial pad buttons once for the first letter, twice for the second, three times for the third. Continue for lower-case letters. To enter a number, continue pressing the button until the number appears.

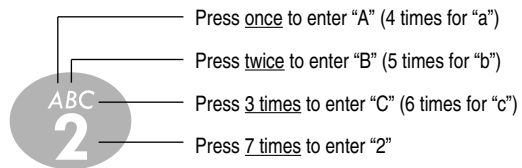





The cursor moves to the right when you press another dial pad button or the **▶** button.

- Press **CLEAR** to erase letters if you make a mistake.
- Press **1** repeatedly to enter an ampersand (&), apostrophe ('), comma (,), period (.), or digit (1).

#### Storing the entry

Press **SAVE** to store your new phonebook entry. To change it later, see page 20.

Press **MEM** to select phonebook

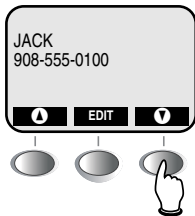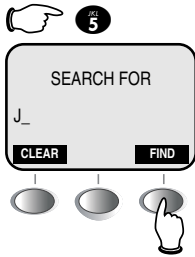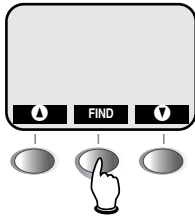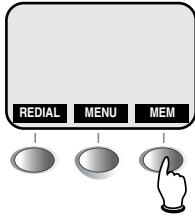

*Phonebooks*

## Phonebook search

You can use the up/down arrows to browse through the phonebook, or search to find a specific entry. You can press **CLEAR** at any time to exit the directory.

### To browse through the directory

To browse, press or to scroll through all entries one by one.

### To search alphabetically

To shorten your search, press **FIND**, then use the telephone dial pad to enter the first letter of a name. When you press **FIND**, the first name beginning with that letter will be displayed.

Press dial pad buttons once for the first letter, twice for the second, three times for the third, as shown on the previous page.


For example, press **5 (JKL)** once to find Jack, twice to find Kevin, or three times to find Linda.

### To call a displayed number


When you find the entry you want, press **PHONE** (or **SPEAKER**) to dial. Or press **EDIT** to modify the entry (see next page).

### Shortcut


Press at any time while a phonebook entry is displayed to jump immediately to the Search menu.

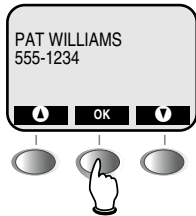


Press **DEL** to delete entry

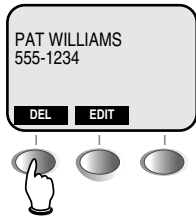

Press **EDIT** to change entry

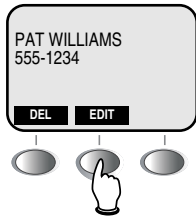

Select name or number to change

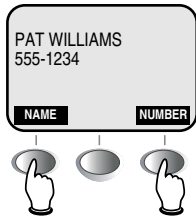

### Phonebooks

## To dial, edit or delete entries

### To dial a number

When any phonebook entry is displayed, press **PHONE** (or **SPEAKER**) to dial the displayed number.

### To delete an entry

Press **EDIT**, then **DEL** to display options:

- To delete only the displayed entry, press **THIS**.
- To delete all entries in the phonebook, press **ALL**. To confirm your choice, press **YES** at the confirmation screen, and all entries will be deleted.

Once deleted, entries cannot be recovered.

### To edit a listing

Press **EDIT** twice to modify the entry. You can change the name or number by following the steps on page 18.

# Caller ID Logs




Handset: 50 entries

Base: 50 entries



## How Caller ID works

If you subscribe to Caller ID service provided by your local phone company, information about each caller will be displayed after the first ring.

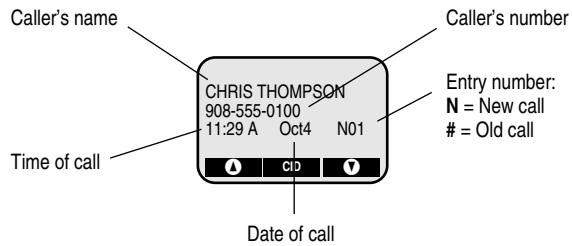

Your call log holds up to 50 entries. You can review the call log to find out who has called, return the call without dialing, or copy the caller's name and number into your phonebook.

Each log entry is numbered (number 1 is always the most recent). When the call log is full, the oldest entry is deleted to make room for new incoming call information.





If you answer a call before the information appears on the screen, it will not be saved in your call log.

## Handset and base call logs

There are separate Caller ID logs in the handset and the base. Each call log can store up to 50 entries. Each entry can contain a number up to 16 digits, and a name up to 16 letters long. The procedure for viewing, dialing, deleting and transferring call log entries to your phonebook is the same for both the handset and the base.

## About names

If the telephone number of the person calling matches a number in your phonebook, the name that appears on screen will match the name as you entered it into your phonebook. (Example: If "Christine Smith" calls, her name will appear as "Chris" if this is how you entered it into your phonebook.)

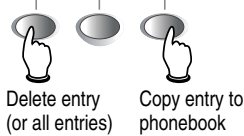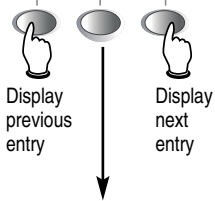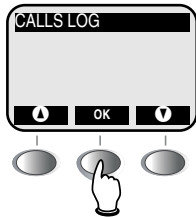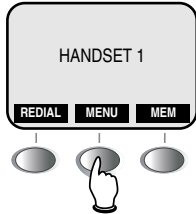

Caller ID Logs

**To review your call log**

**To review your call log**

The most recent call is displayed first. Use the arrow buttons to scroll through the list as shown at left.

**To return a call**

Press **PHONE** (or **SPEAKERPHONE** at the base) to call the person currently displayed (see next page for important dialing options).

**Other options**




Press **CID** to display other options:

**DEL:** Press to delete. Press **THIS** to delete the displayed entry. Press **ALL**, then **YES** to delete all entries in the call log.

**OPT#:** Press to view dialing options (see next page).

**SAVE (Handset only):** Press to copy the displayed name and number into your phonebook (see page 18).



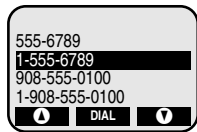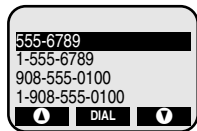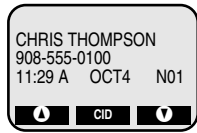

Select desired option,  
then press to dial

### Caller ID Logs


## To dial a call log entry

When any Caller ID screen is displayed, press **PHONE** (or **SPEAKERPHONE** at the base) to dial the number exactly as it appears on the screen.

### Dialing options

Caller ID numbers may appear with an area code that may not be required for local calls. If the number displayed is not in the correct format, you can change how it is dialed.

Select **CID**, then **OPT #** to see a list of dialing options. Press **PHONE** or **SPEAKERPHONE** to highlight the option you want, then press **DIAL**.

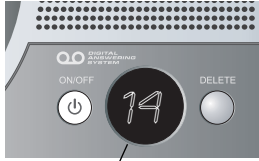

**Message counter**

Number of messages waiting (or, during playback, message number currently playing).



# Answering System Operation

## Message capacity

The answering system can record up to 99 messages, depending on how long each message is. Individual messages can be up to 4 minutes long, but total maximum recording time for all messages is 25 minutes. Messages will remain available for replay until you delete them.

## Handset access

In addition to the features described in this section, you can also use your handset to review or delete messages (see page 30).

Press to start or stop message playback (see page 29).

Press to turn answering system on or off.

Press to delete message (see page 29).

Press to repeat message; hold to slow playback (see page 29).


Press to skip message; hold to speed up playback (see page 29).

Press to set clock (see page 25).

Press to record memo (see page 31) or outgoing announcement (page 26).

Press repeatedly to hear feature options (see page 28).

Press to select or change a feature option (see page 28).

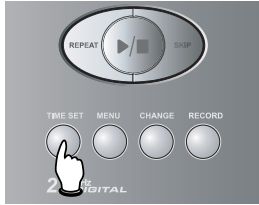

Answering System Operation

## Day and time announcements

### To set day and time

Before playing each message, the answering system announces the day and time the message was received.

Before using the answering system, you should follow the steps at left to set the day and time, so messages are dated correctly.

The system uses voice prompts to guide you. Each time you press **CHANGE**, the day, hour, minute or year advances by one. When you hear the correct setting, press **TIME SET** to move to the next setting.

### To check day and time

You can press **TIME SET** at any time to hear the current day and time without changing it.

- 1 **TIME SET**  
 "Friday, 10:07 am, 2003"  
*"To change clock, press Time Set"*
- 2 **TIME SET**  
 "Friday"
- 3 **CHANGE**  
 "Monday"  
 Press until correct day is spoken
- 4 **TIME SET**  
 "10 am"
- 5 **CHANGE**  
 "2 pm"  
 Press until correct hour is spoken
- 6 **TIME SET**  
 "07"
- 7 **CHANGE**  
 "26"  
 Press until correct minute is spoken
- 8 **TIME SET**  
 "2003"
- 9 **CHANGE**  
 "2004"  
 Press until correct year is spoken
- 10 **TIME SET**  
 "Monday, 2:26 pm, 2004"

**NOTE:** Press and hold **CHANGE** to advance the minute or year by 10.



Elapsed recording time (seconds). Press to stop recording.

**1** **MENU**

"Change announcement"

**2** **(Play/Stop)**

(Plays announcement previously recorded).

**Or**

**2** **RECORD**

"Now recording..."

**3** Speak into microphone.



Microphone ↑

**4** **(Play/Stop)**

(Announcement is played back).

*Answering System Operation*

## Outgoing announcements

Outgoing announcements are the messages callers hear when calls are answered by the answering system.

The phone is pre-programmed with an announcement that answers calls with **"Hello. Please leave a message after the tone."** You can use this announcement, or replace it with a recording of your own voice.

### To record your outgoing announcement


Press **MENU** until you hear "Change announcement." Then press **RECORD** and begin speaking after you hear "Now recording." Speak facing the telephone base from about 9 inches away.

Elapsed time (in seconds) will be shown in the message window as you record. You can record an announcement up to 90 seconds long. Announcements less than 3 seconds long will not be recorded.

### To delete your outgoing announcement

Press **MENU** until you hear "Change announcement," then press **PLAY/STOP** to begin playback. Press **DELETE** during playback to delete your announcement.

When your announcement is deleted, calls will be answered with the pre-programmed announcement described above.

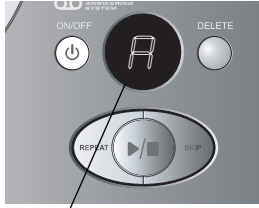

"A" is displayed when Announce Only is activated.

- 1 **MENU**  
 "Change Announce Only"
- 2 **CHANGE**  
 "Off"
- 3 **CHANGE**  
 "On"
- 4 (Play/Stop)  
 Beep (Option selected)

*Answering System Operation*

## Announce Only mode

In Announce Only mode, callers hear an announcement but cannot leave messages. This option is useful, for example, to notify callers that you will be away for an extended period and request that they call back after a certain date.


### To turn Announce Only on or off

Press **MENU** repeatedly until you hear "Change Announce Only." Then press **CHANGE** until you hear the option you want (On or Off). Press **PLAY/STOP** to store your selection and exit, or press **MENU** again to modify other features (see page 28).

### To record your outgoing announcement

When Announce Only is turned on, calls are answered with a pre-recorded announcement that says **"We're sorry, messages to this number cannot be accepted."** You can use this announcement, or replace it with a recording of your own voice.

After turning on the Announce Only feature, follow the steps on page 26 to record your announcement. Callers will hear this announcement only when the Announce Only feature is turned on. Otherwise they will hear the standard announcement asking them to leave a message.

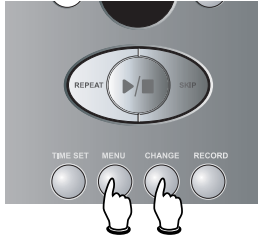

**1** **MENU**

Press until desired feature is heard(see list at right).

**2** **CHANGE**

Press until desired selection is heard.

**3** **MENU**

Press to set selection and **move** to next menu option.

**Or**

**(Play/Stop)**

Press to set selection and **exit** menu.

*Answering System Operation*

## Changing feature options

Menu features can be changed to customize how the answering system operates. Press **MENU** repeatedly to hear each feature. Press **CHANGE** when you hear the feature you want to modify.

**Feature options** (Default settings underlined>

System announces:	Feature description:
<b>"Change Announcement"</b> Options: [record announcement]	Record your outgoing announcement (see page 26).
<b>"Change remote access code"</b> Options: [enter 2-digit code] <u>19</u>	Enter a 2-digit number (10-99) for remote access from another phone (see page 33).
<b>"Change message alert"</b> Options: On / <u>Off</u>	When on, the telephone beeps every 10 seconds when you have new messages.
<b>"Change announce only"</b> Options: On / <u>Off</u>	When on, callers hear an announcement but cannot leave messages (see page 27).
<b>"Change call screening"</b> Options: <u>On</u> / Off	When on, you can hear callers leave messages, or answer the call.
<b>"Change number of rings"</b> Options: 2 / <u>4</u> / 6 /Toll Saver	Choose number of rings before the system answers a call. When Toll Saver is active, the system answers after 2 rings if you have new messages, and after 4 rings if you have no new messages.

**NOTE:** Press and hold **CHANGE** to advance the remote access code number by 10.

Number of messages waiting  
(or, during playback, message  
number currently playing)



Press **PLAY/STOP** to begin or  
end message playback.

- 1** **(Play/Stop)**  
**"You have [xx] new  
and [xx] old messages"**

Message playback begins. See  
options at right.

- 2** **(Play/Stop)**

Message playback ends.

**NOTE:** If "F" is flashing in  
the message window, memory is  
full. You will have to delete some  
messages before new ones can  
be received.

**NOTE:** New (unheard)  
messages cannot be deleted.

### Answering System Operation

## Message playback (at base)

Press **PLAY/STOP** to hear messages. The system  
announces the number of messages, then begins playback.

If you have new messages waiting, you will hear only the  
new messages (oldest first). If there are no new messages,  
the system will play back all messages (oldest first).

### Announcements



- When playback begins, you will hear the number of  
messages.
- Before each message, you will hear the day and time  
it was received.
- After the last message, you will hear "End of messages."  
If the system has less than 5 minutes of recording  
time left, you will hear time remaining.


### Options during playback

- Press **VOLUME** button to adjust speaker volume.
- Press **SKIP** to skip to next message (or hold down to  
speed up message playback).
- Press **REPEAT** to repeat message currently playing.  
Press twice to hear previous message. (Hold down  
to slow message playback).
- Press **DELETE** to delete message being played back.
- Press **PLAY/STOP** to stop playback.

### To delete all messages

To delete all messages, press and hold **DELETE** while  
the phone is idle (not during a call, or during message  
playback).

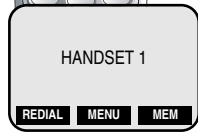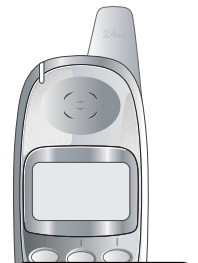

 "You have [xx] new and [xx] old messages"



Repeat Delete Skip

*Answering System Operation*

## Message playback (at handset)



Follow the steps at left to use your handset to review or delete voice messages.

### Listening options

When you select **PLAY MESSAGES** you will hear messages through the handset speakerphone. Press **SPEAKER** to transfer playback to the handset earpiece for private review of messages.

### Playback options


At the Messages screen, you have several options:

- Press **OFF** to end message playback.
- Press  to repeat the message currently playing (press twice to hear previous message).
- Press  to skip forward to the next message.
- Press **DEL** to delete the message currently playing.
- Press volume buttons on the side of the handset to adjust listening volume.

### Announcements

- When playback begins, you will hear the number of messages.
- Before each message, you will hear the day and time it was received.
- After the last message, you will hear "End of messages."



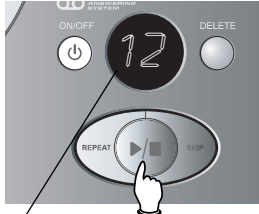

Elapsed recording time (seconds). Press to stop recording.

**1** **RECORD**  
 "Now recording..."

**2** Speak into microphone.



Microphone ↑

**3**   
 Beep (Memo has been recorded).

*Answering System Operation*

## Recording and playing memos

Memos are messages you record yourself. They are saved, played back and deleted exactly like incoming messages. You can record a memo as a reminder to yourself, or leave a message for someone else if others in your household use the answering system.

### To record a memo

Follow the steps at left to record a memo. Elapsed time (in seconds) is shown in the message window as you record. You can record a memo up to 4 minutes long. Memos less than 1 second long will not be recorded.

### To play back a memo

Press **PLAY/STOP** to hear messages and memos (see page 29 for other options).



**Message window**  
(Flashes when new messages are waiting).

### Answering System Operation

## Message window displays

The message window usually displays the total number of memos and incoming messages. See list below for explanation of other displays in this window.

### Message window displays

□	No messages waiting.
1-8	Current volume level while adjusting volume.
1-98	Number of messages/memos, or message currently playing (see page 29).
10-99	Current Remote Access Code while setting (see page 28).
1-99 (counting)	Elapsed time while recording a memo (see page 31) or announcement up to 90 seconds (page 26).
99 (flashing)	Memo recording exceeded maximum time of 99 seconds.
F (flashing)	Memory is full. Messages must be deleted before new messages can be received.
CL (flashing)	Clock needs to be set (see page 25).
A	Announce Only mode is on (see page 27).
--	System is answering a call, or being accessed remotely.
-- (flashing)	System is being programmed or initialized.
□n (or) □F	Displayed for 1 second when any answering system setting is turned on or off.

- 1** Dial your telephone number from any touch-tone phone.
- 2** When system answers, enter 2-digit Remote Access Code ("19" unless you have changed it).
- 3** Enter remote commands (see list at right).
- 4** Hang up to end call and save all undeleted messages.

*Answering System Operation*

**Remote access**

A two-digit security code is required to access your answering system from any touch-tone phone. This code is "19" by default; see page 28 to change it.

**Play messages**

# 2

Press to hear new messages (if none are new, all play back).

**Repeat or go back**

# 4

Press to repeat current message. Press twice (# 4 # 4) to hear previous message.

**Skip to next message**

# 6

Press to skip current message and advance to next message.

**Stop**

# 5

Press to stop any operation (stop playback, stop recording).

**Delete message**

# 9

Press during playback to delete current message.

**Review announcement**

# 7

Press to review current outgoing announcement.

**Record announcement**

\* 7 to begin recording  
# 5 to stop recording

Press \* 7, wait for beep, then begin speaking. Press # 5 to stop recording and hear playback of new announcement.

**Record memo**

\* 8 to record  
# 5 to stop recording

Press \* 8, wait for beep, then begin speaking. Press # 5 to stop recording.

**Turn system off**

# 0

Press to turn off answering system. Incoming calls will no longer be answered.

**Turn system on**

# 0

If off, system will answer after 10 rings. Enter your access code, then press # 0 to turn on.

**Help Menu**

# 1

Press to hear list of features & commands.

**Exit**

\* 0

End remote access call (or hang up).







**i** **NOTE:** If you pause for more than 10 seconds during remote access, you will hear a help menu listing all features & commands. If you issue no command for another 20 seconds, the call will end automatically.


Appendix

## Display screen status icons





### Handset status icons

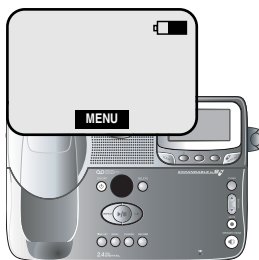



-  Phone in use (external call).
-  Phone in use (intercom call); flashes when handset is being paged.
-  Battery power level (see below).
-  Ringer off.
-  Answering system is receiving an incoming call.
- 1** Phone in use (external or intercom call); 1-8 = handsets, 0 = base.
- M** Microphone is muted.
- H** Call is on hold.
- R** Handset is not yet registered, or searching for base.
-  The battery is not rechargeable.



### Base status icons

-  Spare battery charging (animated display).
-  Ringer off.

### Battery power levels


 


-  Battery fully charged.
-  Approximately half power remaining.
-  Battery power is low; should be recharged soon.
-  (flashing) Battery power is very low and must be recharged.

Appendix


## Alert tones and indicator lights



### Alert tones

	<b>"Beep-Beep-Beep-Beep-Beep"</b> (5 quick beeps)	Handset battery is low. Place handset in base to charge the battery.
	<b>"Beep"</b> (Single beep)	Handset registration or programming command successfully completed.
	<b>"Beeeeeeeeeep"</b> (1 long beep)	The handset is out of range. Move closer to the base.
	<b>"Beeeeeeeeeep"</b> (1 long beep)	Error tone (current operation has been unsuccessful; try again).

### Indicator lights


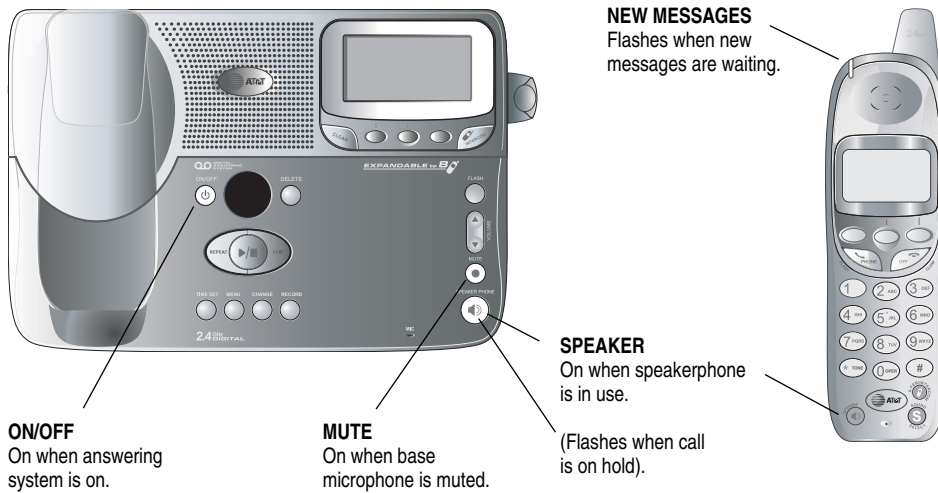


## Appendix

## Adding new handsets

Your telephone can accommodate up to eight cordless handsets. You can add new handsets (Model E250, sold separately) at any time, but each must be registered with the base before use.

Enter base ID, then press **OK**.

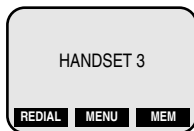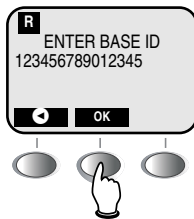

Before using a new handset, you must register it with the base. During registration, you must enter the 15-digit ID number of the telephone base. To find this number, go to the base, press **MENU**, scroll down to select **DISPLAY BASE ID**, then press **OK**.

Follow the instructions provided with your new handset to register it for use with your telephone.

The handsets provided with your telephone are automatically registered as Handsets 1 and 2. Additional handsets will be assigned numbers in the order they are registered (3, 4, etc.) up to a maximum of eight.



Handset 1



Handset 2



Handset 3



Appendix

## Charging spare batteries


Optional spare batteries (sold separately) can be kept charged in the base, for quick replacement when handset batteries become depleted. For best results, use AT&T AA rechargeable batteries (sku 26820).

In the event of a power failure, the charged batteries in the base will allow you to make and receive calls from the cordless handset for up to 2.5 hours.

Spare batteries require at least 24 hours to reach full charge.



Slide latch left to open battery drawer.

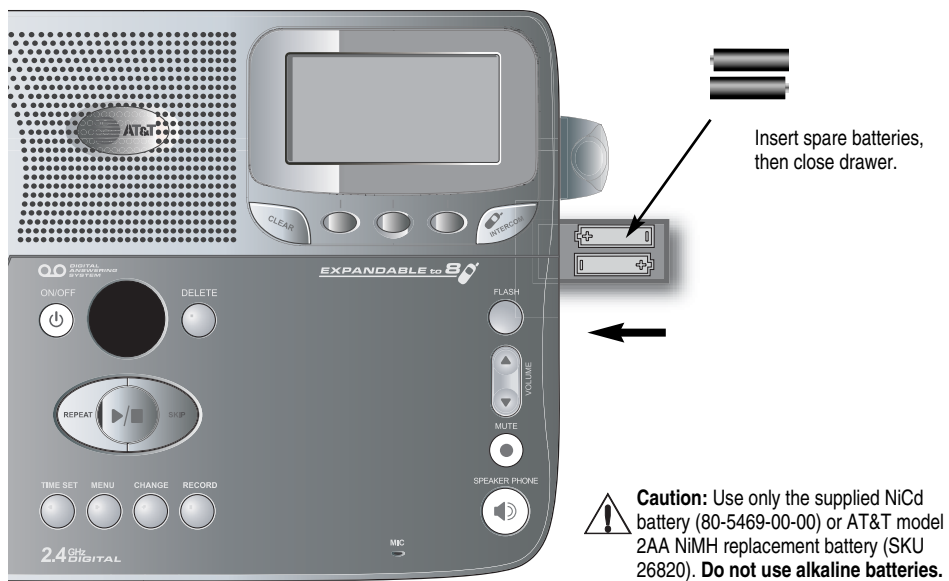

**Caution:** Use only the supplied NiCd battery (80-5469-00-00) or AT&T model 2AA NiMH replacement battery (SKU 26820). Do not use alkaline batteries.

## Appendix

## In case of difficulty

If you have difficulty with your phone, please try the suggestions below. For Customer Service, visit our web site at [www.telephones.att.com](http://www.telephones.att.com), or call 1 800 222-3111.

### "Check battery" or "Warning! Use Rechargeable Batteries Only" is displayed on screen

- Non-rechargeable batteries have been installed. They must be removed immediately and replaced with rechargeable NiMH batteries (see page 7).
- Rechargeable batteries have been installed but may be old or need to be replaced. Remove and re-install the batteries and use normally until fully discharged then let them fully recharge in the handset or base.
- If the above measures do not correct the problem, your batteries should be replaced (see page 7).

### Telephone does not work at all

- Make sure batteries are installed and charged correctly (see page 7).
- Make sure the AC adapter is plugged into an outlet not controlled by a wall switch.
- Make sure the telephone line cord is plugged firmly into the base unit and the modular jack.
- Make sure the base antenna is fully upright.
- If these suggestions do not work, unplug the base, remove and re-insert the batteries, then place the handset in the base to re-initialize.

### Phone does not ring

- Make sure the ringer is on (see pages 14-15).
- Make sure the telephone line cord and AC adapter are plugged in properly (see page 6).
- Make sure the base antenna is fully upright.
- Move the handset closer to the base.
- You might have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of them.

### If you hear noise or interference during a call

- Make sure the base antenna is fully upright.
- You may be out of range. Move closer to the base.
- Appliances plugged into the same circuit as the base can cause interference. Try moving the appliance or base to another outlet.
- The layout of your home or office might be limiting the operating range. Try moving the base to another location, preferably on an upper floor.
- If the buttons don't work, try placing the handset in the base for at least 15 seconds.
- Disconnect the base from the modular jack and plug in a corded telephone. If calls are still not clear, the problem is probably in your wiring or local service. Call your local telephone service company.



Appendix

## In case of difficulty

### If you lose a call while using the handset

- You were probably out of range. Move closer to the base. Before placing another call, set the handset in the base for at least 15 seconds.

### Incomplete messages

- If a caller leaves a very long message, part of it may be lost when the system disconnects the call after 4 minutes.
- If the caller pauses for more than 7 seconds, the system stops recording and disconnects the call.
- If the system's memory becomes full during a message, the system stops recording and disconnects the call.

### Difficulty hearing messages

- Press volume button to increase speaker volume.

### System does not answer after correct number of rings

- Make sure that the answering system is on.
- If Toll Saver is activated, the number of rings changes to two when you have new messages waiting (see page 28).
- In some cases, the system may be affected by the ringing system used by the local telephone company.
- If the memory is full or the system is off, the system will answer after 10 rings.

### "CL" appears in message window

- You need to reset the answering system clock (see page 25).

### System does not respond to remote commands

- Make sure to enter your Remote Access Code correctly (see page 33).
- Make sure you are calling from a touch-tone phone. When you dial a number, you should hear tones. If you hear clicks, the phone is not a touch-tone telephone and cannot activate the answering system.
- The answering system may not detect the Remote Access Code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- There may be noise or interference on the phone line you are using. Press dial-pad buttons firmly.

### Announcement message is not clear

- When you record your announcement, make sure you speak in a normal tone of voice, about 9 inches from the base.
- Make sure there is no "background" noise (TV, music, etc.) while you are recording.

## Appendix

**Index****A**

AC adapter, 6  
 Access code, 28, 33  
 Alert tones, 35  
 Answering calls, 10, 11  
 Answering system, 24  
   announce only, 27  
   delete messages, 29, 30  
   feature options, 28  
   handset access, 30  
   outgoing announcement, 26  
   memos, 31  
   message window, 32  
   play messages, 29, 30  
   remote access, 33  
   remote access code, 28, 33  
 Antenna, 7

**B**

Battery charging, 7, 37  
 Battery installation, 7  
 Belt clip, 9

**C**

Call logs, 21-23  
 Caller ID, 5, 21  
   add entries to phone directory, 22  
   delete entries, 22  
   dial entries, 22, 23  
 Call screening, 28  
 CID, 21  
 Conference calls, 12

**D**

Day/time, 25  
 Delete Call Log entries, 22  
 Delete redial entries, 10, 11  
 Dialing,  
   manual dialing, 10, 11  
   phonebook dialing, 20

**E**

Elapsed time, 26, 31  
 Ending calls, 10, 11  
 Error tones, 35

**F**

Flash (switchhook flash), 12

**H**

Hands-free use, 10, 11  
 Headphone, 9  
 Hold, 10, 11

**I**

Incoming call log, 21  
 Incoming calls, answering, 10, 11, 13  
 Incoming messages, 24  
 Indicator lights, 35  
 Intercom, 13

**L**

Last number redial, 10, 11  
 Low battery, 7

**M**

Making calls, 10, 11  
 Memos, 31  
 Menus, 2, 14-16  
 Message alert, 28  
 Messages, 24-33  
 Microphone, 26, 31  
 Mute, 10, 11

Appendix

## Index

### N

Names,  
    enter into phonebook, 18  
    search for, 19  
New, 36  
Number of rings before answer, 28

### O

On/off button, 24  
Operating range, 5  
Outgoing announcement, 26  
Out of range, 5, 14

### P

Paging, 13  
Phonebooks,  
    dial number, 20  
    edit entries, 20  
    name search, 19  
    new entries, 18  
Playback (messages), 29, 30  
Problems, 38

### Q

Quick reference guide, 2-3

### R

Receiving calls, 10, 11  
Recharging, 7, 37  
Redial, 10, 11  
Repeat, 29, 30  
Ring silencing, 12  
Ring tone options, 14, 15

### S

Search for name, 19  
Security codes, 28, 33  
Skip, 29, 30  
Spare batteries, 37  
Speakerphone, 10, 11

### T

Technical specifications, 42  
Time, 16, 25  
Timers,  
    recording announcement, 26  
    recording memo, 31  
Tones,  
    base tones & alerts, 35  
    handset tones & alerts, 35  
    send tones during call, 12  
Troubleshooting, 38

### V

Voice mail, 24-33  
Volume controls, 12

*Appendix***Technical specifications**

<b>RF Frequency Band (Handset to Base)</b>	2400 MHz — 2483.5 MHz
<b>RF Frequency Band (Base to Handset)</b>	2400 MHz — 2483.5 MHz
<b>Channels</b>	95
<b>Channel Spacing</b>	864 KHz
<b>Output Power</b>	3 dBm
<b>Operating Temperature</b>	32°F — 122°F 0°C — 50°C
<b>Base Unit Voltage (AC Voltage, 60Hz)</b>	96 — 127 Vrms
<b>Base Unit Voltage (AC Adapter Output)</b>	7 Vdc @900 mA
<b>Handset Voltage</b>	2 x 1.2V @800 mA

Appendix

## Remote access wallet card

Your package includes a handy wallet card to help you remember access commands you can use to control your answering system from any touch-tone telephone.

If you misplace this card, just clip and save the card below.

Cut along dotted line.



Call your phone number, then enter your 2-digit access code (preset to 19).

**Action**

**Remote Command**

Voice help menu .....	# 1	
Play messages .....	# 2	
Repeat message .....	# 4	
Skip message .....	# 6	
Stop .....	# 5	
Save messages .....		Hang up
Delete message .....	# 9	while message plays.

Fold here.

Review announcement .....	# 7	
Record announcement .....	* 7	Speak after beep.
	# 5	to stop.
Record memo .....	* 8	Speak after prompt.
	# 5	to stop.
End remote access call .....	* 0	(or hang up).
Turn system off .....	# 0	(enter again to turn on).
Turn system on .....		If off, system answers after 10 rings. Enter access code, then press # 0 to turn system on.

**2.4 GHz Cordless Telephone/Answering System E2600B**

Copyright © 2004 Advanced American Telephones. All Rights Reserved.  
AT&T and the Globe Design are trademarks of AT&T Corp.,  
licensed to Advanced American Telephones. Printed in China.



[www.telephones.att.com](http://www.telephones.att.com)

Copyright © 2004 Advanced American Telephones. All Rights Reserved.  
AT&T and the Globe Design are trademarks of AT&T Corp.,  
licensed to Advanced American Telephones. Printed in China. Issue 4 AT&T 06/04.  
91-5635-40-00