



Quick Start Guide

 
5.8 GHz Coded/ Cordless Telephone/ Answering System E5908

with Caller ID & Call Waiting




Installation & setup


After battery installation, place the cordless handset in the charger and allow to charge for at least 16 hours before use. You can keep the battery charged by returning the cordless handset to the charger after each use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about five hours depending on environmental conditions, and the standby time is approximately five days.




Press in and downward on the tab to open the battery compartment cover.

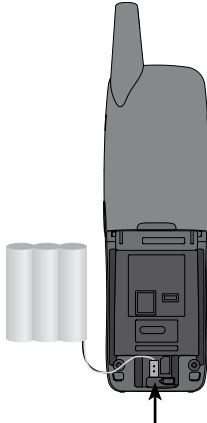

 
Plug the battery connector into the handset.



 Place the battery pack and wires in the compartment.





Slide battery compartment cover up until it clicks closed.

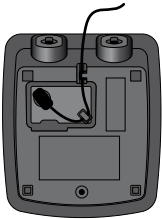

Plug power adapter into jack on underside of charger as shown, then plug into an electrical outlet not controlled by a wall switch.

  
Plug the large power adapter into an electrical outlet not controlled by a wall switch.



Plug long telephone line cord into telephone jack.



Place handset in charger for at least 16 hours before first use.

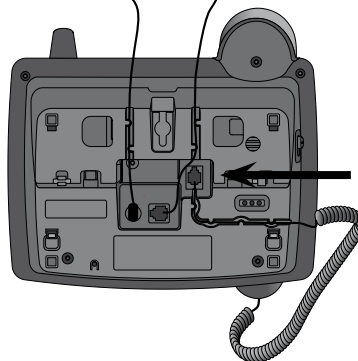

Plug handset cord into handset and jack at the bottom of the base.



Caution: Use only the supplied rechargeable battery pack or AT&T replacement battery model 3301 (SKU 91076. Part number 80-5071-00-00).

Quick reference guide

Cordless Handset

SELECT

Press to store a programming option (see page 10), or to store a directory entry in memory (see page 21).

CID (volume down)

When phone is idle, press **CID** to display Caller ID information (see page 29).

While entering names or phone numbers, press to delete last character entered. While programming, press to change menu item or value (see page 10).

During a call, press **CID** to adjust listening volume.

PHONE/FLASH

Press to make or answer a call (see page 14).

During a call, press to receive an incoming call if Call Waiting is activated (see page 16).

HOLD

Press to place a call on hold. Press again to resume your call (see page 16).

MENU/CHAN

Press to customize the handset's operation (see page 10).

During a call, press to switch to another channel if there is interference.

DIR (volume up)

When phone is idle, press **DIR** to display Directory entries (see page 26).

While entering letters in names, press to advance or press twice to enter space.

While programming, press to change menu item or value (see page 10).

During a call, press **DIR** to adjust listening volume.

OFF/CLEAR

During a call, press to hang up.

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

INT/DELETE

While phone is idle, press to page base (see page 18) or press and hold to delete all Caller ID entries (see page 33).

While a Caller ID entry is displayed, press to delete displayed entry (see page 32).

REDIAL/PAUSE

Before dialing, press to display last number called (see page 14).

While dialing or entering numbers into your directory, press to insert a four-second dialing pause (see page 25).



NOTE: For more information, please refer to the user's manual.

Quick reference guide

Telephone Base

RINGER VOLUME: Set switch on side of base (Off, Low, High).

CONTRAST: Press to adjust screen contrast.

INDICATOR LIGHTS:
See User Manual page 44.



- **CLEAR:** While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.
- **CID:** Press when phone is idle to display Caller ID information. While entering numbers or letters, press to delete last character entered.
- **SELECT:** Press to store a programming option, or to store a directory entry in memory.
- **DIR:** Press when phone is idle to display directory entries. While entering or modifying names, press to advance cursor.
- **DISP DIAL:** Press to dial number currently displayed.

- **INTERCOM/CID DEL:** Press to delete displayed Caller ID entry. While phone is idle, press to page handset, or press and hold to delete all Caller ID entries.
- **MENU:** Press to customize the telephone's operation.
- **FLASH:** During a call, press to receive an incoming call if Call Waiting is activated.
- **REDIAL/PAUSE:** Before dialing any numbers, press to display last number called.
While dialing or entering numbers into your directory, press to insert a 4-second dialing pause.
- **CLOCK:** Press to review or set clock.
- **SETUP:** Press repeatedly to hear setup options.
- **ANNC:** Press to review or record announcement; press again to quit.
- **RECORD:** Press to record a memo or after pressing **ANNC** to record an outgoing announcement.
- **PLAY/STOP:** Press to start or stop message playback.
- **DELETE:** Press to delete message currently playing; hold to delete all old messages.
- **ANSWER ON:** Press to turn answering system on or off.
- **REPEAT:** Press to repeat message; press **twice** to play previous message.
- **SKIP:** Press to skip message.

- **HOLD:** Press to place call on hold. Press again to resume call.
- **VOLUME:** During a call, press **▲** or **▼** to adjust listening volume.
- **MUTE:** Press to silence microphone; press again to resume your conversation.
- **SPEAKER:** Press to turn speakerphone on or off (begin or end a call).