



Quick start guide

E598-1

5.8 GHz expansion handset for use with AT&T models E5901/ E5902B/E5903B/ E5911/ E5912B/E5913B/E5914B/ E5921/E5922B/E5923B/ E5924B/E6001/E6002B/ E6012B/E6013B/E6014B/ E3813B

 


Battery installation & charging

After battery installation, the battery may have enough charge to allow you to make a short call. For best performance, place the handset in the charger or telephone base and allow it to charge for 16 hours before use.

You can keep the battery charged by returning the handset to the charger or the telephone base after each use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about eight hours depending on environmental conditions, and the standby time when idle is approximately five days.

1. Plug the small end of the smaller power adapter into the jack on the underside of charger, then route the cord through the slot as shown.
2. Plug the large end of the smaller power adapter into an electrical outlet.

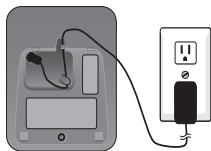

3. Plug the battery securely into the plug inside the handset battery compartment, matching the color-coded label.



4. Place the battery and wires neatly inside the compartment.



5. Slide battery compartment cover towards the center until it clicks closed.



6. The battery may have enough charge to allow you to make a short call. For best performance, place handset in the telephone base or charger to charge for at least 16 hours before first use.



Low battery indicator
Return handset to the telephone base or charger to recharge when this symbol flashes. (Handset will beep when battery is low.)



To replace the battery, press in and downward on the tab to open the battery compartment cover. Then lift out the old battery and disconnect. Follow the instructions on this page to install and charge the new battery.



Caution: Use only the supplied rechargeable battery or AT&T replacement battery model 27910 (part number 89-0099-00-00). To purchase a replacement battery, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada dial **1 (866) 288-4268**.

Adding and registering handsets

Before using a new E598-1 handset, you must register it with the E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6001/E6002B/E6012B/E6013B/E6014B/E3813B telephone base (purchased separately). The E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6012B/E6013B/E6014B/E3813B telephone can accommodate up to four cordless handsets.

- The handset provided with the E5901/E5911/E5921/E6001 is automatically registered as handset 1. Additional handsets will be assigned numbers in the order they are registered (handset 2, handset 3, or handset 4). You can register a maximum of four handsets.
- The E5902B/E5912B/E5922B/E6002B/E6012B has two handsets automatically registered as handset 1 and 2. You can register two additional handsets, which will be assigned number 3 and 4.
- The E5903B/E5913B/E5923B/E6013B/E3813B has three handsets automatically registered as handset 1, 2 and 3. You can register one additional handset, which will be assigned number 4.
- The E5904B/E5914/E5924B/E6014B has four pre-registered handsets, so you cannot register any additional handset to it.

Before using a new E598-1 handset, you must register it with the telephone base. Each handset must be registered separately.

To register a handset to your telephone base



NOT REGISTERED




PRESS HANDSET LOC
4 SEC ON BASE

- When first purchased, all optional accessory handsets show **NOT REGISTERED** on the screen. The new handset may need to be charged for five minutes before registering to the telephone base.
- Make sure your handset battery is properly installed and charged (page 1).

Adding and registering handsets



- Place the unregistered handset into the telephone base. After a few seconds **PRESS HNDST LOC 4 SEC ON BASE** will be shown on the screen.
- Press and hold  **HANDSET LOCATOR** on the main telephone base until the **IN USE** light comes on (about four seconds), then release the button.
- The handset will show **PLEASE WAIT...** for a while.
- The handset will show **HS X REGISTERED** and will beep if the registration was successful.






NOTES:

 
1. If you are on a call, using the call log or directory, or another telephone phones on at the same line, you cannot register a handset.
2. If the registration is not successful, the display will show **NOT REGISTERED**. Reset the handset by lifting the handset out of the telephone base and then place the handset back in the telephone base. Now try the registration process again.

Replacing a handset

If you are replacing a handset on a system that has the maximum number of registered handsets (four) or wish to change the assigned handset number of your registered handsets, you must first follow the below steps to de-register the handsets, then register all handsets again (page 2-3).

To de-register all handsets

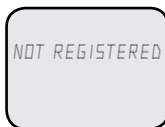

- Press and hold  **HANDSET LOCATOR** on the main telephone base E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6001/6002B/E6012B/E6013B/E6014B/E3813B until the IN USE light starts to turn on then flash (about 10 seconds), then release the  **HANDSET LOCATOR** button.
- Press and release  **HANDSET LOCATOR** again. The **IN USE** light will turn off and in a few seconds, all handsets will be de-registered.
- All handsets will show **NOT REGISTERED** if de-registration was successful.



- To re-register the handset to the telephone base, follow the registration instructions on pages 2-3.



 
NOTES:

1. If the de-registration process was not successful, you may need to reset the system and try again. To reset: pick up any registered handset and press the  **PHONE/FLASH** button, then press the  **OFF/CLEAR** button and place the handset back into the telephone base.
2. You can only de-register handsets when the handsets and the telephone base are not being used.

Quick reference guide

For complete instructions, please refer to the manual provided with your E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6001/E6002B/E6012B/E6013B/E6014B/E3813B telephone. If you are unable to find your manual, you may read and/or download the manual at www.telephones.att.com.

Handset

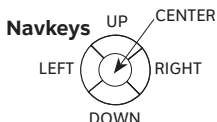

CID

Press to display caller ID information.

PHONE/FLASH

Press to make or answer a call. During a call, press to receive an incoming call if call waiting is activated.

MUTE/DELETE

While on a call, press to mute microphone. While reviewing the call log, press to delete an individual entry, or press and hold to clear the caller ID log. While predialing, press to delete digits from a string.

SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use.

MENU/SELECT

Press **MENU/SELECT** to display menu, or to select a highlighted item from menu or save an entry. Press or to scroll up or down while in menus. While entering names or numbers, press or to move the cursor to the left or right.

DIR

Press to display directory entries.

OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

REDIAL/PAUSE

Press to view redial memory. While entering numbers, press and hold to insert a dialing pause.

INT

Press to initiate an intercom conversation or transfer a call.





www.telephones.att.com