



Quick start guide

TL72108/TL72208/

TL72308/TL72408

5.8 GHz cordless

telephone/answering system

with caller ID/call waiting



# Installation preparation

You must install and charge the handset battery before using the cordless handset.



See page 2  
for easy instructions.

If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack (see page 2). The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at **[www.telephones.att.com](http://www.telephones.att.com)** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

## **Avoid placing the telephone base too close to:**

 
- Communication devices such as: television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

# Telephone base and charger installation

If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone lines, you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.


Install the telephone base as shown below.

1. Plug the small end of the larger power adapter into the power jack at the bottom of the telephone base.

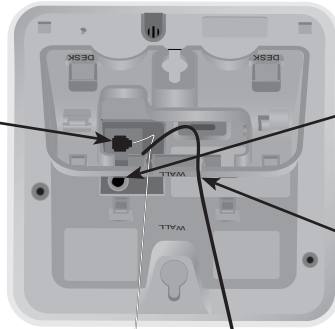

2. Plug one end of the telephone line cord into the telephone jack at the bottom of the telephone base.

 3. Route cords through slots.

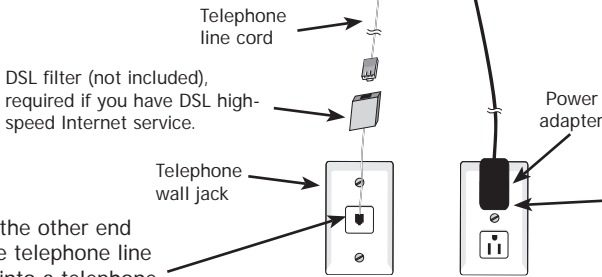


5. Plug the other end of the telephone line cord into a telephone jack.

4. Plug the large end of the larger power adapter into a power outlet not controlled by a wall switch.

## Charger installation

 1. Plug the small end of the smaller power adapter into the jack on the underside of the charger, then route the cord through the slot as shown.

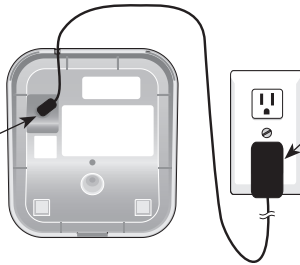

2. Plug the large end of the smaller power adapter into a power outlet not controlled by a wall switch.

## IMPORTANT INFORMATION

1. Use only the power adapter supplied with this product. To order a replacement power adapter, visit our website at [www.telephones.att.com](http://www.telephones.att.com), or call **1 (800) 222-3111**. In Canada dial **1 (866) 288-4268**.
2. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.



# Quick reference guide - handset

## CHARGE

On when the handset is charging in the telephone base or charger.

## CID

Press to display caller ID information.

## PHONE/FLASH

Press to make or answer a call.  
During a call, press to receive an incoming call if call waiting is activated.

## REDIAL/PAUSE

Press to view redial memory.  
While entering numbers, press and hold to insert a dialing pause.

## MUTE/REMOVE

During a call, press to mute microphone.  
While reviewing the caller ID history, press to delete an individual entry, or press and hold to clear the caller ID history. While predialing, press to delete digits.

## SPEAKER

Press to turn on the handset speakerphone.  
Press again to resume normal handset use.



Press or to scroll up or down while in menus.  
While entering names or numbers, press or to move the cursor to the left or right.

## MENU/SELECT

Press to enter the menu.  
While in the menu, press to select an item or save an entry or setting.

## DIR

Press to display directory entries.

## VOLUME ▼▲

Press the volume key on the side of the handset to adjust listening volume.  
Each press of the button increases or decreases the volume.

## OFF/CLEAR

During a call, press to hang up.  
While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

## INT

Press to begin an intercom conversation or to transfer a call.

## Feature menu

The > symbol shows a highlighted menu item.



## Feature menu

DIRECTORY  
CALL LOG  
RINGER VOLUME  
RINGER TONE  
KEY TONE  
LANGUAGE  
CLR VOICE MAIL

## Using menus

Press or to scroll through menu items.

Press **MENU/SELECT** to select or modify a highlighted item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.





[www.telephones.att.com](http://www.telephones.att.com)