


Quick reference guide


ENTER
 Press to scroll up, down, left or right while in menus.
 Press to display a menu, select a displayed item from the menu, or save an entry.



CALL HISTORY
 Press to display caller ID information.

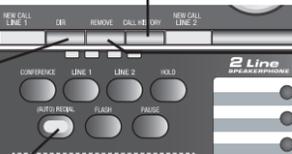

DIR
 Press to store or display directory entries.

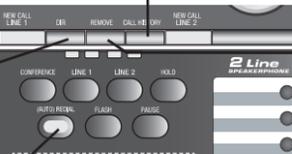

(AUTO) REDIAL
 Press to activate auto-redial.



Dial pad keys
 Press to start a quick name search while in the directory.



LOWER
 Press to dial the telephone number stored in the lower locations of the one-touch keys.



Quick reference guide

NEW CALL LINE 1, LINE 2
 Indicates new calls and/or voice messages for line 1 and line 2.



LINE 1, LINE 2
 Press, then lift handset to make or answer a call on line 1 or 2.



 
CONFERENCE
 Press to enter a three-way conference call.




FLASH
 During a call, press to receive an incoming call if call waiting is activated.




HOLD
 Press to place a call on hold.




PAUSE
 Press to insert a pause in the dialing sequence of a number stored in the memory.

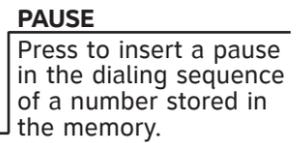

 
SPEAKER
 Press to turn the base speakerphone on or off.




MUTE
 Press to silence the microphone; press again to resume the telephone conversation.

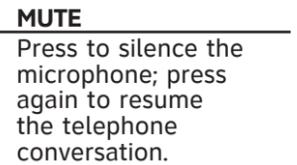

HEADSET
 Press to activate the headset.

 

VOLUME
 During a call, press to adjust the listening volume. While the telephone is not in use, press to adjust ringer volume.

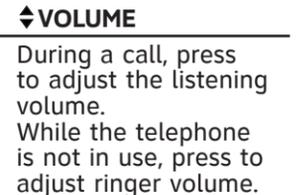


Proud Sponsor

Quick start guide

993
Two-line speakerphone with caller ID/call waiting



Proud Sponsor

www.telephones.att.com



For customer service or product information, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

© 2008-2009 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219. Printed in China. Issue 7 AT&T 09/09

Telephone installation


1. Attach the mounting bracket.

If the mounting bracket is not already attached, slide the tabs into the holes as shown. Snap the mounting bracket onto the base.




2. Connect the telephone line cord(s) to the telephone and the modular wall jack(s).

If there is a single two-line modular wall jack, use only the black telephone line cord (4-conductor). Plug one end into the jack labeled **L1** or **L1/L2** on the back of the telephone. Plug the other end into the wall jack. Make sure the telephone line cord snaps firmly into place at both ends.

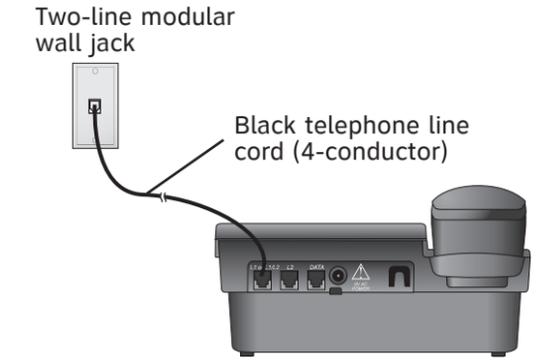

Telephone installation

If there are two one-line wall jacks, use both telephone line cords. Insert one end of the clear telephone line cord into the jack labeled **L1** or **L1/L2** on the back of the telephone. Plug the other end into the modular wall jack for Line 1. Insert one end of the black telephone line cord into the jack on the back of the telephone labeled **L2**. Then, plug the other end into the modular wall jack for Line 2. Make sure the telephone line cords snap firmly into place at both ends.

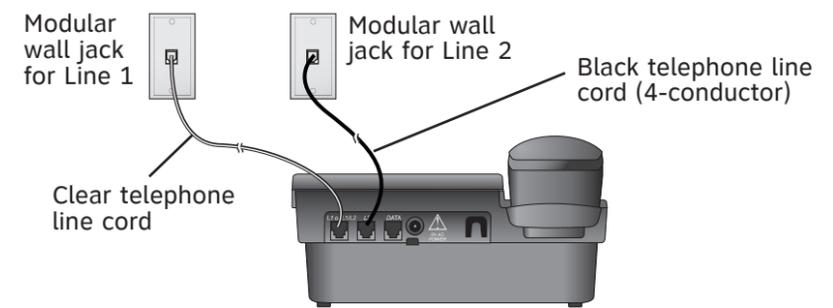

3. Connect the handset to the telephone.


Plug the coiled handset cord into the handset jack on the left side of the telephone. Plug the other end of the coiled handset cord into the handset, then hang up.



Telephone installation

4. Connect the power adapter.

Thread the power adapter cord behind the slot at the back of the telephone base. Then plug the smaller end of the power adapter into the jack labeled **9V AC POWER** on the back of the telephone. Plug the power adapter into a standard electrical outlet not controlled by a wall switch.

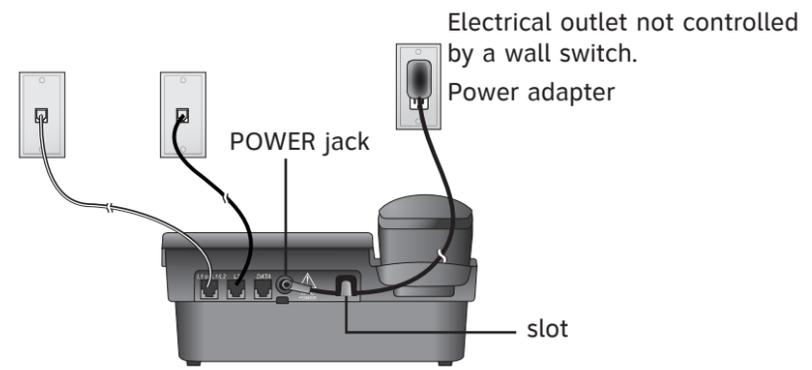


5. Check for a dial tone.

Press **LINE 1**, then lift the handset or press **SPEAKER** and listen for a dial tone. Then press **LINE 2** and listen for a dial tone.


6. Confirm Lines 1 and 2.

Press **LINE 1** and dial one of the telephone numbers. If there is a busy signal, line 1 is the number you called. If line 2 rings, line 2 is the number you called.

Menu operation

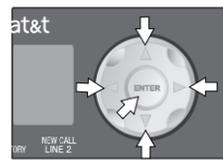

Feature setup, memory programming and a few individual feature operations for the 993 use the menus shown in the screen display. Use the navigation buttons (◀, ▶, ▲, ▼, **ENTER**) to begin, end and move through menu operations (for example, **FEATURE SETUP**).

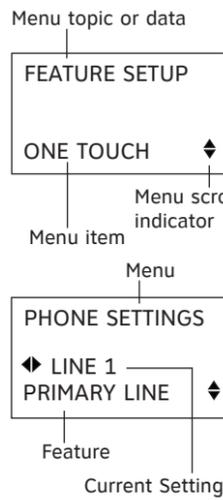

1. Press **ENTER** to activate a menu operation. The first menu item for this topic or data will appear in line four of the screen.
2. When ◀ is displayed on screen, press ▲ or ▼ repeatedly to move through the menu.
3. Press **ENTER** to choose the menu item currently displayed. This may be a lower level menu, an action, or a feature settings screen.
4. When ▶ is displayed on screen, press ◀ or ▶ to scroll through setting options.
5. Press ▼ or **ENTER** to store the current setting and show the next option for the feature currently displayed. When you successfully change a setting, there is a high pitch tone to indicate confirmation.
6. To return to the main menu, press ▲ or ▼ until the screen displays **MAIN MENU** and then press **ENTER**.
7. To exit **FEATURE SETUP**, press and hold ENTER.

NOTES:

1. If you do not press a key to continue menu operations within approximately 30 seconds, the telephone automatically exits the menu.
2. If there is a low pitch (error) tone, repeat the steps to program the feature.