



Quick start guide

**TL74108/TL74208/TL74308/
TL74408/TL74258/TL74358/
TL74458**

**5.8 GHz corded/cordless
telephone/answering system with
caller ID/call waiting**



Quick reference guide - handset

CHARGE indicator

On when the handset is in the charger.

CID

Press to display the caller ID information.

PHONE/FLASH

Press to make or answer a call.
During a call, press to receive an incoming call if call waiting is activated.

REDIAL/PAUSE

Press to view the redial memory.
While entering numbers, press and hold to insert a dialing pause.

MUTE/REMOVE

During a call, press to mute the microphone.
While reviewing the caller ID history, press to delete an individual entry, or press and hold to clear the caller ID history. While predialing, press to delete digits.

SPEAKER

Press to turn on the handset speakerphone.
Press again to resume normal handset use.



Press or to scroll up or down while in menus. While entering names or numbers, press or to move the cursor, where the next character will appear, to the left or right.

MENU/SELECT

Press to enter the menu. While in the menu, press to select an item or save an entry or setting.

DIR

Press to display the directory.

VOLUME ▼▲


While on a call, press the button located on the side of the handset to adjust listening volume. When the handset is not in use, press to adjust the ringer volume.

OFF/CLEAR

During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.


INT

Press to begin an intercom conversation or to transfer a call.

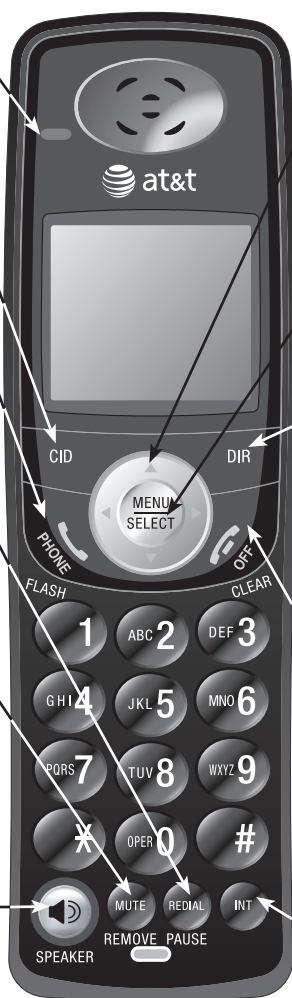

Feature menu

 The > symbol highlights a menu item.



Feature menu

DIRECTORY
CALL LOG
RINGER VOLUME
RINGER TONE
KEY TONE
LANGUAGE
CLR VOICE MAIL

Using menus

Press or to scroll through menu items.

Press **MENU/SELECT** to select or modify a highlighted item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.



www.telephones.att.com