




*Quick Start Guide*

**5.8 GHz Cordless  
Speakerphone/  
Answering System E5965C**

---


**with Caller ID & Call Waiting**

---

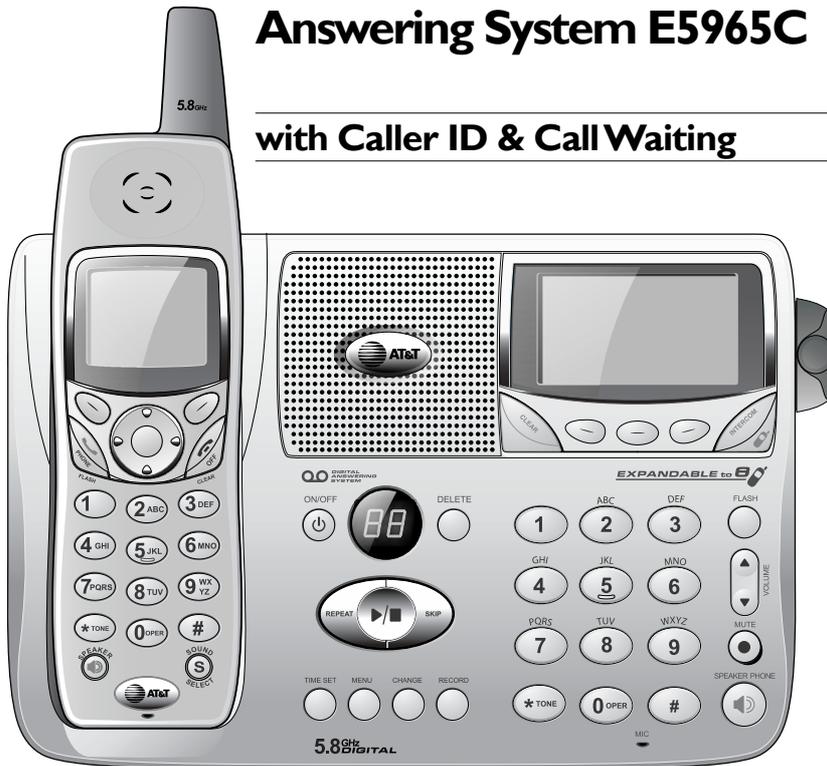


## Installation and setup

Connect the base and install batteries as shown below. After installation, place the handset in the base and allow the battery to charge for 12 hours before use. You can keep the battery charged by returning the handset to the base after each use.

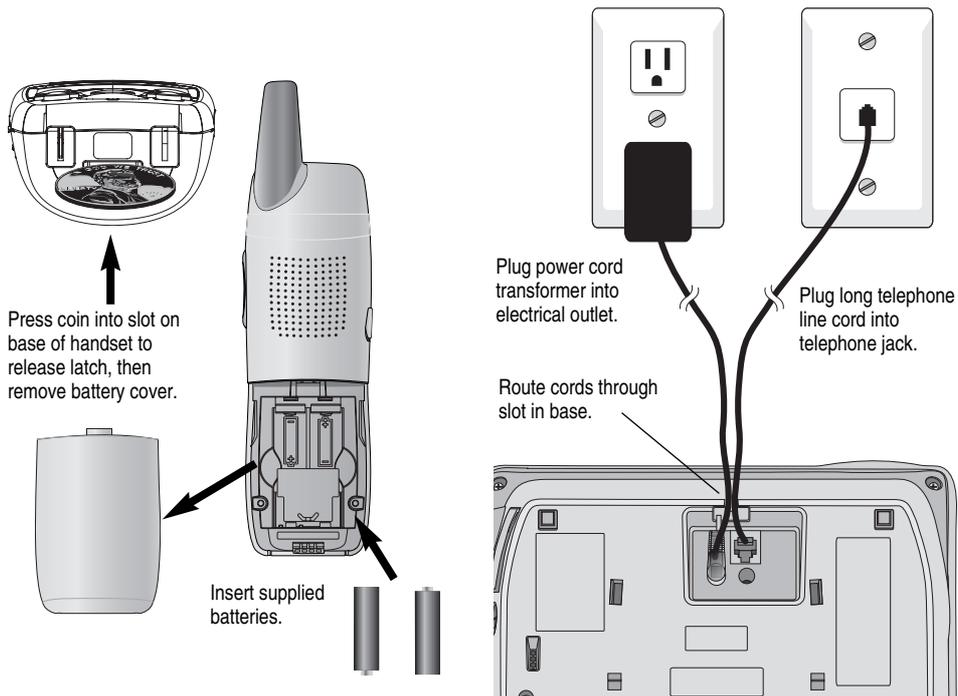


### To replace battery cover

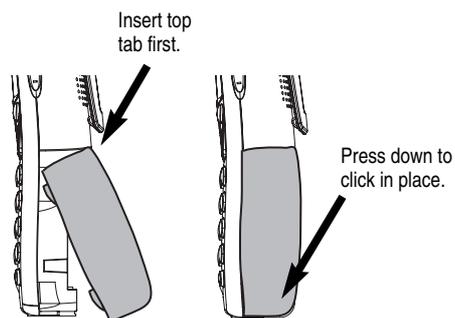

**Caution:** Use only the supplied NiMH battery (80-5461-00-00) or AT&T model 2AA NiMH replacement battery (SKU 26820). **Do not use alkaline batteries.**

Place handset in base to charge for 12 hours before first use.

Rotate antenna to fully upright position.

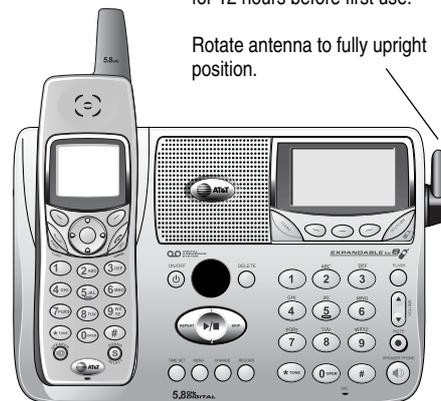

## Quick reference guide

### Handset

#### Softkeys

Press a softkey to select a menu item displayed just above the key.


#### Phone/Flash

Press to begin a call, then dial a number.

During a call, press to receive an incoming call, if Call Waiting is activated.

#### Speaker

Press to activate handset speaker-phone. Press again to switch call back to earpiece.

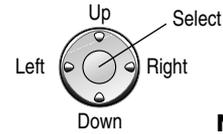

#### NavKey

Press center button to display menus. Press NavKey buttons to navigate through menus. Press center button to select menu item highlighted.

#### Off/Cancel

During a call, press to hang up.

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

#### Sound Select


Press to customize speaker sound for clear speakerphone conversations.




### Main menu



### Sounds & Alerts menu

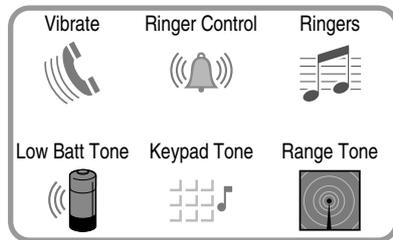


### Settings menu

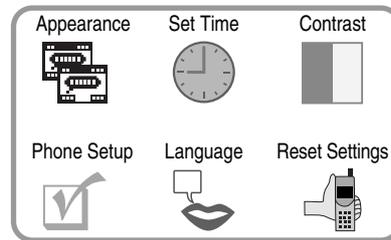

## Quick reference guide

### Base/Speakerphone

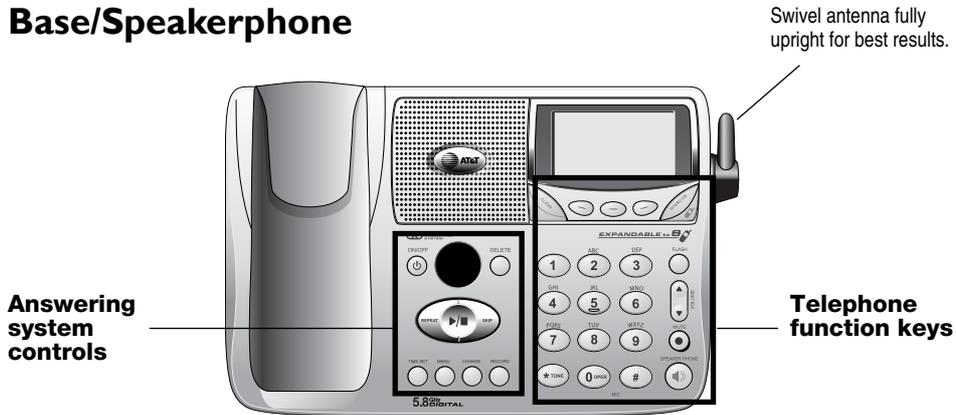

#### Telephone function keys

- SOFTKEYS** .....Press to select menu item displayed just above the key.
- CLEAR** .....Press to cancel an operation, back up to the previous menu, or exit the menu display.
- INTERCOM** .....Press to transfer a call or initiate an intercom conversation.
- FLASH** .....During a call, press to receive an incoming call, if Call Waiting is activated.
- VOLUME** .....Press to adjust speakerphone listening volume.
- MUTE** .....Press to silence microphone; press again to resume.
- SPEAKERPHONE** ..Press to turn speakerphone on or off (begin or end a call).



#### Answering system controls

- Press to repeat message.
- Press to skip to next message.
- Press twice to hear previous message.



Press to play or stop playing messages.

- ON/OFF** .....Press to turn answering system on or off.
- DELETE** .....Press to delete message currently playing.
- TIME SET** .....Press to set the answering system clock.
- MENU** .....Press to review or change answering system options.
- CHANGE** .....Press to change a menu option.
- RECORD** .....Press to record a memo or outgoing announcement.