



User Manual

2.4 GHz Cordless Telephone E2116

with Caller ID & Call Waiting



Congratulations on your purchase
of this AT&T product.
Before using this telephone system, **you must**
read Important Safety Instructions
on pages 34 to 36 of this manual.

NEED HELP?

Our representatives are here
to help you with any questions concerning the
operation of this product, available accessories,
or any other related issues.

Call Toll Free
1 (800) 222-3111
In Canada, Call
1 (866) 288-4268
or visit our website at
www.telephones.att.com

Model No.: AT&T E2116
Product Name: 2.4 GHz Cordless Telephone
Serial No.: SN: _____
(found on the bottom of the telephone base)
Purchase Date: _____
Place of Purchase: _____

IMPORTANT

Information about Caller ID with Call Waiting

This product has a Caller ID with Call Waiting feature that works with service from your local phone service provider.

Caller ID with Call Waiting lets you see who is calling before you answer the phone, even when you're on another call.

You may need to change your phone service to use this feature. Contact your phone service provider if:

- You have both Caller ID and Call Waiting, but as separate services (you may need combined service).
- You have only Caller ID service, or only Call Waiting service.
- You don't subscribe to any Caller ID or Call Waiting services.

You can use this product with regular Caller ID service, and you can use this product's other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service.

There are fees for Caller ID services, and they may not be available in all areas.

Depending on your service, you may see the caller's number, or the caller's name and number. This product can provide information only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment. The time and date are sent by the service provider along with the call information.

**You must install and
charge the battery before
using the telephone.**

STOP!

**See page 7
for easy instructions.**

For customer service or product
information, visit our web site at

www.telephones.att.com

or call 1-800-222-3111.

In Canada, call 1-866-288-4268.



CAUTION: To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully:

- Use only Replacement Battery 3301 (SKU 91076. Part Number 80-5071-00-00).
- Do not dispose of the battery in a fire. Like other batteries of this type, it could explode if burned. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit, do not allow conductive materials such as rings, bracelets, or keys to touch the battery. The battery or conductor may overheat and cause harm.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Observe proper polarity orientation between the battery and battery charger.

Do not disassemble your telephone. There are no user-serviceable parts inside. Refer for servicing to qualified service personnel.

User Manual

2.4 GHz Cordless Telephone E2116

with Caller ID & Call Waiting



Table of contents

Getting Started

Quick reference guide	2
Parts checklist	4
Before you begin	5
Telephone base installation	6
Battery installation & charging	7
Wall mounting	8
Belt clip & optional headset	9

Telephone Operation

Cordless handset programming	10
Basic cordless handset operation ..	12
Base operation	13
Options while on calls	14

Directory

Directory	15
Speed dialing	16
Entering names into directory	17
Entering numbers into directory ...	18
Directory search	19
Changing directory entries	20

Caller ID Operation


Caller ID operation	21
To review your call log	23
To dial a call log entry	24
To delete call log entries	25
To add entries to phone directory ..	26

Appendix

Display screen messages, lights and tones	27
Troubleshooting	29
Important safety instructions	34
FCC Part 68 and ACTA	37
FCC Part 15	38
Limited warranty	39
Technical specifications	42
Index	43

Quick reference guide

Cordless Handset

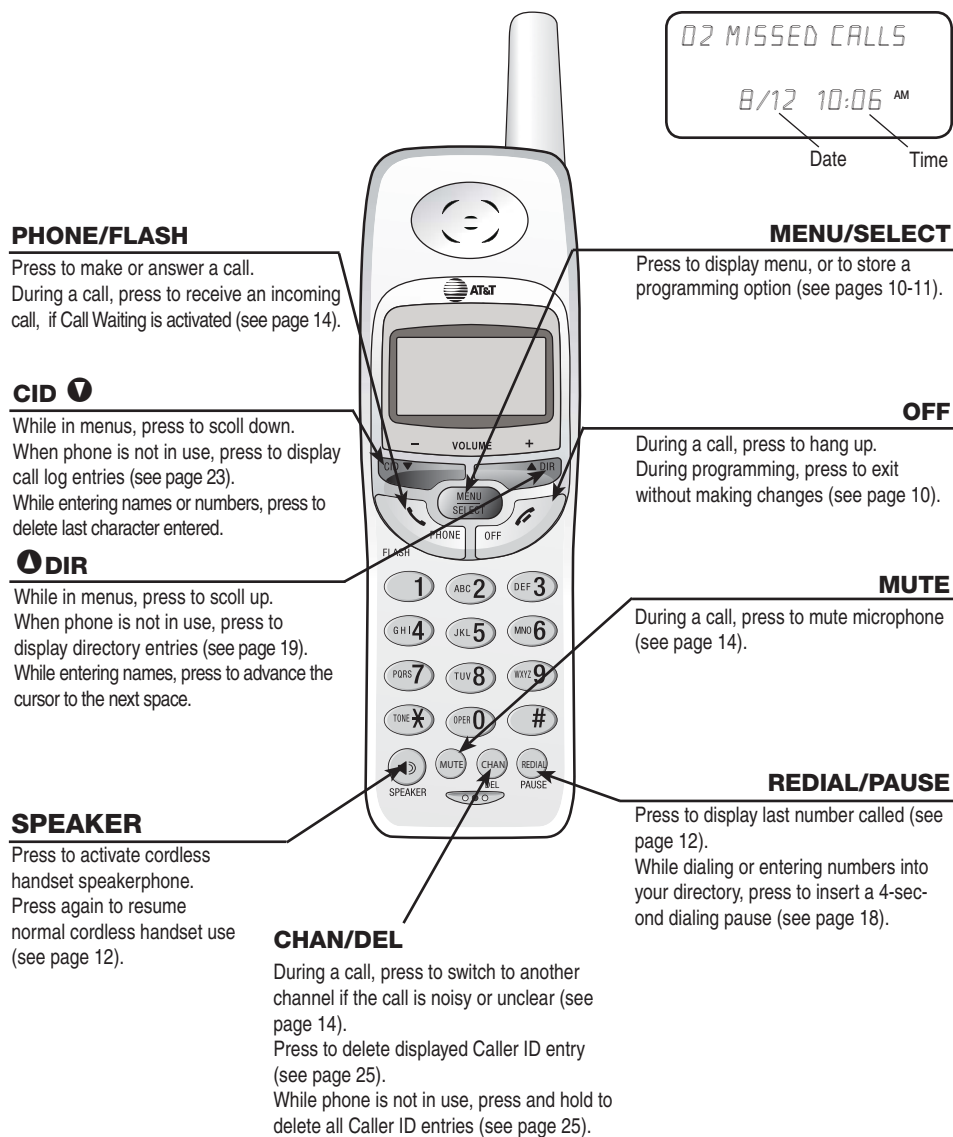


Quick reference guide

Telephone Base

NEW VOICE MAIL

If you subscribe to a telephone company Voice Mail service, **MESSAGE WAITING** appears in the display and the **NEW VOICE MAIL** light flashes when you have unretrieved messages waiting.

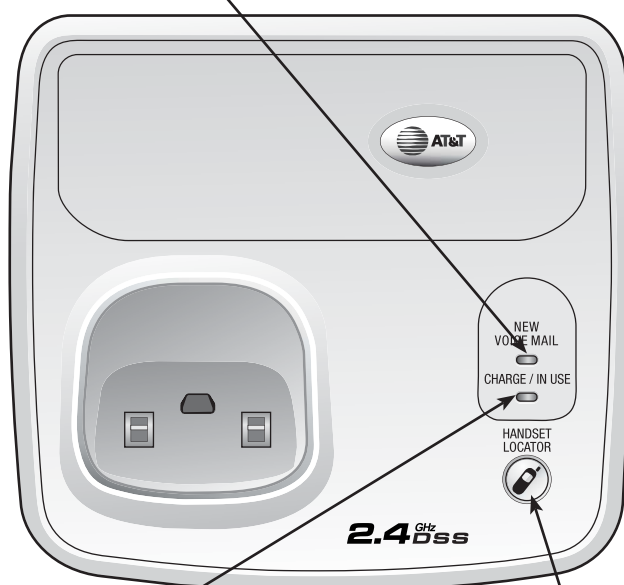

CHARGE/IN USE

On steady when cordless handset is positioned so its battery can charge.
Flashes during incoming ringing.
Flashes when the cordless handset is in use.

HANDSET LOCATOR

Press to page the cordless handset.
Press again, press **OFF** on cordless handset, or place cordless handset in the base to cancel the page.

Getting Started

Parts checklist

Save your sales receipt and original packaging in case you need to ship your telephone for warranty service.




Telephone base



Cordless handset



Power adapter

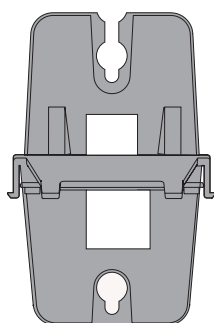


Wall mount bracket



Belt clip



Telephone line cord

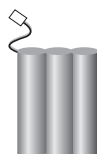

Battery pack



Battery compartment door

Before you begin

Caller ID and Call Waiting

Caller ID with Call Waiting features in this telephone let you see who's calling before you answer the phone, even when you're on another call. These features require services provided by your local telephone company.

Contact your telephone service provider if:

- you have both Caller ID and Call Waiting, but as separate services (you may need combined service),
- you have only Caller ID service, or only Call Waiting service, or
- you currently do not have any Caller ID or Call Waiting services.

You can use this telephone with regular Caller ID service, and you can use its other features without subscribing to either Caller ID or combined Caller ID with Call Waiting service. There may be fees for these services, and they may not be available in all areas.

Caller ID features will work only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

See Caller ID Operation on page 21 for more details about how these features work.

Battery Pack for Cordless Handset

Use only the supplied rechargeable battery pack or AT&T replacement battery model 3301 (SKU 91076. Part Number 80-5071-00-00).

Telephone Operating Range

The cordless telephone handset operates with the maximum power allowed by the Federal Communications Commission (FCC). This cordless handset and the telephone base unit can communicate over only a certain distance - which can vary with the locations of the base unit and the cordless handset, the weather, and the construction of your home or office.

If there is an incoming call but the cordless handset is out of range, the cordless handset might not ring - or if it does ring, the call might not connect well when **PHONE** is pressed. Move closer to the base, then press **PHONE** to answer the call.

If you move out of range during a telephone conversation, you might hear noise or interference from the cordless handset. To improve reception, move closer to the telephone base unit.

If you move out of range without pressing **OFF**, your telephone will be left "off the hook" and the line will be busy. To hang up properly, walk back toward the telephone base unit while periodically pressing **OFF** until the call is disconnected.


If you experience noise or interference while on a call, press the **CHAN** button until you find a clearer channel.

Getting Started

Telephone base installation

Install the telephone base as shown below. Choose a location in a central location within the home and:


- Away from any other cordless (wireless) device such as cordless telephones, 802.11 wireless router (for example, WiFi).
- Away from other electronic equipment, microwave oven, television, computer, etc.
- If you need to install your phone within the same room as other cordless phones or wireless products, you may need to select a different channel for your router and or change the channel on your phone's handsets (see page 14).

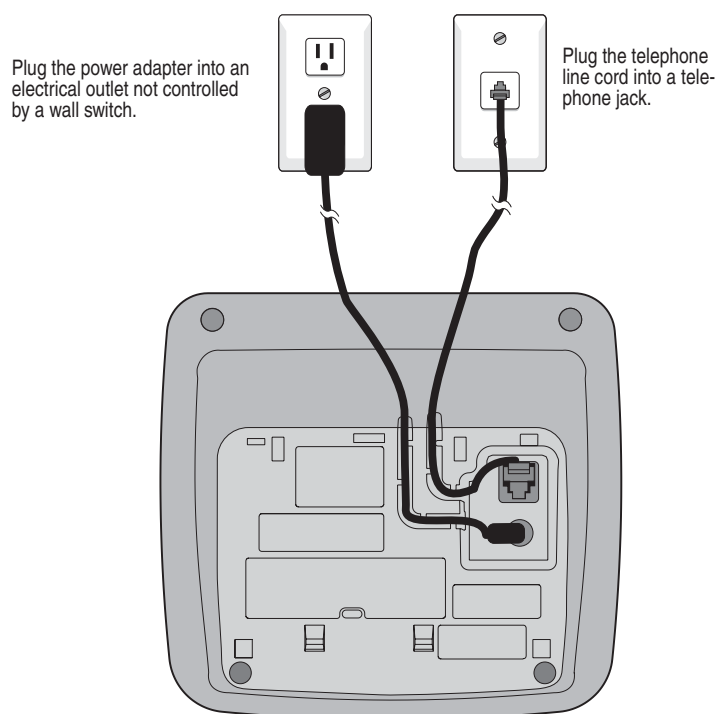

NOTE: Use only the power adapter supplied with this product. If you need a replacement, call 1-800-222-3111. In Canada, call 1-866-288-4268. Be sure to use an electrical outlet not controlled by a wall switch.

Battery installation & charging

After battery installation, place the cordless handset in the base and allow to charge for at least 16 hours before use. You can keep the battery charged by returning the cordless handset to the base after each use. When the battery is fully depleted, a recharge takes about 16 hours. The talk time on a fully charged battery is about four hours depending on environmental conditions, and the standby time is approximately five days. Actual battery life will depend on usage conditions, and age of battery.

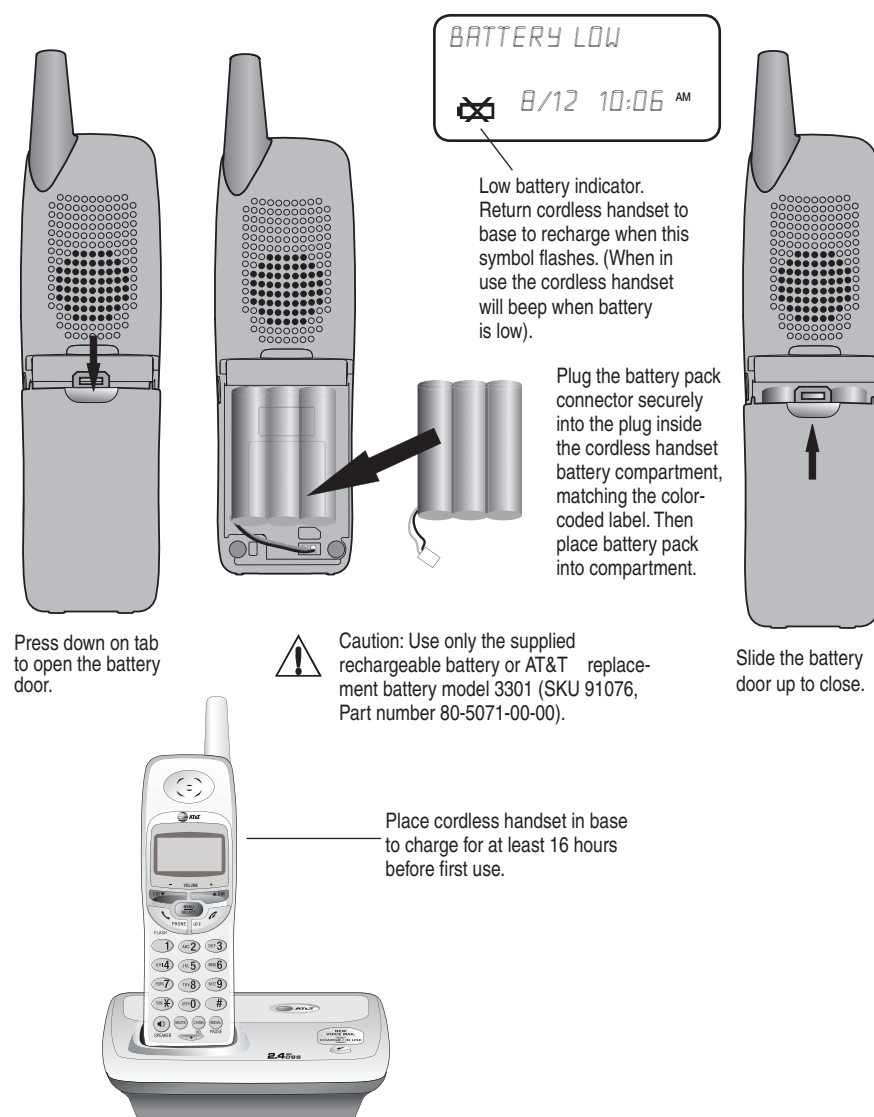


Getting Started

Wall mounting


The base can be installed on any standard phone outlet as shown below. Choose a location in a central location within the home, away from electronic equipment such as personal computers, computer routers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

1) Connect telephone line cord and AC power cord to telephone jack and wall jacks, as shown on page 6.

2) Install wall mount bracket onto set. First put the two front wall-mount-bracket tabs into the front notches on bottom of telephone base, then squeeze the rear tabs of the wall mount bracket as you insert them into the rear notches on the bottom of the telephone base.

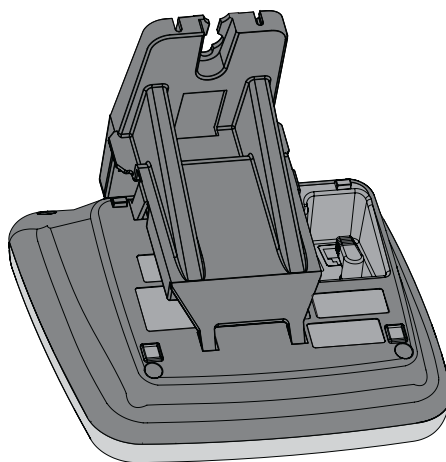


i NOTE: To disassemble the wall mount bracket, squeeze the rear tabs while lifting up the wall mount bracket back and away from the telephone base.

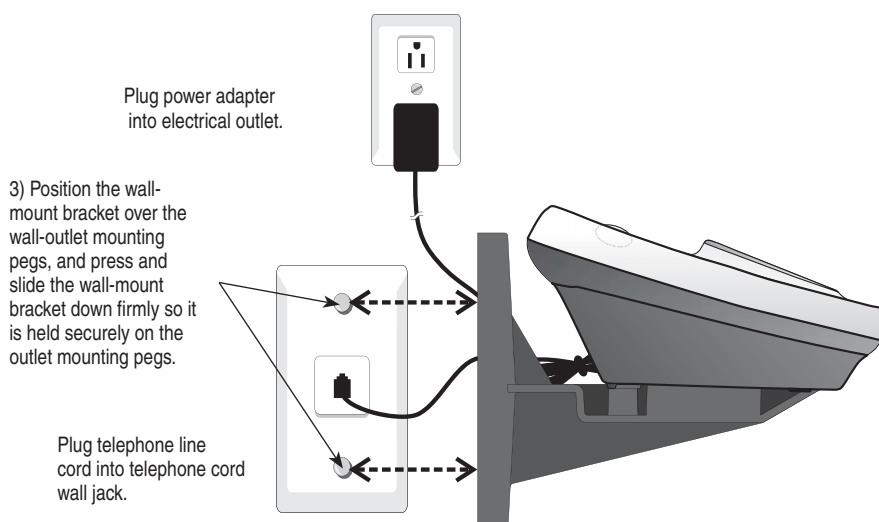


Getting Started

Belt clip & optional headset

Install belt clip as shown below if desired.

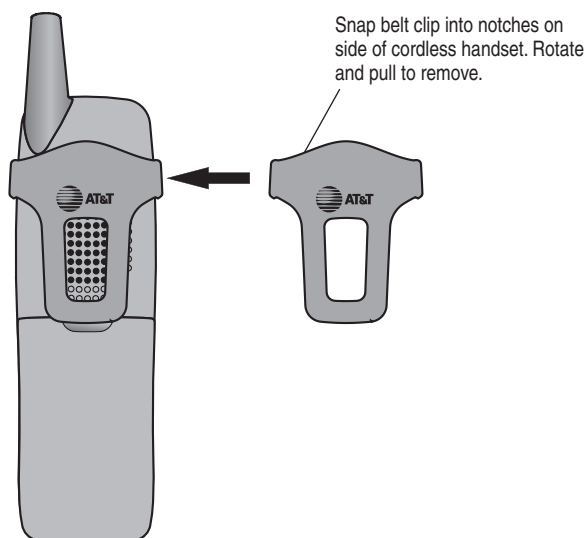

For hands-free telephone conversations, you can use any industry standard 2.5 mm headset (purchased separately). For best results, use an AT&T 2.5 mm headset.

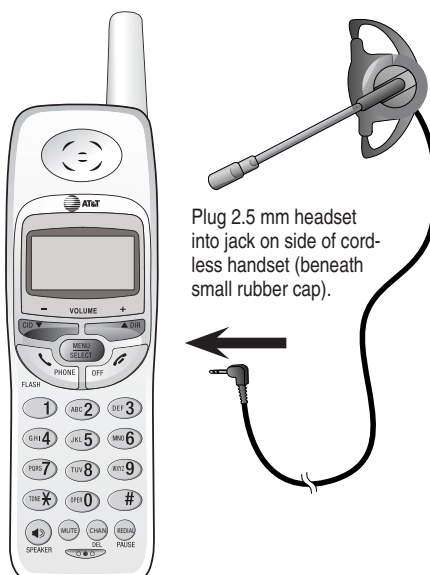



RINGER: 1

RINGER VOL: 2

DATE/TIME
1/01 12:00 AM

Telephone Operation

Cordless handset programming

Follow the steps below to program the cordless handset. To stop at any time, press **OFF**. If the phone rings, programming stops automatically so you can answer the call.

Choose cordless handset ringer sound

1. Press **MENU** to begin programming.
2. Press **▲** or **▼** until the screen displays *RINGER:* and the current setting.
3. Press **SELECT** to start changing current setting.
4. Press **▲** or **▼** to display 1, 2, 3, or 4. You will hear a sample of each ringer sound.
5. Press **SELECT** to choose displayed ringer sound and exit.

Choose cordless handset ringer volume

1. Press **MENU** to begin programming.
2. Press **▲** or **▼** until the screen displays *RINGER VOLUME*.
3. Press **SELECT** to start changing current setting.
4. Press **▲** or **▼** to display 1, 2, 3, or OFF. You will hear a sample of each ringer volume.
5. Press **SELECT** to choose displayed ringer volume and exit.

i NOTE: If the cordless handset ringer is turned off, the screen will display RINGER OFF when the cordless handset is idle (not in use). If there are any un-reviewed calls, the screen will display XX MISSED CALLS instead of RINGER OFF.

Set cordless handset display date and time

1. Press **MENU** to begin programming.
2. Press **▲** or **▼** until the screen displays *DATE/* *TIME*.
3. Press **SELECT** to view or change date and time.
4. Press **▲** or **▼** to start changing month in the date and time line at the bottom of the display, then press **SELECT**.
5. Repeat Step 4 to set day, hour, minute, and AM/PM.
6. Press **SELECT** to save selection and exit.

i NOTE: You can choose to set the time manually, or you can allow it to be set automatically with incoming Caller ID information. The time will be set automatically only if you subscribe to Caller ID service provided by your local telephone company (see page 5).

Cordless handset programming

Choose dial mode

The dial mode defaults to TONE. If you do not have touch tone service, you'll need to change the setting to pulse by following these steps:

1. Press **MENU** to begin programming.
2. Press **▲** or **▼** until the screen displays **DIAL MODE:** and the current setting.
3. Press **SELECT** to start changing current setting.
4. Press **▲** or **▼** to display TONE or PULSE.
5. Press **SELECT** to choose displayed dial mode and exit.

DIAL MODE: TONE

Clear Voice Mail (for all cordless handsets)

If you subscribe to voice mail service provided by your local telephone company, you will be alerted to new voice mail messages in two ways. When you press **PHONE**, the dial tone will toggle on and off (stutter tone) and you will receive a text message on the cordless handset. To manually remove the stutter tone and **MESSAGE WAITING** message on the cordless handset screen:

- Press **MENU**.
- Press **▲** or **▼** until the screen displays **MESSAGE WAITING**.
- Press **SELECT** then **▲** or **▼** to choose **YES**.
- Press **SELECT** to select **YES** and exit.

MESSAGE WAITING

CLEAR? YES

i NOTE: This only turns off the displayed message on the cordless handset screen; it does not delete your voice mail message(s). Use this feature when the phone indicates there is voice mail when you have none or you have accessed your voice mail from a different phone line (while away from home). If there actually is a new voice mail message, your local telephone company will continue to send the message which turns the display message back on.

Choose cordless handset display language

Your phone will default to English handset screen displays. If you wish to change them to Spanish, follow these steps:

1. Press **MENU** to begin programming.
2. Press **▲** or **▼** until the screen displays **LANGUAGE**.
3. Press **SELECT** to start changing current setting.
4. Press **▲** or **▼** to display ENGLISH or ESPANOL .
5. Press **SELECT** to choose displayed language and exit.

LANGUAGE



Telephone Operation

Basic cordless handset operation

Making and answering calls

To answer an incoming call, press **PHONE** (or **SPEAKER**, or any dial pad key). To make a call, press **PHONE** or **SPEAKER**, then dial a number. Press **OFF** or place the cordless handset back in the base to hang up.

To preview numbers before dialing, enter numbers first, then press **PHONE** or **SPEAKER** to dial. Press **✓** at any time to make corrections as you are entering numbers.

The screen displays the elapsed time as you talk (in hours, minutes and seconds).

i NOTE: The elapsed time format is in minutes and seconds "MM:SS" until one hour has elapsed, then it will change to hours, minutes and seconds "H:MM:SS".

Pressing **FLASH** to access services from your local telephone service provider will not affect the elapsed time.

Hands-free speakerphone calls

To answer a call, press **SPEAKER**. To make a call, press **SPEAKER**, then dial a number. During a call you can press **SPEAKER** to toggle between hands-free speakerphone and normal cordless handset use. Press **OFF** to hang up.

Last number redial

Press **REDIAL** on the cordless handset to display the last number called (up to 32 digits). To dial the number displayed, press **PHONE** or **SPEAKER**. Or, after pressing **PHONE** or **SPEAKER**, press **REDIAL** to call the last number dialed.

To delete this number, press **REDIAL** twice when the phone is not in use. This will clear the redial memory and leave it blank.

Temporary ringer silencing

Press **OFF** while the phone is ringing to temporarily turn off the ringer. The next phone call will ring normally.



Redial

Telephone Operation

Base operation


Handset Locator

Press to page the cordless handset for up to 60 seconds. Press again, press **OFF** on cordless handset, or place cordless handset in the base to cancel the page.



NOTE: If the cordless handset is charging in the base, pressing **HANDSET LOCATOR** does not generate any paging tone.



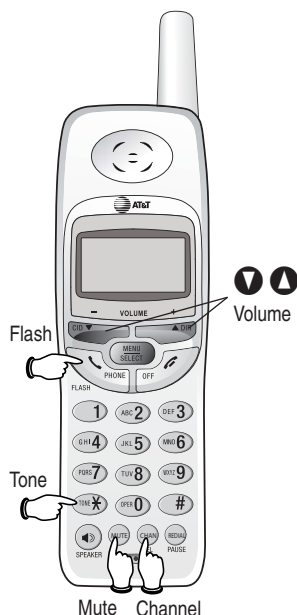

Telephone Operation

Options while on calls

Volume control

While on a call, press the **VOLUME** buttons on the cordless handset to adjust listening volume. To adjust the speakerphone listening volume, press **SPEAKER**, then press the **VOLUME** buttons.

Call waiting

If you have Call Waiting service, you will hear a beep if someone calls while you are already on a call. Press **FLASH** to put your current call on hold and answer the new call. You can press this button anytime to switch back and forth between calls.

Mute

You can press **MUTE** to silence the microphone while on a call. You will be able to hear the caller, but your caller will not be able to hear you until you press **MUTE** again to resume speaking. When you press **OFF** to hang up the phone, the feature will be canceled.

Temporary tone dialing

If you have pulse dial (rotary) service, you can temporarily switch to touch tone dialing during a call by pressing **TONE**. This can be useful if you need to send tone signals to access answering systems or long-distance services. After you hang up or press **FLASH** the phone automatically returns to dial pulse (rotary) service.

Channel selection

During a call, if you hear clicks and pops, or if the speech sometimes fades, press **CHAN** on the handset to scan for a clearer radio channel between cordless handset and base.



Directory

Memory capacity

The directory can store up to 30 entries (including nine speed dial locations). Each entry can contain a number up to 24 digits, and a name up to 15 letters long. A convenient search feature can help you find and dial numbers quickly (see page 19).

Speed dialing

On the cordless handset, the nine speed dial locations (1 through 9) are reserved for numbers you dial frequently. These numbers can be dialed with two button presses (see next page).



NOTE: If all memory locations are in use, an error tone with MEMORY FULL message will sound when you attempt to enter a number. This means the memory is full, and you will not be able to store a new number until you delete an existing one.

i NOTE: If all memory locations are in use, an error tone will sound when you attempt to enter a number. This means the memory is full, and you will not be able to store a new number until you delete an existing one.

1  **MENU**



2  



3  **SELECT**



4 



(See Steps 3-7 on page 17-18).

Directory





Speed dialing

On the cordless handset, numbers called most frequently can be stored in speed dial locations 1-9 and dialed with only two button presses.

You can enter 9 Speed Dial numbers of up to 24 digits. Each number is stored in a one-digit speed dial location (1-9).

i NOTE: The Speed Dial feature occupies up to nine of the thirty memory locations in the Directory. For example, if there are only five Speed Dial entries, then up to 25 entries can be stored in the Directory. If there are already 30 entries in the Directory, no new Directory and Speed Dial entries can be stored in memory until some of the existing ones are deleted.



To enter a Speed Dial number

1. Press **MENU** to begin programming.
2. Press  or  to display *SPEED DIAL*.
3. Press **SELECT**.
4. Press dial pad to choose speed dial location (1-9).
5. Enter a name up to 15 characters (see page 17), then press **SELECT**.
6. Enter a telephone number up to 24 digits (see page 18), then press **SELECT**.
7. Choose distinctive ringing (yes or no) by pressing  or . If you choose Yes (and if you have Caller ID service), a different ringing style will alert you when this person calls.
8. Press **SELECT** to store the number. You will hear a confirmation tone.

To call a Speed Dial number

To use speed dialing, press and hold a dial pad button (1-9) to display the number and name stored in that speed-dial location, then press **PHONE** or **SPEAKER** to dial.

To edit or delete a Speed Dial number

Press and hold a dial pad button (1-9) to display the entry you want. Press **SELECT**, then press  or  until the option you want is displayed (see page 20).

i NOTE: If all memory locations are in use, an error tone will sound when you attempt to enter a number. This means the memory is full, and you will not be able to store a new number until you delete an existing one.

1 MENU



2 SELECT



3



Directory

Entering names into directory

To enter a name

Use the dial pad and the chart below to enter a name (up to 15 characters). Each press of a particular key causes characters to be displayed in the following order:


Dial Key	Characters by number of key presses					
	1	2	3	4	5	6
1	1					
2	A	B	C	2		
3	D	E	F	3		
4	G	H	I	4		
5	J	K	L	5		
6	M	N	O	6		
7	P	Q	R	S	7	
8	T	U	V	8		
9	W	X	Y	Z	9	
0	0					
*	*					
#	&	'	,	-	.	#

Options while entering names:

- Press the **▲** button to move the cursor to the right. Press **▲** twice to enter a space.
- Press **▼** to erase letters if you make a mistake.
- Press **#** repeatedly to enter an ampersand (&), apostrophe ('), comma (,) hyphen (-), period (.), or pound sign (#).

When finished, press **SELECT**.

4  **SELECT**



ENTER NUMBER

5 



1 2 3
4 5 6
7 8 9
* 0



PAT JOHNSON
5556789

6  **SELECT**



DISTINCT RING? N
5556789

7  **SELECT**


Directory

Entering numbers into directory



To enter a number

Use the dial pad to enter up to 24 digits. When the number is complete, press **SELECT**.


Options while entering numbers:

- Press  to erase digits if you make a mistake.
- Press **PAUSE** to enter a 4-second dialing pause.

To assign a distinctive ring

Press  or  to select Y (yes) or N (no). If you choose Yes (and if you have Caller ID service), a different ringing style will alert you when this person calls.

Press **SELECT** to choose the option displayed (Y or N) and store this entry in the directory.

A  appears in the display of each entry that has been assigned a distinctive ring.

1   DIR

DIRECTORY

2  

ADAM
5551234

To display first entry

BETH
5554321

To scroll name by name

Or

JOHN
5550123



To search alphabetically


Directory


Directory search

Follow the steps on the left to browse through the directory or search to find a specific entry. You can press **OFF** anytime to exit the directory.


To browse through the directory

To browse, press DIR then press  or  to scroll through all entries one by one.

A  appears in the display of each entry that has been assigned a distinctive ring (see page 18).

 **NOTE:** When reviewing the Directory entries, all entries (including those in the Directory and in the Speed Dial) are displayed in alphabetical order. The entries in the Speed Dial are identified by its Speed Dial number (01-09) in the lower right corner of the screen.

To search alphabetically

To shorten your search, press DIR, then use the telephone dial pad to enter the first letter of a name, then press  to scroll forward until you find the desired name.

Press dial pad buttons once for the first letter, twice for the second, three times for the third, as shown on page 17.

For example, press **5(JKL)** once to find JENNIE, twice to find KEVIN, or three times to find LINDA.


To call a displayed number

When the entry you want is displayed, you can press **PHONE** or **SPEAKER** to dial it immediately.


1  **DIR**



2  

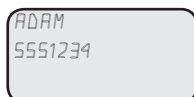

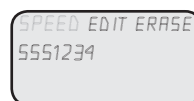

3  **SELECT**



Press **SELECT** to choose blinking option

Directory

Changing directory entries

When any entry is displayed, press **SELECT** to see options. Press  or  to highlight the option you want (blinking text), then press **SELECT** again to select it.


To edit an entry

When **EDIT** is blinking, press **SELECT**. You can change the name and number (or distinctive ring setting on the cordless handset) by following the steps described on pages 17-18.


To delete an entry


Press  until **ERASE** is blinking, then press **SELECT** to display a confirmation screen (**ERASE NO YES**).

To delete the entry, press  to highlight YES, then press **SELECT**.

To cancel the procedure and leave the entry intact, press  to highlight NO, then press **SELECT**.

To make an entry into a Speed Dial entry

Press  until **SPEED** is blinking, then dial a speed dial location (1-9) to transfer this entry to your Speed Dial directory.

 **NOTE:** If you use a memory location (Speed dial memory) that is already assigned to a different entry in the directory, that entry will remain in the directory, but will no longer be a Speed Dial number.




Caller ID Operation

How Caller ID works

If you subscribe to Caller ID service provided by your local phone company, information about each caller will be displayed between the first and second ring.

An asterisk means same caller has

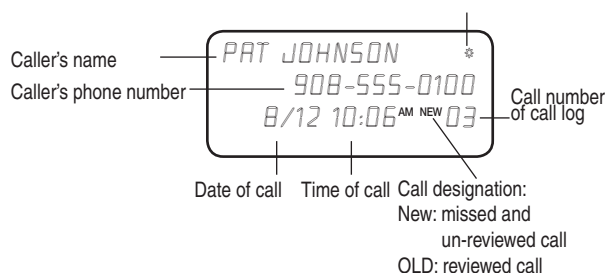


Information about the last 30 incoming calls is stored in your call log. You can review the call log to find out who has called, return the call without dialing, or transfer the caller's name and number into your phone directory.

Each incoming call is numbered. The most recent call is assigned the highest number. When the call log is full, the oldest call information is deleted to make room for new incoming call information.

If you answer a call before the information appears on the screen, it will not be saved in your call log.

i NOTE: Caller ID features will work only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

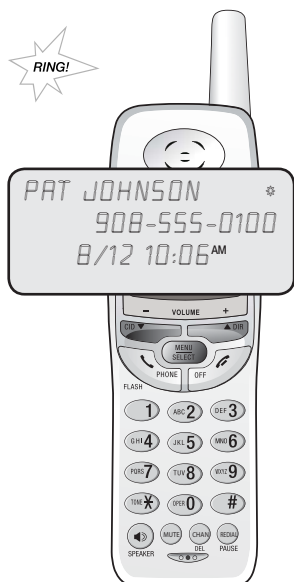

Caller ID Operation

About names

Names of callers will be displayed only if this information is provided by your local telephone company.

If the telephone number of the person calling exactly matches a number in your directory, the name that appears on the screen will match the name that you entered into your directory.

(Example: If Christine Smith calls, her name will appear as CHRIS if this is how you entered it into your directory.)

i NOTE: The number shown by your caller ID will be in the format sent by the phone company. The phone company usually delivers ten-digit phone numbers (area code plus phone number). If the telephone number of the person calling does not exactly match a number in your directory, the name will appear as delivered by the phone company. For example if the phone company includes the area code and the directory number does not, the name will appear as delivered by the phone company.

There are also occasions when other information or no information is displayed for various reasons:

On-Screen Message	Reason
<i>PRIVATE NAME</i>	Caller prefers to remain anonymous.
<i>PRIVATE CALLER</i>	Caller name and telephone number not revealed at caller's request.
<i>UNKNOWN NAME</i>	Your local telephone company is unable to determine the caller's name.
<i>UNKNOWN CALLER</i>	Your local telephone company is unable to determine the caller's name and telephone number. Calls from other countries may also generate this message.

i NOTE: When in idle mode, the screen will show **XX MISSED CALLS** and the current date and time.

Missed calls

When a handset is not being used, its screen will show the number of missed calls and the current date and time. **XX MISSED CALLS** are calls that have not been reviewed at that handset. When a **NEW** call log entry is reviewed, the number of missed calls at that handset decreases by one.

1  **CID**

PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

2  

CHRIS WILLIAMS
908-555-1234
8/12 9:53 AM NEW 02

3  

MARK CLAYTON
908-555-5678
8/12 9:12 AM NEW 01

4  **PHONE**

PHONE ON 00:10
9085555678

To dial this number



Caller ID Operation

To review your call log

The call log review displays the Caller ID in reverse chronological order, with the latest one (the one with the highest number) first.

When the phone is not in use, press **CID** to display information about the most recent caller.

To review your call log

Press  to scroll backward (display older calls) or  to scroll forward (display newer calls). The highest call number is the most recent call received.

To return a call

Press **PHONE** or **SPEAKER** to call the number currently displayed (see page 24 for important dialing options).

Other options

Press **SELECT** at any Caller ID screen to see options (Dial or Program; see pages 24-26).

New and Old calls

Each Caller ID entry in the call log will be designated NEW until you have reviewed the call. After a call has been reviewed, it will be designated as OLD.

1  **CID**

PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

2  **PHONE**

PHONE ON 00:10
9085550100

Or

1  **CID**

PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

2  **#**


PAT JOHNSON
555-0100
8/12 10:06 AM NEW 03

3  **PHONE**

PHONE ON 00:10
5550100


Caller ID Operation

To dial a call log entry

When any Caller ID screen is displayed, press **PHONE** or **SPEAKER**, or press **SELECT** then  and **SELECT** to dial the number exactly as it appears on the screen.


Dialing options

Caller ID numbers may appear with an area code that may not be required for local calls.

If the number displayed is not in the correct format, you can change how it is dialed. Press  repeatedly to see dialing options. With each button press a new option will be displayed. Press **PHONE** or **SPEAKER** to dial when the number appears in the proper format for your area.

Example:

CID..... Number displayed as 908-555-0100

 twice Number changes to 555-0100 (drops "1" + area code)

PHONE or **SPEAKER**.....Dials 555-0100

1  **CID**

PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

2  

CHRIS WILLIAMS
908-555-1234
8/12 9:53 AM NEW 02

3  **DEL**

MARK CLAYTON
908-555-5678
8/12 9:12 AM NEW 01

Or

27 MISSED CALLS
1/01 12:00 AM

1  **DEL**

ERASE ALL NO YES
1/01 12:00 AM

2  

ERASE ALL NO YES
1/01 12:00 AM

3  **SELECT**



1/01 12:00 AM

Call log cleared

Caller ID Operation

To delete call log entries

To delete a single call log entry

Press **CID** to display the first Caller ID listing. Use the  or  keys to find the entry you want to delete, then press **DEL**. When the entry is deleted, the next oldest record is displayed.

To delete all call log entries

To clear your call log completely, press and hold **DEL** while the phone is idle (not in use). This will display a confirmation screen asking if you want to erase all entries in the Caller ID log. If you select **YES**, the call log will be cleared and the screen will return to normal standby display, showing no missed calls.

1  **CID**

PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

2  **SELECT**

DIAL PROGRAM
908-555-0100
8/12 10:06 AM NEW 03

3  **SELECT**

PAT JOHNSON
9085550100
8/12 10:06 AM NEW 03

Edit name as desired

4  **SELECT**

PAT JOHNSON
9085550100_
8/12 10:06 AM NEW 03

Edit number as desired

5  **SELECT**

DISTINCT RING? N
9085550100
8/12 10:06 AM NEW 03

6  **SELECT**


PAT JOHNSON
908-555-0100
8/12 10:06 AM NEW 03

Entry added to phone
directory

Caller ID Operation

To add entries to phone directory

When a Caller ID screen is displayed, follow the steps at left to enter it into your phone directory.

Both the caller's name and telephone number will be entered as they appear in the call log. At steps 3-4, you can make changes to the name or number by using the  button to erase characters, or using the dial pad to enter new ones (see page 17-18 for instructions).

When the number is stored, the screen returns to the call log display. The entry copied to your phone directory remains in the call log until deleted.

Display screen messages, lights and tones




 

Screen display messages

<i>CONNECTING...</i>	The cordless handset is waiting for a dial tone.
<i>** RINGING **</i>	There is a call coming in.
<i>** PAGING **</i>	The cordless handset locator has been activated (cordless handset beeps to help you locate it).
<i>NEEDS RECHARGING</i>	Cordless handset battery is depleted. Place cordless handset in base to charge the battery.
<i>BATTERY LOW</i>	Cordless handset battery is low. Place cordless handset in base to charge the battery.
<i>PHONE ON</i>	The cordless handset is in use.
<i>SPEAKER</i>	The speakerphone is in use.
<i>SCANNING...</i>	Cordless handset is scanning for a clear channel to improve sound quality.
<i>CAN'T CONNECT</i>	Cordless handset cannot communicate with base. Check base power, or move closer.
<i>XX MISSED CALLS</i>	There are missed and un-reviewed calls in your call log.
<i>MUTE</i>	The cordless handset microphone is muted.


Display screen messages, lights and tones



Alert tones

	"Beep-Beep...Beep-Beep..." (Double beep every 5 seconds)	Cordless handset battery is low. Place cordless handset in base to charge the battery.
	"Beep-Beep-Beep-Beep-Beep" (5 quick beeps)	Error tone (current operation has been unsuccessful; try again).
	"Beeeeeeeeep" (1 long beep)	Confirmation tone (current operation has been successfully completed).

Indicator lights

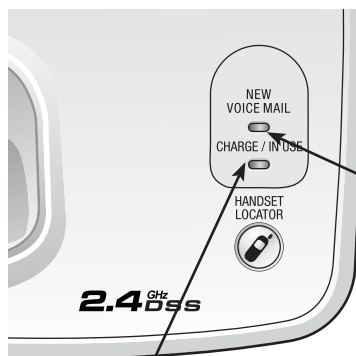

CHARGE/IN USE

On when handset is positioned so its battery can charge.
Flashes during incoming ringing.
Flashes when the cordless handset is in use.

NEW VOICE MAIL

Flashes when you have new voice mail (requires voice mail service from your local telephone company).

SPEAKER

On when speakerphone is in use.



Troubleshooting

If you have difficulty with your phone, please try the suggestions below. For Customer Service, visit our web site at www.telephones.att.com, or call 1-800-222-3111. In Canada, call 1-866-288-4268.

My phone doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure that the battery wire is securely plugged into the cordless handset.
- Make sure the telephone line cord is securely plugged firmly into the telephone base and the telephone wall jack.
- Charge the battery pack in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to its base when not in use.
- Reset the base. Unplug the unit's electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and base to reset.
- If your batteries are old, you may need to purchase a new battery pack, please refer to page 7 of this user's manual.

I cannot get a dial tone.

- First try all the suggestions above.
- Move the cordless handset closer to the base. You might have moved out of range.
- Your line cord might be malfunctioning. Try installing a new line cord.
- If the previous suggestions don't work, disconnect the base unit from the telephone jack and connect a different phone. If there is no dial tone on that phone either, the problem is in your wiring or local service. Contact your local telephone company.

I cannot dial out.

- First try all the suggestions above.
- Make sure you have a dial tone before dialing. The cordless handset may take a second or two to find the base and produce a dial tone. This is normal. Wait an extra second before dialing.
- Make sure your phone is set to the correct dial mode for the type of service that you have (pulse or touch tone). Refer to the Installation section of this user's manual (page 11) to set the dial mode.
- If the other phones in your home are having the same problem, the problem is in your wiring or local service. Contact your local telephone company (charges may apply).
- Eliminate any background noise. Noise from a television, radio or other appliance may cause the phone to not dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.

Troubleshooting

My cordless handset beeps five times and isn't performing normally.

- Make sure the power cord is securely plugged into the base. Plug the unit into a different, working electrical outlet not controlled by a wall switch.
- Move the cordless handset closer to the base. You might have moved out of range.
- Reset the base. Unplug the unit's electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and base to reset.
- Other electronic products can cause interference to your cordless phone. Try installing your phone as far away from these types of electronic devices as possible: wireless routers, radios, radio towers, pager towers, cell phones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless phones.

CAN'T CONNECT displays on my cordless handset.

- Move the cordless handset closer to the base. You might have moved out of range.
- Ensure that the base is powered up.
- Place the cordless handset in base cradle for 1 minute to allow the cordless handset and base to resynchronize channels.
- If the cordless handset is in its base and the charging light does not come on, refer to the charge light is off in this troubleshooting guide.
- Reset the base. Unplug the unit's electrical power. Wait for 15 seconds then plug it back in. Allow up to one minute for the cordless handset and base to reset.
- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away from these types of electronic devices as possible: wireless routers, radios, radio towers, pager towers, cell phones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless phones.

The batteries will not hold a charge.

- Charge the battery in the cordless handset for at least 16 hours. For optimum daily performance, return the cordless handset to its base when not in use.
- Ensure that the battery is properly installed and charged as described on page 7.
- Ensure that the telephone base and charger units are plugged into functioning power outlets.
- If your battery is old, you may need to purchase a new battery pack, see page 7.
- Your phone might be malfunctioning. Please refer to the Warranty section of this user's manual for further instruction.
- If the cordless handset is in its base and the charging light does not come on, refer to "The charge light is off" in this troubleshooting guide.

Troubleshooting

I get noise, static, or weak signal even when I'm near the base.

- Other cordless phones and 802.11 wireless routers that are used for home computer networks both use internal radios to communicate. The radios may interfere with one another. You can improve the performance of your cordless phones and your router by:
 - a. Positioning your new phone as far away as possible from any other existing cordless telephone system that is already installed in your home to avoid the two systems interfering with each other.
 - b. Positioning your telephone base as far as possible from your router, computer or any other computer devices.
 - c. Selecting channels 4 through 10 for your router (refer to your router's user manual for more information).
 - d. If you still have problems with the phone or the router, make sure the handset is ON and press **CHAN** until the performance improves.
- Press the **CHAN** button while on a call until the interference has been eliminated.
- Other electronic products can cause interference to your cordless phone. Try installing your phone as far away from the following electronic devices as possible: wireless routers, radios, radio towers, pager towers, cell phones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless phones.
- Microwaves operate on the same frequency as your phone. It is normal to experience static on your phone while the microwave oven is operating. Do not install this phone in the same outlet or near a microwave oven.
- If your phone is plugged in with a modem or a surge protector, plug the phone (or modem/surge protector) into a different location. If this solves the problem, re-locate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your phone to a higher location. The phone will likely have better reception when not installed in a low area.
- If the other phones in your home are having the same problem, the problem is in your wiring or local service. Contact your local telephone company (charges may apply).
- If you subscribe to DSL service and if you hear noise during conversations and/or your caller ID features are not functioning properly, install a noise filter to the telephone line between the base unit and the telephone line jack. Contact your DSL provider to obtain a noise filter.

I hear other calls while using my phone.

- Press the **CHAN** key while on a call to change to a clear channel.
- Disconnect the base unit from the telephone jack, and plug in a different telephone. If you still hear other calls, the problem is probably in your wiring or local service. Call your local telephone company.

Troubleshooting

I hear noise in the cordless handset, and none of the keys or buttons work.

- Make sure the power cord is plugged in securely.

My cordless handset does not ring when I receive a call.

- Make sure that the ringer is not turned off. Refer to the section(s) on ringer selection in this user's manual.
- Make sure the telephone line cord is plugged securely into the base unit and the telephone jack. Make sure the power cord is securely plugged in.
- The cordless handset may be too far from the base unit.
- Charge the battery in the cordless handset for at least 16 hours the first time. For optimum daily performance, return the cordless handset to its base when not in use. If your battery becomes completely depleted, make sure to charge it for at least 15 minutes before attempting to place a call.
- You may have too many extension phones on your telephone line to allow all of them to ring simultaneously. Try unplugging some of the other phones.
- The layout of your home or office might be limiting the operating range. Try moving the base to another location, preferably on an upper floor.
- If the other phones in your home are having the same problem, the problem is in your wiring or local service. Contact your local telephone company (charges may apply).
- Test a working phone at the phone jack. If another phone has the same problem, the problem is the phone jack. Contact your local telephone company (charges may apply).
- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away as possible from electronic devices wireless routers, radios, radio towers, pager towers, cell phones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless phones.
- Your line cord might be malfunctioning. Try installing a new line cord.
- Re-install the battery pack, and place cordless handset in base cradle.
- Wait for the cordless handset to re-establish its connection with the base. To be safe, allow up to one minute for this to take place.

My calls fade out or cut in and out while I'm using my cordless handset.

- Press the **CHAN** button while on a call until the interference has been eliminated.
- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away from the following electronic devices as possible: wireless routers, radios, radio towers, pager towers, cell phones, intercoms, room monitors, televisions, personal computers, kitchen appliances and other cordless phones.
- Microwaves operate on the same frequency as your phone. It is normal to experience static on your phone while the microwave oven is operating. Do not install this phone in the same outlet or near the microwave oven.

Troubleshooting

- If your phone is plugged in with a modem or surge protector, plug the phone (or modem/surge protector) into a different location. If this solves the problem, re-locate your phone or modem farther apart from one another, or use a different surge protector.
- Relocate your telephone base to a higher location. The phone will have better reception when not installed in a low area.
- If the other phones in your home are having the same problem, the problem is in your wiring or local service. Contact your local telephone company (charges may apply.)

The charge light is off.

- Clean the cordless handset and base charging contacts each month using a pencil eraser or cloth.
- Make sure the power and line cords are plugged in correctly and securely.
- Unplug the unit's electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and base to reset.
- Your phone might be malfunctioning. Please refer to the Warranty section of this user's manual for further instruction.

My Caller ID isn't working.

- Caller ID is a subscription service. You must subscribe to this service from your local telephone company for this feature to work on your phone.
- Your caller must be calling from an area that supports caller ID.
- Both you and your caller's telephone companies must use caller ID compatible equipment.

System does not receive CID or System does not display CID during Call Waiting.

- Make sure you subscribe to Caller ID with Call Waiting features services provided by your local telephone company. Caller ID features will work only if both you and the caller are in areas offering Caller ID service, and if both telephone companies use compatible equipment.

Common cure for electronic equipment.

- If the unit does not seem to be responding normally, try putting the cordless handset in its base. If it does not seem to respond, do the following (in the order listed):
- Disconnect the power to the base.
 - Disconnect the cordless handset battery, and spare battery, if applicable.
 - Wait a few minutes.
 - Connect power to the base.
 - Re-install the battery pack, and place the cordless handset into the base.
 - Wait for the cordless handset to re-establish its connection with the base. To be safe, allow up to one minute for this to take place.

Important Safety Instructions



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety Information

- **Read and understand all instructions in the user's manual. Observe all markings on the product.**
- **Avoid using a telephone during a thunderstorm.** There may be a slight chance of electric shock from lightning.
- **Do not use a telephone in the vicinity of a gas leak.**
If you suspect a gas leak, report it immediately, but use a telephone away from the area where gas is leaking. If this product is a cordless model, make sure the base is also away from the area.
- **Do not use this product near water, or when you are wet.** For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- **Install this product in a protected location** where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- **If this product does not operate normally, read "Troubleshooting" in the user's manual.** If you cannot solve the problem, or if the product is damaged, refer to the Limited Warranty. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- **If this product has user-replaceable batteries, replace batteries only as described in your user's manual.** Do not burn or puncture batteries — they contain caustic chemicals.
- **If this product has a three-prong (grounding) plug or a polarized plug with one wide prong, it may not fit in non-polarized outlets.** Do not defeat the purpose of these plugs. If they do not fit in your outlet, the outlet should be replaced by an electrician.



CAUTION: Use only the power adapter provided with this product. To obtain a replacement, call 1-800-222-3111. In Canada, call 1-866-288-4268.

Important Safety Instructions

Especially About Cordless Telephones

- **Privacy:** The same features that make a cordless phone convenient create some limitations. Telephone calls are transmitted between the base and the cordless handset by radio waves, so there is a possibility that your cordless phone conversations could be intercepted by radio receiving equipment within range of the cordless handset. **For this reason, you should not think of cordless phone conversations as being as private as those on corded phones.**
- **Electrical Power:** The base unit of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. **Calls cannot be made from the cordless handset if the base unit is unplugged or switched off, or if the electrical power is interrupted.**
- **Potential TV Interference:** Some cordless telephones operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the base unit of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- **Rechargeable Batteries:** This product contains either Nickel-Cadmium or Nickel-Metal Hydride rechargeable batteries. Exercise care in handling batteries in order not to short the battery with conducting material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Nickel-Cadmium Rechargeable Batteries:** Must be recycled or disposed of properly. Do not dispose of them in household garbage. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.



The RBRC™ Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle Nickel-Cadmium rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1 800 8BATTERY for locations accepting spent Nickel-Cadmium Batteries. Nickel-Metal Hydride Rechargeable Batteries: Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

- **Nickel-Metal Hydride Rechargeable Batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Important Safety Instructions

Precautions for Users of Implanted Cardiac Pacemakers

Cardiac Pacemakers (applies only to 900 MHz Digital Cordless Telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR had recommended to physicians that:

PACEMAKER PATIENTS

- Should keep wireless phones at least six inches from the pacemaker.
- Should NOT place wireless phones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless phone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless phones.

SAVE THESE INSTRUCTIONS

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your local telephone company upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your local telephone company.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer. If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone company may temporarily discontinue your telephone service. The telephone company is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone company is required to inform you of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone company is required to notify you if such changes are planned. If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The cordless handset may be safely held against the ear of the user. The base unit shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more. If you choose to use a clipping device, please make sure to only use the supplied AT&T belt clip.

Limited Warranty

The AT&T brands are used under license. Any repair, replacement or warranty service, and all questions about this product should be directed to: Advanced American Telephones, 1-800-222-3111 or www.telephones.att.com. In Canada, call 1-866-288-4268.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product, Advanced American Telephones ("AAT"), warrants to the holder of a valid proof of purchase ("CONSUMER" or "YOU") that the product and all accessories provided by AAT in the sales package ("PRODUCT") are free from material defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with operation instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America.

2. What will AAT do if the Product is not free from material defects in materials and workmanship during the limited warranty period ("MATERIALLY DEFECTIVE PRODUCT")?

During the limited warranty period, AAT's authorized service representative will repair or replace, at AAT's option, without charge, a Materially Defective Product. If AAT repairs this product, AAT may use new or refurbished replacement parts. If AAT chooses to replace this product, AAT may replace it with a new or refurbished product of the same or similar design. AAT will return repaired or replacement products to you in working condition.

AAT will retain defective parts, modules, or equipment. Repair or replacement of Product, at AAT's option, is your exclusive remedy. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase.

If AAT repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to repaired or replacement Products for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year limited warranty, whichever is longer.

Limited Warranty

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- Product that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of AAT; or
- Product to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- Product to the extent that the problem is caused by use with non-AAT accessories; or
- Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- Product purchased, used, serviced, or shipped for repair from outside the United States, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- Product returned without valid proof of purchase (see 6 below); or
- charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service in the United States of America, call 1-800-222-3111 (In Canada, please dial 1-866-288-4268) for instructions regarding where to return the Product. Before calling for service, please check the user's manual. A check of the Product controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. AAT will return repaired or replaced Product under this limited warranty to you, transportation, delivery or handling charges prepaid. AAT assumes no risk for damage or loss of the Product in transit.

If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, AAT will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

Limited Warranty

6. What must you return with the Product to get warranty service?

You must:

- a return the entire original package and contents including the Product to the AAT service location along with a description of the malfunction or difficulty;
- b include “valid proof of purchase” (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt (keep a copy for your records); and
- c provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and AAT. It supersedes all other written or oral communications related to this Product. AAT provides no other warranties for this product. The warranty exclusively describes all of AAT’s responsibilities regarding the product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Limitations:

Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the product is fit for ordinary use) are limited to one year from date of purchase.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

In no event shall AAT be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the product, or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your receipt as your proof of purchase.

Technical specifications

RF Frequency Band (Cordless handset to base)	921.4 MHz — 927.2 MHz
RF Frequency Band (Base to cordless handset)	2400.9 MHz — 2405.1 MHz
Operating Temperature	32°F — 122°F 0°C — 50°C
Base Unit Voltage (AC Voltage, 60Hz)	120V AC 60Hz
Base Unit Voltage (AC Adapter Output)	9V DC 300mA
Cordless handset Voltage	3.6V 600mAH Ni-Cd Battery

Index

A

AC adapter, 6
Alert tones, 28
Answering calls, 12

B

Battery charging, 7
Battery installation, 7
Belt clip, 9

C

Caller ID, 21
 add entries to phone directory, 26
 delete entries, 25
 dial entries, 24

CID, 21

D

Delete Call Log entries, 25
Delete redial entries, 12
Dialing,
 from a CID record, 24
 manual dialing, 12
 phone book dialing, 19

E

Elapsed time, 12
Ending calls, 12

F

Flash (switchhook flash), 14

H

Hands-free use, 12
Cordless handset locator, 13
Headset, 9

I

Incoming call log, 21
Incoming calls, answering, 12
Indicator lights, 28

L

Last number redial, 12
Low battery, 7

M

Making calls, 12
Menus, 10-11
Mute, 14

N

Names,
 enter into phone book, 17
 search for, 19

O

Operating range, 5

P

Phone book, 15
 dial number, 19
 edit entries, 20
 name search, 19
 new entries, 17

Q

Quick reference guide, 2-3

R

Receiving calls, 12
Recharging, 7
Redial, 12
Ring silencing, 12
Ring tone options, 10

S

Search for name, 19
Speakerphone, 12
Switchhook flash, 14

T

Technical specifications, 42
Troubleshooting, 29-33

V

Volume controls, 14



www.telephones.att.com

Copyright © 2006 Advanced American Telephones. All Rights Reserved.
AT&T and the Globe Design are trademarks of AT&T Corp.,
licensed to Advanced American Telephones. Printed in China. Issue 3 AT&T 05/06.
91-000667-030-000