 


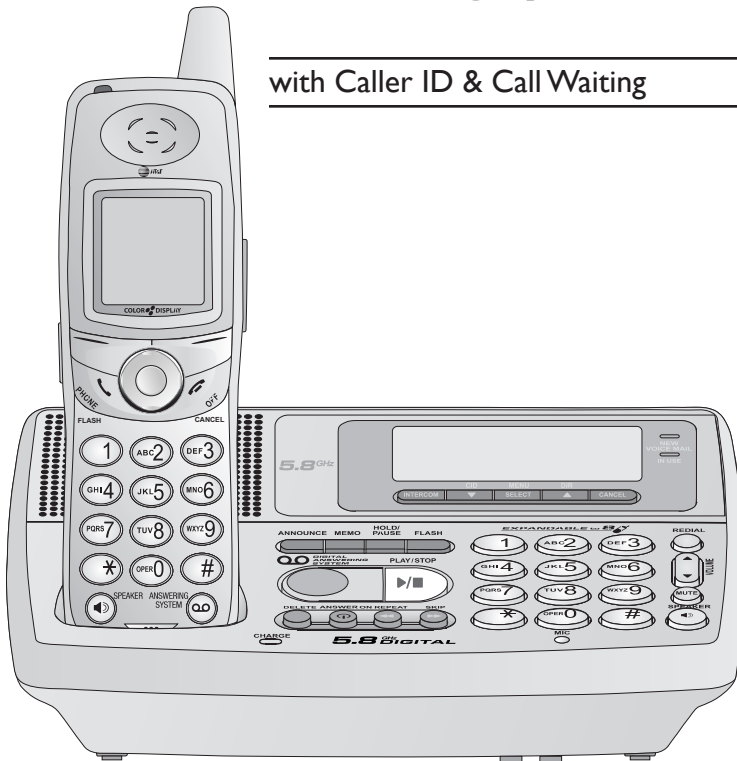

Quick Start Guide

 
5.8 GHz Cordless Telephone/Speakerphone Answering System EP5995

with Caller ID & Call Waiting




Installation and setup


After installation, place the handset in the base and allow batteries to charge for 16 hours before use.

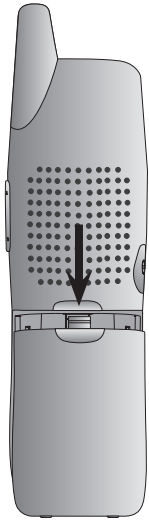

 Press tab and slide cover away from the battery compartment.

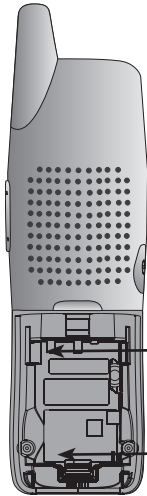


 Insert supplied battery as indicated. The top edge (contacts and tab) needs to be inserted first, then push down on the lower portion.




Replace battery compartment cover.

 Plug power adapter into electrical outlet not controlled by a wall switch.




 Plug the telephone line cord into telephone jack.

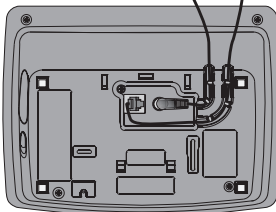

i **NOTE:** For installation of the spare battery into the spare battery compartment on the telephone base, please see page 71 of the user's manual.

 Place handset in base to charge for at least 16 hours before first use. When charging, the CHARGE light should be on.

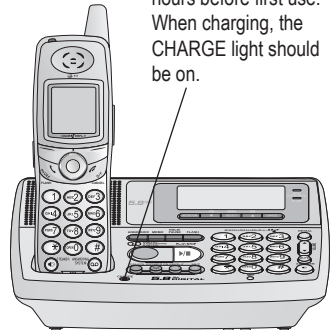

! **Caution:** Use only supplied rechargeable battery or AT&T replacement battery model 103 (SKU 00249. Part number 89-0429-00-00).

i **NOTE:** Use only the power cord supplied with this product. If you need a replacement, call 1 (800) 222-3111. In Canada, call 1 (866) 288-4268. Be sure to use an electrical outlet not controlled by a wall switch.

Quick reference guide

Handset

STATUS LIGHT

Blinks to indicate there is a new voice-mail and/or a new memo.

VOLUME

Press to increase or decrease handset listening volume.

SOFTKEYS

Press a softkey to select a menu item displayed just above the key.

OFF/CANCEL

During a call, press to hang up.


While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.


PHONE/FLASH

Press to make and answer a call.

During a call, press to receive an incoming call if Call Waiting is activated.

NavKey

Press the **CENTER** NavKey  to display menus.

Press the **CENTER** NavKey  to select menu item highlighted.

 
 
Press the **UP** or **DOWN** NavKey  or  to navigate through menus.

SPEAKER

Press to activate the handset speakerphone. Press again to resume normal handset use.

ANSWERING SYSTEM

Press to show the number of old and new messages recorded on the answering system.

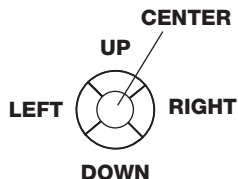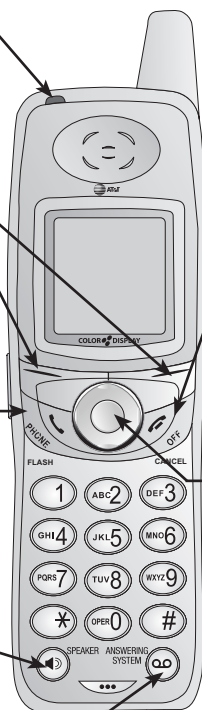

Quick reference guide

Telephone base



 
Telephone function keys

- INTERCOM** Press to locate handset(s).
Press to transfer a call or initiate an intercom conversation.
- ▼ CID** Press to scroll down while in menus. Press to display caller ID information. While entering names or numbers, press to move the cursor to the left.
- SELECT/MENU** Press to enter the base menu and select menu item displayed on line 2 of the screen.
- ▲ DIR** Press to scroll up while in menus. Press to display directory entries. While entering names, press to advance cursor.
- CANCEL** Press to cancel an operation, back up to the previous menu, or exit the menu display.
Press to make corrections when entering digits in the dialing screen.
- HOLD/PAUSE** While on a call, press to place a call on hold. To resume the telephone conversation, press **SPEAKER**.
Press to insert a dialing pause when entering digits in the dialing screen.
- FLASH** During a call, press to receive an incoming call if call waiting is activated.
- REDIAL** Press to access the redial log.
- VOLUME** Press to adjust listening volume on speakerphone.
- MUTE** Press to silence microphone; press again to resume.
- SPEAKER** Press to turn speakerphone on or off (begin or end a call).

Answering system controls



Press to play or stop playing messages.

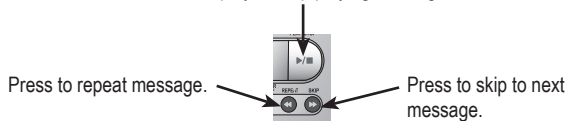

- ANSWER ON/OFF** ... Press to turn the call answering feature on or off.
- DELETE** Press to delete message currently playing or all messages.
- ANNOUNCE** Press to listen to current outgoing announcement on the answering system.
- MEMO** Press to record a memo on the answering system.