

## User's manual

EL52200/EL52210/EL52250/ EL52260/EL52300/EL52350/ EL52400/EL52410/EL52450/ EL52500/EL52510

DECT 6.0 cordless telephone/ answering system with caller ID/call waiting



## **Congratulations**

on purchasing your new AT&T product. Before using this AT&T product, please read **Important safety information** on pages 67-68 of this user's manual. Please thoroughly read the user's manual for all the feature operations and troubleshooting information you need to install and operate your new AT&T product. You can also visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

This telephone meets the California Energy Commission regulations for energy consumption. Your telephone is set up to comply with the energy-conserving standards right out of the box. No further action is necessary.

Model number: EL52200/EL52210/EL52250/EL52260 (two-handset system)

EL52300/EL52350 (three-handset system)

EL52400/EL52410/EL52450 (four-handset system)

EL52500/EL52510 (five-handset system)

Type: DECT 6.0 cordless telephone/answering system with caller ID/call waiting

Serial #: _			
Purchase c	date:		
Place of pu	urchase:		

Both the model and serial number of your AT&T product can be found on the bottom of the telephone base.



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

## Parts checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.



Quick start guide



Telephone base



Power adapter for telephone base



Cordless handset
(2 for EL52200, EL52210, EL52250 or EL52260)
(3 for EL52300 or EL52350)
(4 for EL52400, EL52410 or EL52450)
(5 for EL52500 or EL52510)



with power adapter installed
(1 for EL52200, EL52210,
EL52250 or EL52260)
(2 for EL52300 or EL52350)
(3 for EL52400, EL52410 or
EL52450)
(4 for EL52500 or EL52510)



Wall-mount bracket



Battery for cordless handset
(2 for EL52200, EL52210,
EL52250 or EL52260)
(3 for EL52300 or EL52350)
(4 for EL52400, EL52410 or
EL52450)
(5 for EL52500 or EL52510)



Battery compartment cover (2 for EL52200, EL52210, EL52250 or EL52260) (3 for EL52300 or EL52350) (4 for EL52400, EL52410 or EL52450) (5 for EL52500 or EL52510)



Telephone line cord

## User's manual

EL52200/EL52210/EL52250/ EL52260/EL52300/EL52350/ EL52400/EL52410/EL52450/ EL52500/EL52510

DECT 6.0 cordless telephone/ answering system with caller ID/call waiting



## Table of contents

Getting started
Quick reference guide2
Telephone base and charger installation4
Battery installation and charging5
Battery installation5
Battery charging6
Wall-mount installation7
Tabletop to wall-mount installation7
Wall-mount to tabletop installation9
Telephone settings
Menu overview10
Handset settings11
Ringer volume11
Ringer tone11
LCD language11
Voicemail waiting (visual message
waiting) indicator12
Clear voicemail indicator12
Key tone13
Set date/time13
Home area code14
Dial mode14
Answering system settings14
Telephone base ringer volume15
Telephone operation
Making, answering and ending calls16
Making a call16
Temporary ringer silencing16
Answering a call17
Speakerphone17
Ending a call17

Redial	
To review numbers in the redial list	18
To call a number from the redial list	18
To copy a number from the redial list	
to the directory	
To delete a number in the redial list	
Options while on calls	
Volume control	20
Mute	20
Flash/call waiting	20
Temporary tone dialing	21
Chain dialing	21
Join a call in progress	22
Handset locator	23
Intercom	24
To make and answer an intercom call	24
To answer an incoming call during an	
intercom call	24
Call transfer using intercom	25
Directory	
Directory overview	26
Shared directory	26
Directory memory capacity	
Exiting the directory	
Speed dial overview	
Create directory entries	
To create a new directory entry	
To add a predialed telephone number	
to the directory	28
Reviewing the directory	29
To review directory entries	29
To search by name	

Dialing, deleting and editing a directory		Temporarily turn off the message	
entry	30	alert tone	45
To dial a directory number	30	Message playback	46
To delete a directory entry	30	To listen to messages	46
To edit a directory entry	30	Options during playback	47
Speed dial locations	31	To delete all old messages	48
To assign or reassign a directory entry		Recording and playing memos	49
to a speed dial location		To record a memo	49
To clear a speed dial location		To play back memos	49
To dial a speed dial number	32	Message window displays	50
Caller ID		Remote access	51
About caller ID	33	To remotely access the answering	
Information about caller ID with call		system	51
waiting	33	Appendix	
About home area code	33	Screen icons, indicator lights and	
Caller ID history	34	alert tones	53
How caller ID history (call log) works	34	Screen icons	
Memory match	34	Handset indicator lights	53
Caller ID operation	35	Telephone base indicator lights	54
Missed (new) calls indicator	35	Handset alert tones	54
Reasons for missing caller ID		Telephone base alert tones	54
information		Handset display screen messages	55
To review the caller ID history		Troubleshooting	57
To view the dialing options	36	Maintenance	66
To dial a caller ID history number		Important safety information	67
To delete caller ID history entries	37	Safety information	67
Saving a caller ID history entry in the	20	Especially about cordless telephones	67
directory	38	Precautions for users of implanted	
Answering system settings		cardiac pacemakers	68
Answering system settings	39	Pacemaker patients	68
Answer on/off	39	Especially about telephone answering	
Announcement	40	systems	
Call screening setup	41	FCC Part 68 and ACTA	
Number of rings4	41	FCC Part 15	70
Remote access code4	42	California Energy Commission battery charging testing instructions	71
Message alert tone	42	Limited warranty	
Answering system operation		Technical specifications	
	12	DECT 6.0 digital technology	
Answering system and voicemail		Telephone operating range	
About answering system and voicemail4	43	reteptione operating range	14
Answering system new message indicator	43	Index	
Answering system overview		Index	75
Voice prompts			
Message capacity			

Call screening .......44
Call intercept .......45

You must install and charge the battery before using the cordless handset



See pages 5 and 6 for easy instructions.

Install the telephone base close to a telephone wall jack and an electrical outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or vertically mounted on the wall (page 7). For optimum range and better reception, place the telephone base in a central and open location.

If you subscribe to high-speed Internet service (DSL- digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (page 4). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

#### Avoid placing the telephone base too close to:

- Communication devices such as television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- · Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or work bench.

## Quick reference quide

#### REDIAL/PAUSE

Press repeatedly to view the last 20 numbers dialed (page 18).

While entering numbers, press and hold to insert a dialing pause (pages 16 and 27).

#### →PHONE/FLASH

Press to make or answer a call (page 16 and 17).

During a call, press to answer an incoming call when you receive a call waiting alert (page 20).

#### 1

While reviewing a caller ID history entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory (page 36).

#### 0

While entering names in the directory, press to add a space (page 27).

#### MUTE/DELETE

During a call, press to mute the microphone (page 20). While predialing, press to

delete digits (page 16).

While reviewing the redial list, directory, speed dial list or caller ID history, press to delete an individual entry (pages 19, 30, 31 and 37).

#### TONE\*

During a call, press to send touch-tone signals (page 21).

#### **■** SPEAKER

Press to turn on the handset speakerphone, press again to resume normal handset use (pages 17, 40 and 47).



#### INT

Press to initiate an intercom conversation or transfer a call (pages 24 and 25).

#### **▲**DIR/VOLUME

Press to scroll up while in menus (page 10).

Press to increase the listening volume (pages 20 and 47).

Press to show directory entries when the handset is not in use (page 29).

While entering names or numbers in the directory, press to move the cursor to the right (page 27).

#### **▼**CID/VOLUME

Press to scroll down while in menus (page 10).

Press to decrease the listening volume (pages 20 and 47).

Press to show the caller ID log when the handset is not in use (page 36).

While entering names or numbers in the directory, press to move the cursor to the left (page 27).

#### MENU/SELECT

Press to display the menu (page 10).

Once in the menu, press to select an item or save an entry or setting (page 10).

#### **→**OFF/CLEAR

During a call, press to hang up (page 17).

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display (page 10).

Press and hold while the handset is not in use to erase the missed call indicator (page 35).

#### #

When reviewing a caller ID log entry, press repeatedly to view other dialing options (page 36).

## Quick reference guide

The > symbol indicates the feature to select.



#### Main menu

➤ PLAY MESSAGES (page 46)

ANSWERING SYS (page 39)

DIRECTORY (page 27)

CALL LOG (page 36)

RINGERS (page 11)

SETTINGS (pages 11-14)

#### **Using menus**

Press **MENU/select** to enter the main menu.

Press **▲**DIR or **▼**CID to scroll through menu items.

Press **MENU/SELECT** to select or modify an item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.

#### **O ANSWER ON/OFF**

Press to turn the built-in answering system on or off (page 39).

#### Message window

Displays the number of messages. During playback, displays the message number currently playing (page 50).

#### ▶/■ PLAY/STOP

Press to start or stop message playback (page 46).

While call screening, press to temporarily turn the call screening on or off (page 44).

#### × DELETE

Press to delete the message currently playing (page 47).

Press twice to delete all old messages when the telephone is not in use (page 48).

#### **▶** SKIP

Press to skip a message (page 47).

#### **44 REPEAT**

After the answering system plays the day and time the current message was received, press to repeat the message currently playing (page 47).

While the answering system is playing the day and time the current message was received, press to listen to the previous message (page 47).

#### *⊘* HANDSET LOCATOR

Press to make handsets beep so that you can locate them (page 23).



When the telephone is not in use, press to adjust the telephone base ringer volume (page 15).


**▲**▼VOLUME

During call screening or message playback, press to adjust the listening volume (pages 44 and 47).

## Telephone base and charger installation

Install the telephone base and charger, as shown below. If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

The telephone base comes ready for tabletop use. If you want to mount your telephone on a wall, refer to **Wall-mount installation** on pages 7-8 for details.

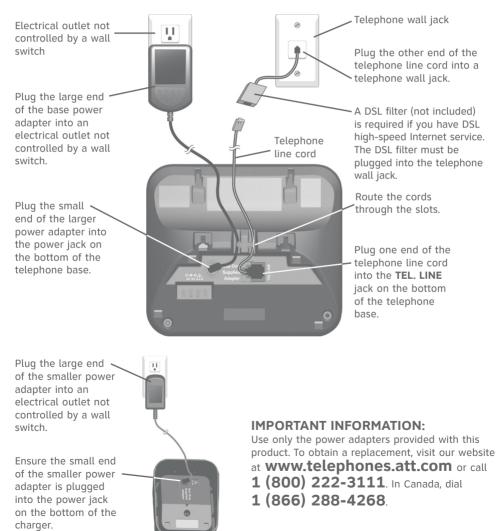

## Battery installation and charging

#### **Battery installation**

Install the battery, as shown below.

 Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label. Insert the supplied battery with the label THIS SIDE UP facing up, as indicated.



2. Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.





Charge the handset by placing it face up in the telephone base or charger. The CHARGE light is on when charging.

To replace the battery, press the tab and slide the battery compartment cover downwards. Lift out the old battery and disconnect it from the handset. Follow the instructions to install and charge the new battery.

#### IMPORTANT INFORMATION:

Use only the supplied rechargeable battery or replacement battery (model BT162342/BT166342). To order, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

## Battery installation and charging

#### **Battery charging**

Once you have installed the battery, the screen indicates the battery status (see the following table). If necessary, place the handset in the telephone base or charger to charge the battery. For best performance, keep the handset in the telephone base or charger when not in use. See **Technical specifications** on page 74 for battery charging and operating times.



If the screen is blank, you need to charge the handset without interruption for at least 30 minutes to give the handset enough charge to use the telephone for a short time. The screen shows **LOW BATTERY** until you have charged the battery without interruption for at least 30 minutes. The following table summarizes the battery charge indicators and actions to take.

Battery indicators	Battery status	Action		
The screen is blank or shows PLACE IN CHARGER.	Battery has no or very little charge. The handset cannot be used.	Charge without interruption until the screen shows <b>LOW BATTERY</b> or <b>HANDSET X</b> (at least 30 minutes).		
The screen shows LOW BATTERY and [] flashes.	Battery has enough charge to be used for a short time.	Charge without interruption until the screen shows <b>HANDSET X</b> (at least 30 minutes).		
The screen shows <b>HANDSET X</b> and the battery icon shows , or .	Battery is charged.	To keep the battery charged, place it in the telephone base or charger when not in use.		

## NOTES:

- If you are on a call in low battery mode, you hear four short beeps every 50 seconds.
- When you place the handset in the telephone base or charger, if no battery is installed
  in that handset, the CHARGE light is off and the screen shows NO BATTERY. Follow the
  instructions in Battery installation on page 5 to install the battery.


## Wall-mount installation

The telephone base comes ready for tabletop use. If you want to mount your telephone on a wall, use the provided wall-mount bracket to connect with a standard dual-stud telephone wall-mounting plate. If you do not have this mounting plate, you can purchase one from many hardware or consumer electronics retailers. Professional assistance may be required to install the mounting plate.

#### Tabletop to wall-mount installation


To change the telephone base from the tabletop installation to wall-mount installation, make sure you first unplug the power adapter from the electrical outlet and the telephone line cord from the telephone wall jack.

- 1. Plug one end of the telephone line cord into the **TEL. LINE** jack on the bottom of the telephone base. Plug the small end of the larger power adapter into the power jack on the bottom of the telephone base.
- Position the telephone base, as shown below. Insert the extended tabs of the wall-mount bracket into the slots on the back of the telephone base. Push the telephone base down until it clicks securely in place.
- 3. Route the telephone line cord through the wall-mount bracket hole. Route the power cord out of the bottom of the telephone.

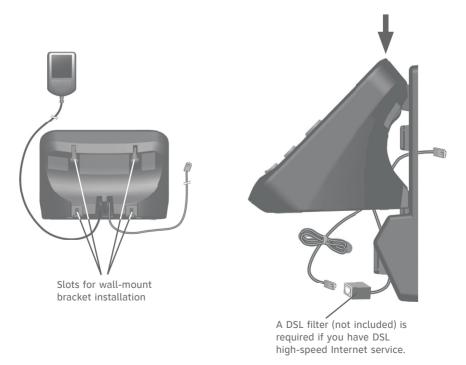


## Wall-mount installation

4. Plug the other end of the telephone line cord into the telephone wall jack. Plug the large end of the larger power adapter into an electrical outlet not controlled by a wall switch.

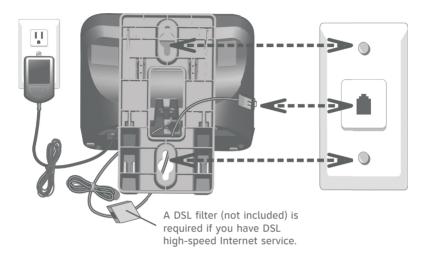

5. Align the holes on the wall-mount bracket with the mounting studs of the wall-mounting plate and slide the bracket down until it locks securely. Bundle the telephone line cord and power adapter cord neatly with twist ties.

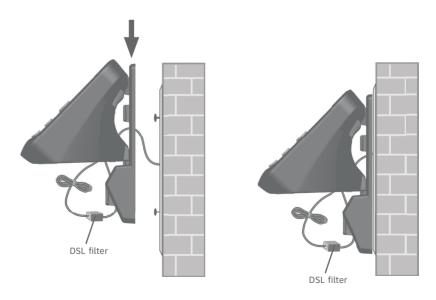


#### Wall-mount installation

## Wall-mount to tabletop installation

To change the telephone base from the wall-mount installation to tabletop installation, follow the steps mentioned below.

- 1. Unplug the large end of the larger power adapter from the electrical outlet.
- 2. If the telephone line cord and power adapter cord are bundled, untie them first. Slide the wall-mount bracket up and remove it from the wall-mounting plate. Unplug the end of the telephone line cord from the telephone wall jack.

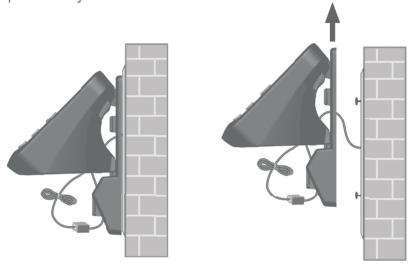

3. Lift the telephone base up to detach it from the wall-mount bracket.



4. Refer to **Telephone base and charger installation** on page 4 to install the telephone base.

#### Menu overview

Use the menu to change the telephone settings.

- 1. Press **MENU/SELECT** in idle mode (when the handset is not in use) to enter the main menu.
- Press ▲DIR or ▼CID to scroll until the > is next to the feature you want to select.
- 3. Press MENU/SELECT to select or save the indicated item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu or exit the menu display.

-OR-

Press and hold **OFF/CLEAR** to cancel an operation and return to idle mode.

-OR-

If no key is pressed within 30 seconds, the handset automatically cancels an operation and returns to idle mode






The > symbol indicates the feature to select.

NOTE: The menu items PLAY MESSAGES, ANSWERING SYS, DIRECTORY, CALL LOG, CLR VOICEMAIL, SET DATE/TIME, HOME AREA CODE and DIAL MODE are shared by all handsets. Any changes made to these menu items on any one handset apply to all.


#### Menu structure

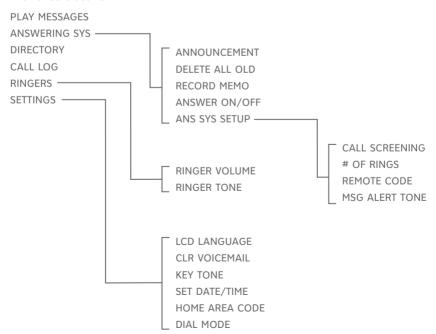

#### Ringer volume

You can set the handset ringer volume level (1-6), or turn the ringer off. When the ringer is off,  $\mathfrak{A}$  appears on the handset screen.

 - 1. Press MENU/select in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >RINGERS. Press MENU/SELECT.
- 3. Press MENU/SELECT to select >RINGER VOLUME.
- 4. Press **ADIR** or **▼CID** to sample each volume level.
- 5. Press **MENU/SELECT** to save your preference.



## NOTES:

- Changing the handset ringer volume does not affect the base ringer volume. For more
  information on the base ringer volume, see Telephone base ringer volume on page 15.
- The handset ringer volume also determines the ringer volume of intercom calls (see Intercom on page 24)
- If the handset ringer volume is set to off, that handset ringer is silenced for all incoming calls; however, that handset still plays the paging tone when you use the handset locator feature (see Handset locator on page 23).
- While the telephone is ringing, press —OFF/clear or MUTE/DELETE to silence the ringer temporarily on that handset only (see Temporary ringer silencing on page 16).

NOTE: If you turn off the handset ringer volume, you will not hear ringer tone samples.

#### Ringer tone

You can choose one of 10 ringer tones for the handset.

- 1. Follow Steps 1 and 2 in **Ringer volume** on this page.
- 2. Press ▲DIR or ▼CID to scroll to >RINGER TONE, then press MENU/SELECT.
- 3. Press ▲DIR or ▼CID to sample each ringer tone.
- 4. Press MENU/SELECT to save your preference.





You can select the language used for all screen displays.

- Press MENU/SELECT in idle mode to enter the main menu.
- 2. Press **ADIR** or **▼CID** to scroll to **>SETTINGS**.
- 3. Press MENU/SELECT twice to select >LCD LANGUAGE.
- Press ▲DIR or ▼CID to select ENGLISH, FRANÇAIS or ESPAÑOL.
- 5. Press MENU/SELECT to save your preference.



#### Voicemail waiting (visual message waiting) indicator

If you subscribe to a voicemail service offered by your telephone service provider, this feature provides a visual indication when you have new voicemail messages.

**NEW VOICEMAIL** and **M** appear on the handset screen.





- Your telephone service provider might alert you to new voicemail messages with a stutter (broken) dial tone. Contact your telephone service provider for more details.
- This feature does not indicate new messages recorded on your telephone's built-in answering system.
- For more information about the difference between your answering system and voicemail. see Answering system and voicemail on page 43.

#### Clear voicemail indicator

Use this feature when the telephone indicates there is a new voicemail but there is none. This may occur, for example, when you have accessed your voicemail while away from home. This feature only turns off the displayed **NEW VOICEMAIL** message and icon; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicators.

To manually turn off the new voicemail indicators:

- 1. Press MENU/SELECT when in idle mode to enter the main menu.
- 2. Press **ADIR** or **▼CID** to scroll to **>SETTINGS**, then press MENU/SELECT.
- 3. Press **△DIR** or **▼CID** to scroll to **>CLR VOICEMAIL**, then press **MENU/SELECT**. The screen shows TURN OFF INDICATOR?



4. Press MENU/SELECT to turn the voicemail indication off. There is a confirmation tone.

-OR-

Press -OFF/CLEAR to cancel the procedure.

NOTE: For more information about using your voicemail service, contact your telephone service provider for assistance.

#### Key tone

The handset is programmed to beep with each key press. You can turn the **KEY TONE** off, so there are no beeps when you press keys.

- 1. Press MENU/select in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >SETTINGS, then press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll to >KEY TONE, then press MENU/SELECT.
- 4. Press **ADIR** or **▼CID** to select **ON** or **OFF**.
- 5. Press MENU/SELECT to save your preference.



The answering system announces the day of the week and time of each message received prior to playing it. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call (see **About caller ID** on page 33). However, the year must be set so that the day of the week can be calculated from the caller ID information.

Follow the steps, as mentioned below, to set the month, date, year and time.

- 1. Follow Steps 1 and 2 in **Key tone** on this page.
- 2. Press **ADIR** or **▼CID** to scroll to **>SET DATE/TIME**, then press **MENU/SELECT**.
- 3. Use the dial pad keys (0-9) to enter the two-digit number (01-12) for the month.
- 4. Use the dial pad keys (0-9) to enter the two-digit number (01-31) for the day.
- 5. Use the dial pad keys (0-9) to enter the two-digit number (00-99) for the year. Press MENU/SELECT.
- 6. Use the dial pad keys (0-9) to enter the two-digit number (01-12) for the hour.
- 7. Use the dial pad keys (0-9) to enter the two-digit number (00-59) for the minute.
- Press ▲DIR or ▼CID to choose AM or PM. Press MENU/SELECT to confirm.
   There is a confirmation tone.



SET DATE 11/20/09

SET TIME

10:30 PM

Ĥ

#### Home area code

If you dial seven digits to make a local call (no area code required), enter your area code into the telephone as the home area code. When you receive a call from within your home area code, the caller ID log only displays the seven digits of the telephone number.

This feature makes it easy for you to place a call from the caller ID history. If you dial 10 digits to make a local telephone call, do not use this home area code feature. If you do, you will not be able to place calls from your caller ID history as they have only seven digits.

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- 2. Press **ADIR** or **▼CID** to scroll to **>SETTINGS**, then press **MENU/SELECT**.
- Press ▲DIR or ▼CID to scroll to >HOME AREA CODE, then press MENU/SELECT.
- Use the dial pad keys to enter your three-digit area code. Press MUTE/DELETE to delete digits while entering.
- 5. Press MENU/SELECT to save the setting.



NOTE: If, in the future, your telephone service provider requires you to dial 10 digits to make a local call (area code + telephone number), you will need to delete your home area code. While the home area code displaying in Step 4, press and hold MUTE/DELETE. The home area code is now restored to its default setting of \_ \_ \_ (empty).

#### Dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone.

- 1. Follow Steps 1 and 2 in **Home area code** on this page.
- 2. Press ▲DIR or ▼CID to scroll to >DIAL MODE, then press MENU/SELECT.
- 3. Press **▲DIR** or **▼CID** to select **TONE** or **PULSE**.
- 4. Press MENU/SELECT to save the setting.



**NOTE:** If you have dial-pulse (rotary) dialing service only, refer to **Temporary tone dialing** on page 21 to temporarily switch from dial-pulse to touch-tone dialing during a call.

## Answering system settings

Go to **Answering system settings** starting on page 39 for instructions on how to modify your answering system settings using a system handset.

## Telephone base ringer volume

When the telephone is not in use, press **AVVOLUME** on the telephone base to set the ringer volume level (1-5), or turn the ringer off. A sample of the ringer sounds as you adjust the volume. The telephone base announces, "Base ringer is off" when you set the volume to 0.





## Making, answering and ending calls

#### Making a call

#### To make a call:

1. Press **PHONE/FLASH**, then wait for the dial tone.

-OR-

Press SPEAKER, to use the speakerphone, then wait for the dial tone.

2. Use the dial pad keys to enter the telephone number.

# 10:30- 11/20

888-77

PHONE

The screen displays the elapsed time as you talk (in hours, minutes and seconds).

#### On-hook dialing (predialing):

- 1. Use the dial pad keys to enter the telephone number (up to 30 digits).
  - <u>Press and hold</u> **REDIAL/PAUSE** to insert a three-second dialing pause (a **P** appears).
  - Press MUTE/DELETE or SOFF/CLEAR to make corrections.



-OR-

Press SPEAKER to call using the speakerphone.

-OR-

Press and hold **GOFF/CLEAR** to return to the idle mode.



- Pressing —PHONE/FLASH to access services from your telephone service provider does not
  affect the elapsed time.
- When a handset is on a call, if another handset attempts to access the directory, speed dial list or caller ID history, the screen shows NOT AVAILABLE AT THIS TIME.

## **Temporary ringer silencing**

## To silence the ringer temporarily on that handset only:

 While the telephone is ringing, press OFF/CLEAR or MUTE/DELETE.



#### To silence the ringer temporarily on the telephone base:

 While the telephone is ringing, press ▼VOLUME on the telephone base.

This turns off the ringer without disconnecting the call. The next incoming call rings normally at the preset volume.

**NOTE:** Unless the ringer volume is turned off on that handset, each handset rings when there is an incoming call.

## Making, answering and ending calls

#### Answering a call

- Press any dial pad key (known as Any Key Answer) or —PHONE/FLASH.
  - -OR-
- Press SPEAKER to use the speakerphone.



#### **Speakerphone**

During a call, press **◆ SPEAKER** to switch between speakerphone and normal handset use.

Press -OFF/clear to hang up.



NOTE: After installing the battery in the handset, the screen may show LOW BATTERY. If you use the speakerphone at this time, the battery may become depleted. Follow the instructions in Battery charging on page 6.

#### **Ending a call**

- Put the handset in the telephone base or charger to end the call (known as Auto Off).



#### Redial

Each handset stores the 20 most recently called numbers in the redial list.

#### To review numbers in the redial list

- 1. Press REDIAL/PAUSE in idle mode.
- Press ▲DIR or ▼CID, or press REDIAL/PAUSE repeatedly to scroll through the 20 most recently called numbers (up to 30 digits each). The handset beeps twice at the beginning or the end of the list.



3. Press -OFF/CLEAR to exit the redial list.



#### To call a number from the redial list

With the desired number from redial displaying, press
 —PHONE/FLASH or ■SPEAKER to dial (known as
 Display Dial).

#### -OR-

- Press → PHONE/FLASH or ◆ SPEAKER and then wait for the dial tone.
- Press REDIAL/PAUSE. The screen shows the number most recently called. If it is not the desired number, press ▲DIR or ▼CID to scroll to the desired number.
- Press MENU/SELECT. The handset dials the displayed number.



# REDIAL 838-722-7762





## To copy a number from the redial list to the directory

- While reviewing the desired number in the redial list, press MENU/SELECT twice to edit the telephone number. Refer to Step 5 in To create a new directory entry on page 27.
- 2. Press MENU/SELECT to add the name. Refer to Step 7 in To create a new directory entry on page 27.
- Press MENU/SELECT to store your new directory entry. The handset shows SAVED and sounds a confirmation tone.





## Redial

#### To delete a number in the redial list

 While reviewing a number in the redial list, press <u>MUTE/DELETE</u> to delete the displayed number from the redial list.



## Options while on calls

#### Volume control

While on a call, press **△DIR/VOLUME** to increase or **▼CID/VOLUME** to decrease the listening volume.

When the volume reaches the minimum or maximum setting, you hear two beeps.



**NOTE:** The handset earpiece volume setting (1-5) and speakerphone volume setting (1-6) are independent.

#### Mute

Use the mute function to turn off the microphone while on a call. You can hear the caller, but the caller cannot hear you.

#### To mute the call:

 Press MUTE/DELETE. When mute is on, the handset screen shows MUTED for a few seconds and the MUTE icon appears until you turn off mute.



#### To end mute:

 Press MUTE/DELETE and then resume speaking. When mute is off, MICROPHONE ON appears temporarily on the handset screen.



Mute is automatically turned off when you end the call.



## Flash/call waiting

For more information on caller ID with call waiting, refer to **About caller ID** on page 33. If you subscribe to call waiting service provided by your telephone service provider, and someone calls while you are already on a call, you hear a beep.

- Press —PHONE/FLASH to put your current call on hold and take the new call.
- Press —PHONE/FLASH anytime to switch back and forth between calls.



## Options while on calls

#### Temporary tone dialing

If you have dial-pulse (rotary) dialing service only, you can temporarily switch from dial-pulse to touch-tone dialing during a call.

- During a call, press TONE¥. Buttons pressed after this send touch-tone signals.
- 2. Use the dial pad keys to enter the number.
- 3. The telephone automatically returns to pulse dial mode after you end the call.



#### Chain dialing

While on a call, you can initiate a dialing sequence from numbers stored in the directory, caller ID history or redial list. Doing this can be useful if you need to access numbers other than telephone numbers (such as bank account numbers or access codes).

#### To access the directory while on a call:

- 1. Press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll to >DIRECTORY, then press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll or press the dial pad keys (0-9) to find the desired entry (see To search by name on page 29).
- 4. Press **MENU/SELECT**. The telephone automatically dials the displayed number.

## To access the caller ID log while on a call:

- 1. Press MENU/SELECT.
- 2. Press ▲DIR or ▼CID to scroll to >CALL LOG, then press MENU/SELECT.
- 3. Press ▲DIR or ▼CID to scroll to the desired entry (if necessary to view the dialing options, press #. See To view the dialing options on page 36 for more details).
- 4. Press **MENU/SELECT**. The telephone automatically dials the displayed number.









## Options while on calls

#### To access the redial list while on a call:

- Press REDIAL/PAUSE. The screen shows the number most recently called. If it is not the desired number, press ▲DIR or ▼CID to scroll to the desired number.
- Press MENU/SELECT. The handset dials the displayed number.



## NOTES:

- While on a call, you cannot edit a directory entry or copy a caller ID entry into the directory.
- If someone else is already using the directory, speed dial list, caller ID history or answering system, when you attempt to access one of them, the screen shows NOT AVAILABLE AT THIS TIME.
- Press —OFF/CLEAR to exit directory, caller ID history or redial list and return to the call without dialing the displayed number.

#### Join a call in progress

If a handset is already on a call and you would like to join the call:

 Press —PHONE/FLASH or SPEAKER on another system handset.

To end the call:

 Press —OFF/CLEAR or place the handset in the telephone base or charger.



The call does not end until all handsets hang up.

NOTE: You can only use two system handsets at the same time on an outside call. If another handset attempts to join the call, the handset screen shows UNABLE TO CALL TRY AGAIN.

#### Handset locator

You can use the handset locator feature to find misplaced handsets.

#### To start the paging tone:

 Press FHANDSET LOCATOR on the telephone base to start the paging tone on all handsets for 60 seconds.

#### To stop the paging tone:

- Press —PHONE/FLASH, ◆) SPEAKER, or any dial pad key (0-9, \*\times or \*#) on the handset(s).
  - -OR-
- Press & HANDSET LOCATOR on the telephone base.
   -OR-
- Place the handset in the telephone base or charger.

## NOTES:

- If you press OFF/CLEAR or MUTE/DELETE on a handset, the ringer of that handset is silenced but the paging tone continues on the other handsets.
- If the handset is accessing the answering system, on a call (intercom call or outside call), or out of range, that handset does not beep when paged.
- You cannot use the handset locator feature while the telephone base is playing messages or the answering system is being accessed remotely.





#### Intercom

#### To make and answer an intercom call

Use the intercom feature for conversations between handsets.

- 1. Press INT on your handset when not in use.
  - If you have two handsets, your handset screen shows CALLING HANDSET X.
  - If you have more than two handsets, your screen shows INTERCOM TO:. Use the dial pad keys to select the other handset. Your handset screen shows CALLING HANDSET X.
  - The other handset rings and its screen shows HANDSET X IS CALLING.
- 2. To answer the intercom call, press any dial pad key (0-9, ★, or #), →PHONE/FLASH, ◆) SPEAKER or INT on the other handset. Both handset screens now show INTERCOM.
- 3. To end an intercom call, press **SOFF/CLEAR** or place the handset back in the telephone base or charger. Both handset screens now show **INTERCOM ENDED**.



## NOTES:

- Before the intercom call is answered, you can cancel the intercom call by pressing
   OFF/CLEAR or INT on your originating handset.
- If the other handset is not answered within 100 seconds, or if it is in use, on a call or out of range, your originating handset shows UNABLE TO CALL TRY AGAIN.
- Pressing TCF/CLEAR or MUTE/DELETE temporarily silences the intercom ringer.
- If you have four handsets, when two handsets are on an intercom call, the other two system
  handsets can be used on an outside call (see Join a call in process on page 22) or a separate
  intercom call.
- If you have five handsets and four of them are on intercom calls, you can use the other handset for an outside call.

#### To answer an incoming call during an intercom call

If you receive an incoming outside call during an intercom call, there is an alert tone.

#### To answer the incoming outside call:

• Press -PHONE/FLASH. The intercom call ends automatically.

#### To end the intercom call without answering the incoming outside call:

• Press **GFF/CLEAR**. The intercom call ends and the handsets ring for the incoming call.

#### To let the answering system answer the incoming outside call:

• Do nothing. Continue with the intercom call. If the answering system is on, it answers the incoming call after the number of rings you have set.

## Call transfer using intercom

Use the intercom feature to transfer an outside call to another system handset.

- 1. During a call, press INT.
  - If you have two handsets, the outside call is put on hold and your handset screen shows CALLING HANDSET X. The other handset rings and its screen shows HANDSET X IS CALLING.
  - If you have more than two handsets, your screen shows INTERCOM TO:. Use the dial pad keys to enter a handset number. The outside call is put on hold and your handset screen shows CALLING HANDSET X. The other handset rings and its screen shows HANDSET X IS CALLING.
- 2. To answer the intercom call on the other handset, press any dial pad key (0-9, \*, or #), →PHONE/FLASH,
   ◆ SPEAKER or INT. The outside call is still on hold and both handsets now show INTERCOM. You can now have a private conversation between the system handsets.



- To cancel the intercom call and return to the external call before the intercom call is answered, press —OFF/clear, —PHONE/FLASH or INT on your originating handset.
- If the other handset is not answered within 100 seconds, or if it is in use, on a call or
  out of range, the calling handset shows UNABLE TO CALL TRY AGAIN on its screen and
  automatically returns to the external call.
- 3. From the intercom call, you have the following options:
  - You can let the other handset join you on the outside call in a three-way conversation. Press and hold **INT** on the calling handset.
  - You can transfer the call. Press —OFF/clear, or place your handset back in the telephone base or charger. Your handset screen shows CALL TRANSFERRED. The other handset automatically connects to the outside call.
  - You can switch between the outside call (OUTSIDE CALL appears on the screen) and the intercom call (INTERCOM appears on the screen).
     Press INT on the originating handset to switch.
  - The other person can end the intercom call by **OFF/CLEAR** or by placing the other handset back in the telephone base or charger. The outside call continues with the original system handset.









## Directory overview

#### **Shared directory**

The directory is stored in the telephone base, and is shared by all handsets. Changes made to the directory on any one handset apply to all. Charlie Johnson 888-883-2445

NOTE: Only one handset can review the directory at a time. If another handset attempts to enter the directory, the screen shows NOT AVAILABLE AT THIS TIME.

#### **Directory memory capacity**

The directory can store up to 100 entries, with a maximum of 15 alphanumeric characters (including spaces) for the names and 30 digits for the telephone numbers. A convenient search feature can help you find and dial numbers quickly (see **To search by name** on page 29).

If there are already 100 entries, the screen shows **DIRECTORY FULL**. You cannot store a new number until you delete one.

If the directory is empty, when you access it, the screen shows **DIRECTORY EMPTY**.



#### **Exiting the directory**

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display. <u>Press and hold</u> **OFF/CLEAR** to return to the idle mode.



## Speed dial overview

This telephone has 10 speed dial locations where you can assign telephone numbers from the directory you wish to dial numbers using only two key presses. For more details, refer to **Speed dial locations** on page 31.



The speed dial locations are in the telephone base and is shared by all handsets. Changes made to the entries in the speed dial locations on any one handset apply to all.

NOTE: Only one handset can access the speed dial locations at a time. If another handset attempts to access the speed dial locations, the screen shows NOT AVAILABLE AT THIS TIME.

## Create directory entries

#### To create a new directory entry

- 1. Press MENU/SELECT in idle mode.
- 2. Press **△DIR** or **▼CID** to scroll to **>DIRECTORY**, then press **MENU/SELECT**.
- 3. Press **ADIR** or **▼CID** to scroll to **>ADD CONTACT**.
- 4. Press MENU/SELECT.
- 5. Enter the telephone number when prompted.
  - Copy a number from redial:
    - a. Press REDIAL/PAUSE.
    - b. Press ▲DIR or ▼CID or press REDIAL/PAUSE repeatedly to locate the number to copy.
    - c. Press MENU/SELECT to copy the number.

#### -OR-

- Use the dial pad keys to enter a number (up to 30 digits).
  - Press ADIR or ▼CID to move the cursor to the right or left.
  - Press and hold redial/PAUSE to enter a three-second dialing pause (a P appears).
  - Press mute/DELETE to erase digits.
  - Press and hold MUTE/DELETE to erase all digits.
- 6. Press MENU/SELECT to save the number in the display.
- 7. Enter the name when prompted. Use the dial pad keys and refer to Character chart on page 28 to enter a name (up to 15 characters). Each time you press a key, the character on that key appears. Additional key presses produce other characters on that key.
  - Press 0 to add a space.
  - Press ▲DIR or ▼CID to move the cursor to the right or left.
  - Press MUTE/DELETE to erase a character.
  - Press and hold MUTE/DELETE to erase all characters.



FNTER NUMBER

Ĥ

888-883-2445

## Create directory entries

• The first letter of every word is capitalized. The remaining letters in a word start as lower case letters, as shown in the character chart:

Dial key	Characters by number of key press										
	1	2	3	4	5	6	7	8	9	10	11
1	1		-	,	(	)	*	#	&	/	,
2	а	b	С	А	В	С	2				
3	d	е	f	D	Е	F	3				
4	g	h	i	G	Н	I	4				
5	j	k	l	J	K	L	5				
6	m	n	0	М	N	0	6				
7	р	q	r	S	Р	Q	R	S	7		
8	t	u	V	Т	U	V	8				
9	W	Х	У	Z	W	Х	Υ	Z	9		
0	space	0									

8. Press MENU/SELECT to store your new directory entry. The handset shows SAVED and there is a confirmation tone.



- The screen shows NUMBER ALREADY SAVED if the number is already in the directory. You
  cannot save the same number more than once.
- If you pause for too long while creating an entry, the procedure times out and you have to begin again.

#### To add a predialed telephone number to the directory

- 1. While the handset is in idle mode, use the dial pad keys to enter the telephone number (up to 30 digits).
  - <u>Press and hold</u> <u>REDIAL/PAUSE</u> to insert a three-second dialing pause (a P appears).
  - Press MUTE/DELETE to make corrections.
- Press MENU/SELECT to edit the telephone number. Refer to Step 5 in To create a new directory entry on page 27.
- 3. Press MENU/SELECT to edit the name. Refer to Step 7 in To create a new directory entry on page 27.
- Press MENU/SELECT to store your new directory entry.
   The handset shows SAVED and sounds a confirmation tone.







## Reviewing the directory

#### To review directory entries

 Press ADIR when in idle mode to show the first entry in the directory. DIRECTORY EMPTY appears if there are no directory entries.

-OR-

You can also show the first entry in the directory by pressing MENU/SELECT when in idle mode. Press ▲DIR or ▼CID to scroll to >DIRECTORY, then press MENU/SELECT twice to select >REVIEW.

2. Press **△DIR** or **▼CID** to browse through the directory. Entries appear alphabetically by the first letter in the name.





- If the telephone number in the directory exceeds 15 digits, <\* appears in front of the telephone number. Press **TONE**\* to move towards the end of the telephone number or press # to move towards the beginning of the telephone number.
- If you pause for too long while reviewing an entry, the procedure times out and you have to begin again.

#### To search by name

- Press ▲DIR when in idle mode to show the first entry in the directory.
- 2. When an entry appears, press the dial pad keys (0-9) to start a name search (alphabetical search).

The directory shows the first name beginning with the first letter associated with the dial pad key, if there is an entry in the directory that begins with that letter. Press ▲DIR or ▼CID to scroll through the entries beginning with that letter.

To see other names that start with the letters on the same dial pad key, keep pressing the key until the desired letter is shown. The names appear in alphabetical order.

For example, if you have the names Jennifer, Jessie, Kevin and Linda in your directory:

- If you press **5 (JKL)** once, **J** and then **Jennifer** displays.
- If you press 5 (JKL) once, J displays. Press ▼CID. Jessie displays.
- If you press 5 (JKL) twice, K and then Kevin displays.
- If you press 5 (JKL) three times, L and then Linda displays.
- If you press 5 (JKL) four times, 5 displays.
- If you press **5 (JKL)** five times, **J** displays and then **Jennifer** displays again.

NOTE: If you press a dial pad key (0-9) and no name starts with any letter on that key, the directory shows the entry that matches the next letter in the directory.



1) (ABC 2) (DEF 3)

## Dialing, deleting and editing a directory entry

You can dial, delete or edit a displayed directory entry. See **To review directory entries** or **To search by name** on page 29 to show an entry from the directory first.



#### To dial a directory number

 While reviewing a directory entry, press —PHONE/FLASH or SPEAKER to dial the displayed telephone number from the directory (known as Display Dial).

 


#### To delete a directory entry

- While reviewing a directory entry, press MUTE/DELETE.
   The screen shows DELETE CONTACT?.
- Press MENU/SELECT to delete the displayed entry from the directory. The handset shows DELETING... and then CONTACT DELETED with a confirmation tone. Once deleted, you cannot retrieve that entry.

Press —OFF/CLEAR to exit and leave the entry intact.

NOTE: If the directory entry you deleted is also in the speed dial location, the telephone will automatically clear the speed dial location that



Robert Brown

## To edit a directory entry

entry occupied.

- While reviewing a directory entry, press MENU/SELECT.
   The screen shows EDIT NUMBER with the current number of the entry.
- 2. Follow Step 5 in **To create a new directory entry** on page 27 to edit the digits.
- Press MENU/SELECT to save the number in the display. The screen shows EDIT NAME with the current name of the entry.
- 4. Follow Step 7 in **To create a new directory entry** on page 27 to edit the characters.
- 5. Press **MENU/SELECT** to confirm. The handset shows **SAVED** with a confirmation tone and then shows the updated entry.





## Speed dial locations

#### To assign or reassign a directory entry to a speed dial location

- 1. Press MENU/SELECT in idle mode.
- 2. Press ▲DIR or ▼CID to scroll to >DIRECTORY, then press MENU/SELECT.
- 3. Press ▲DIR or ▼CID to scroll to >SPEED DIAL, then press MENU/SELECT.
- 4. To assign a speed dial location, press **△DIR** or **▼CID** to scroll to an empty speed dial location.

-OR-

To reassign a speed dial location, press **△DIR** or **▼CID** to scroll to the desired speed dial location.

- 5. Press MENU/SELECT to show the directory.
- 6. Press ▲DIR or ▼CID to browse through the directory and find the desired entry.

-OR-

Use the alphabetical search to find the desired entry. Refer to Steps 2 and 3 in **To search by name** on page 29.

7. Press MENU/SELECT to confirm. The name (up to 12 characters) of the desired directory entry appears in the selected speed dial location.

>SPEED DIAL
REVIEW









- If the directory is empty, when you press MENU/SELECT in Step 5, the screen shows DIRECTORY EMPTY.
- If the speed dial location you selected is occupied, the new directory entry you selected
  replaces the old one. Take caution not to replace entries you do not wish to delete from the
  speed dial locations.

## To clear a speed dial location

- Follow Steps 1 through 3 in To assign or reassign a directory entry to a speed dial location on this page to enter the speed dial list.
- 2. Press ▲DIR or ▼CID to scroll to a speed dial location.
- 3. Press MUTE/DELETE to clear the selected speed dial location. <EMPTY> appears in that speed dial location.

NOTE: Clearing the speed dial locations does not affect the entries in the directory.

>Ø:Charlie Johnson 1: Robert Brown



# Speed dial locations

# To dial a speed dial number

- 1. When in idle mode, <u>press and hold</u> a dial pad key (0-9) to display the desired speed dial entry.
- 2. Press → PHONE/FLASH or ◆ SPEAKER to dial the displayed telephone number (known as Display Dial).



**NOTE:** If the speed dial location you selected is empty, the screen shows the speed dial list.

#### About caller ID

This product supports caller ID services offered by most telephone service providers. Caller ID allows you to see the name, number, date and time of calls. The available caller ID information will appear after the first or second ring.

#### Information about caller ID with call waiting

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the call, even while on another call.

It may be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate services (you may need to combine these services).
- You have only caller ID, or only call waiting service.
- You don't subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering caller ID services and if both telephone service providers use compatible equipment. The time and date are sent by the telephone service provider along with the call information.



The caller ID information may not be available for every incoming call. The callers may intentionally block their names and/or telephone numbers.

NOTE: You can use this product with regular caller ID service, or you can use this product's other features without subscribing to either caller ID or combined caller ID with call waiting service.

#### About home area code

See **Home area code** on page 14 to determine if you should enter your area code. Entering the area code changes how numbers are displayed in the caller ID log and how to return a call from the caller ID log (see **To view the dialing options** on page 36).

# Caller ID history

#### How caller ID history (call log) works

The telephone stores caller ID information about the last 50 incoming calls in the telephone base. Each entry may have up to 24 digits for the telephone number and 15 characters for the name. Entries are stored in reverse chronological order. The telephone deletes the oldest entry when the log is full to make room for new calls. This information is common to all handsets, so changes made to any handset are reflected in all other handsets. If you answer a call before the information appears on the screen, it does not show in the caller ID log.

NOTE: The caller ID information might not be available for every incoming call. The callers might intentionally block their names and/or telephone numbers (see Reasons for missing caller ID information on page 35).

#### **Memory match**

If the incoming telephone number matches the last seven digits of a telephone number in your directory, the name that appears on the screen matches the corresponding name in your directory.



For example, if Christine Smith calls, her name appears as **Chris** if this is what you entered into your directory.

**NOTE:** The number shown by your caller ID is in the format sent by the telephone service provider. The telephone service provider usually delivers ten-digit telephone numbers (area code plus telephone number). If the telephone number of the caller does not match a number in your directory, the name appears as it is delivered by the telephone service provider. For example, if the telephone service provider includes the area code and the directory number does not, the name appears as delivered by the telephone service provider.

#### Missed (new) calls indicator

When you have calls that have not been reviewed, the handset idle screen shows **XX MISSED CALLS**.

All entries that have not been reviewed are counted as missed (new) calls. Each time you review a caller ID history entry marked **NEW**, the number of missed calls decreases by one.

If you do not want to review the missed (new) calls one by one, but you still want to keep them in the caller ID history, you can <u>press and hold</u> —OFF/CLEAR for four seconds when the handset is idle. All the entries in the caller ID history are considered old (reviewed), and the missed calls message goes away.





#### Reasons for missing caller ID information

There are occasions when other information or no information shows for various reasons:

Screen message	Reason
PRIVATE NAME	The caller prefers not to show the name.
PRIVATE NUMBER	The caller prefers not to show the telephone number.
PRIVATE CALLER	The caller prefers not to show the name and telephone number.
UNKNOWN NAME	Your telephone service provider cannot determine the caller's name.
UNKNOWN NUMBER	Your telephone service provider cannot determine the caller's telephone number.
UNKNOWN CALLER	Your telephone service provider cannot determine the caller's name and telephone number. Calls from other countries may also generate this message.

 
#### To review the caller ID history

Review the caller ID history to find out who called, to return the call or to copy the caller's name and number into your directory. **CALL LOG EMPTY** appears if there are no records in the caller ID history.

1. When a handset is in idle mode, press ▼CID to review the caller ID history in reverse chronological order starting with the most recent call.

You can also review the caller ID history by pressing **MENU/SELECT**. Press **ADIR** or **▼CID** to scroll to **>CALL LOG**, then press **MENU/SELECT** twice to select **>REVIEW** 

- Press ▲DIR or ▼CID to scroll through the list. A double beep sounds when the list reaches the beginning or end of the caller ID history.
- Press OFF/CLEAR to exit the caller ID history.





- If the telephone number has more than 15 digits, only the last 15 digits appear in the caller ID history.
- Only one handset can review the caller ID history at a time. If another handset attempts to
  enter the caller ID history, it shows NOT AVAILABLE AT THIS TIME.

# To view the dialing options

Although the caller ID history entries received typically have 10 digits (the area code plus the seven-digit number), in some areas, you might need to dial only the seven digits, or 1 plus the seven digits, or 1 plus the area code

plus the seven digits. You can follow the steps to change the number of digits that you dial from or store in the directory:

- Follow Steps 1 and 2 in To review the caller ID history on this page to find the entry.
- Before dialing or saving the telephone number in the directory, press # repeatedly to show different dialing options for local and long distance numbers.

-OR-

Before dialing or saving the telephone number in the directory, press **1** repeatedly if you need to add or remove **1** in front of the telephone number.

Press # → 1-800-360-4121
Press # → 360-4121
Press # → 1-360-4121
Press # → 800-360-4121
-ORPress 1 → 1-800-360-4121
Press 1 → 800-360-4121

Robert Brown

800-360-4121

NOTE: If you do not need to dial the area code for local calls, make sure to program your home area code (see **Home area code** on page 14).

#### To dial a caller ID history number

- While reviewing the caller ID history, press ▲DIR or ▼CID
  to browse through the caller ID history and find the entry.
- 2. Press → PHONE/FLASH or ◆ SPEAKER to dial the displayed telephone number from the caller ID history (known as Display Dial).



Christine Smith

ρ: ρ1:30

11/20

PHONE

10:30<sub>PM</sub>



- If the telephone number has more than 15 digits, only the last 15 digits appear in the caller ID history. But, the telephone can still dial out all digits (up to 24 digits) of that telephone number.
- You might need to change how a caller ID number is dialed if the entry
  does not appear in the correct format. Caller ID numbers might appear with an area code
  that is not necessary for local calls, or without a 1 that is necessary for long distance calls.
  For details, see To view the dialing options on page 36.

#### To delete caller ID history entries

#### To delete a caller ID history entry:

- 1. While reviewing the caller ID history, press **△DIR** or **▼CID** to browse through the caller ID history and find the entry.
- Press MUTE/DELETE to delete the displayed entry from the caller ID history. The screen shows DELETING... with a confirmation tone. Once deleted, you cannot retrieve that entry.



#### To delete all caller ID history entries:

- 1. Press MENU/select in idle mode.
- 2. Press ▲DIR or ▼CID to scroll to >CALL LOG, then press MENU/SELECT.
- 3. Press ▲DIR or ▼CID to scroll to >DEL ALL CALLS. Press MENU/SELECT. The screen shows DELETE ALL CALLS?.
- Press MENU/SELECT to delete all entries from the caller ID history. The screen shows DELETING... with a confirmation tone. Once deleted, you cannot retrieve an entry.

-OR-

Press **GFF/CLEAR** to exit and leave all entries in the caller ID history intact.





#### Saving a caller ID history entry in the directory

- While reviewing the caller ID history, press ▲DIR or ▼CID to browse through the caller ID history and find the desired entry.
- 2. Press MENU/SELECT. The screen shows EDIT NUMBER.
- 3. Use the dial pad keys to modify the telephone number (up to 24 digits).
  - Press ▲DIR or ▼CID to move the cursor to the right or left.
  - <u>Press and hold</u> <u>REDIAL/PAUSE</u> to enter a three-second dialing pause (a P appears).
  - Press MUTE/DELETE to erase a digit.
  - Press and hold MUTE/DELETE to erase all digits.
- Press MENU/SELECT to save the number in the display.
   The screen shows EDIT NAME.
- 5. Use the dial pad keys and refer to **Character chart** on page 28 to modify the name (up to 15 characters).
  - Press 0 to add a space.
  - Press ADIR or ▼CID to move the cursor to the right or left.
  - Press MUTE/DELETE to erase a character.
  - Press and hold MUTE/DELETE to erase all characters.
- Press MENU/SELECT to confirm. The screen shows SAVED with a confirmation tone.

# NOTES:

- The screen shows NUMBER ALREADY SAVED if the number is already in the directory. You
  cannot save the same number more than once.
- If the directory is full, the screen shows DIRECTORY FULL.
- If you try to save a caller ID history entry to the directory without a number, UNABLE TO SAVE displays.
- If the telephone number has more than 15 digits, only the last 15 digits appear in the caller ID history. But, the telephone can still save all digits (up to 24 digits) of that telephone number from the caller ID history in the directory.
- You might need to change how a caller ID number is saved in the directory if the entry does
  not appear in the correct format. Caller ID numbers might appear with an area code that
  is not necessary for local calls, or without a 1 that is necessary for long distance calls. For
  details, see To view the dialing options on page 36.







Use the answering system menu of a system handset to turn on or off the answering system, record your announcement, activate the call screening, change the number of rings, set the remote access code and activate the message alert tone.

#### Answer on/off

Unless you change it, the answering system is on and ready to record messages. If the answering system is on, the **ANS ON** icon displays on the handset screen and the **OANSWER ON/OFF** light on the telephone base is on. You can turn the answering system off, but if you do so, the answering system does not answer calls and record incoming messages.

#### Using the handset:

- 1. Press MENU/SELECT in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- 3. Press **ADIR** or **▼CID** to scroll to **>ANSWERING ON/OFF**, then press **MENU/SELECT**.
- 4. Press ▲DIR or ▼CID to select between ON and OFF, then
  press MENU/SELECT to save the setting. There is a confirmation tone.

#### Using the telephone base:

 Press & ANSWER ON/OFF to turn the answering system on or off. If the answering system is turned on, it announces, "Calls will be answered." If the answering system is turned off, it announces, "Calls will not be answered."



ANSIJER ONZOFE

>ON

# NOTES:

- If the answering system is off and there is an incoming call, the system answers after 10 rings and announces to the caller, "Please enter your remote access code." For more information about remote access, see Remote access on page 51.
- You can turn the answering system on or off from either the handset or the telephone base, but you can only use the handset to change the other answering system settings.
- You cannot turn the answering system on or off while a handset is on a call or the telephone base is playing messages.
- During an incoming call, press OANSWER ON/OFF if you wish to immediately send the call
  to the answering system.

#### **Announcement**

The announcement is the greeting callers hear when calls are answered by the answering system.

The telephone has a default announcement, "Hello. Please leave a message after the tone." You can use this announcement, or record your own announcement.

You can record an announcement up to 90 seconds. The system does not record any announcement shorter than two seconds.

#### To play the current announcement:

- 1. Press MENU/SELECT in idle mode.
- Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- Press MENU/SELECT to choose >ANNOUNCEMENT. The system announces, "To play, press 2. To record, press 7."
- 4. Press **2** to play the current announcement from the speakerphone.
  - Press ADIR/VOLUME to increase or press VCID/VOLUME to decrease the message playback volume.
  - Press SPEAKER to switch between speakerphone and handset earpiece.

# XANNOUNCEMENT DELETE ALL OLD



#### To record a new announcement:

- 1. Follow Steps 1 and 2 in **To play the current announcement** on this page.
- 2. Press **MENU/SELECT** to select **>ANNOUNCEMENT**. The system announces, "To play, press 2. To record, press 7."
- 3. Press **7**. The system announces "Record after the tone. Press 5 when you are done."
- 4. Face the handset and speak towards the microphone to record your announcement.
- 5. Press **5** when you finish the recording. The handset plays back the recorded announcement.

**NOTE:** If the answering system memory is full, when you press **7** in Step 3, the answering system announces, "Memory is full." You must delete some messages before you can record a new announcement. Refer to **Message playback** on page 46.

#### To delete your announcement:

- 1. Follow Steps 1 through 4 in **To play the current announcement** on page 40 to play the announcement.
- 2. Press **3** during playback to delete your recorded announcement. The system announces, "Announcement deleted."

If your announcement is deleted, calls are answered with the default announcement, "Hello. Please leave a message after the tone."

#### Call screening setup

You can choose whether incoming messages are played through the speaker on the telephone base while they are being recorded.

To change the settings:

- 1. Press MENU/SELECT when in idle mode to enter the main menu.
- 2. Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll to >ANS SYS SETUP. Press MENU/SELECT.
- CALL SCREENING >ON
- 4. Press MENU/SELECT to select >CALL SCREENING.
- Press ▲DIR or ▼CID to choose ON or OFF.
- 6. Press MENU/SELECT to confirm your setting. There is a confirmation tone.



#### **Number of rings**

You can set the answering system to answer an incoming call after two, four or six rings. You can also select toll saver, which is explained below. Unless you change it, the answering system answers an incoming call after four rings.

To set the number of rings:

- 1. Press MENU/select in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll to >ANS SYS SETUP. Press MENU/SELECT.
- Press ▲DIR or ▼CID to scroll to ># OF RINGS, then press MENU/SELECT.



- 5. Press **ADIR** or **▼CID** to scroll and choose among **2**, **4**, **6** or **TOLL SAVER**.
  - Toll saver- the answering system answers a call after two rings when you have new messages, and after four rings when there are no new messages. This feature allows you to check for new messages and avoid paying long distance charges if you are calling from out of your local area.
- 6. Press MENU/SELECT to confirm your setting. There is a confirmation tone.

NOTE: If you subscribe to a voicemail service offered through your telephone service provider, see Answering system and voicemail on page 43.

#### Remote access code

To access your answering system remotely from any touchtone telephone, you need to enter a two-digit number (00-99). Unless you change it, the remote access code is 19.



To change the remote access code:

- 1. Follow Steps 1-3 in Number of rings on page 41.
- 2. Press **ADIR** or **▼CID** to scroll to **>REMOTE CODE**, then press **MENU/SELECT**.
- 3. Press ▲DIR or ▼CID to select the remote access code, or use the dial pad keys to enter the correct number (00-99).
- 4. Press MENU/SELECT to confirm your setting. There is a confirmation tone.



NOTE: For more details about the remote access feature, refer to Remote access on page 51.

# Message alert tone

When the message alert tone is set to ON, and there is at least one new message, the telephone base beeps every 10 seconds. Unless you change it, the message alert tone is set to off.

To change the setting:

- 1. Follow Steps 1-3 in **Number of rings** on page 41.
- 2. Press **ADIR** or **▼CID** to scroll to **>MSG ALERT TONE**, then press MENU/SELECT.



4. Press MENU/SELECT to confirm your setting. There is a confirmation tone.



- The message alert tone beeps only if all the following conditions are met:
  - Answering system is on.
  - Message alert tone is on.
  - There are new messages.
- · To temporarily turn off the message alert tone, see Temporarily turning off the message alert tone on page 45.

MSG ALERT TONE >OFF

Ĥ

# Answering system and voicemail

#### About answering system and voicemail

Your telephone has separate indicators for two different types of voice messages: those left on its built-in answering system and those left at vour service provider's voicemail (fees may apply). Your telephone's builtin answering system messages and voicemail messages are separate. Each alerts you to new messages differently.

If M and NEW VOICEMAIL display on the handset, your telephone service provider is indicating that it has new voicemail for you. To listen to your voicemail, dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

To use your voicemail service rather than the answering system, turn off the answering system. To use the answering system rather than your voicemail service, contact your telephone service provider to deactivate the voicemail service. You can also use your telephone answering system and voicemail together by setting the built-in answering system to answer before voicemail answers, as described below. To learn how to program your voicemail settings, contact your telephone service provider. Then, if you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

If you have voicemail provided by your telephone service provider, we recommend setting your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

# Answering system new message indicator

When there are new messages (including memos) on the answering system, the number of new messages stored flashes in the message window on the telephone base and the oo icon and XX NEW MESSAGES HANDSET 1

16 NEW MESSAGES

Ê

9

11/20

appear on the screen of each system handset. If the new message alert tone is turned on, the telephone base beeps every 10 seconds when there are new messages.

10:30<sub>PM</sub> To listen to messages recorded on your digital answering system, use the **PLAY MESSAGES** menu from a handset or press ▶/■PLAY/stop on the telephone base (see Message playback on page 46).

# Answering system overview

#### **Voice prompts**

The system provides voice prompts to guide you through recording announcements and remote access.

#### Message capacity

The answering system can record up to 99 messages, depending on the length of each message. Individual messages can be up to four minutes, and the approximate recording time is 14 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

If the answering system has less than three minutes of recording time left, the remaining time is announced at the end of messages playback.

If the memory is full, the answering system announces, "Memory is full." The number of messages and **F** flash, alternately, in the message window, and **REC MEM FULL** appears on the handset screen. You must delete some messages before recording new ones.

#### Call screening

If the answering system and call screening are on, the announcement and the incoming message broadcast at the telephone base when a call arrives.

You can turn call screening on or off using the handset (see Call screening setup on page 41). When call screening is off, you can temporarily turn on the call screening by pressing ►/■PLAY/STOP or ▲▼VOLUME on the telephone base. The call screening will be off for the next incoming call.

If call screening is on and you want to adjust the playback volume to a comfortable level (1-8) while it is recording messages, press AVVOLUME on the telephone base. This volume setting is shared with message playback, so when you play messages at volume 1, they play at a very low volume. If you turn up the volume for playback, the call screening for the next incoming message plays at the same volume level.

If call screening is on and you want to silence the telephone base while it is recording messages, press **>/= PLAY/STOP** on the telephone base. The call screening will be on for the next incoming call.

# Answering system overview

#### **Call intercept**

While call screening, you can press **→PHONE/FLASH** or **◆SPEAKER** on the handset to stop recording and speak to the caller.



#### Temporarily turn off the message alert tone

Follow the step to temporarily silence the message alert tone:

 When the telephone base is in idle mode, press any telephone base key (except FHANDSET LOCATOR).

The message alert tone is activated again with the next incoming message.



# NOTES:

- When the telephone base is in idle mode, if you press X DELETE to temporarily silence the message alert tone, there is a voice prompt to direct you to press X DELETE again to delete all old messages (see To delete all old messages at the telephone base on page 48). If you are not going to delete all old messages, wait at least 5 seconds to allow the telephone base to return to idle mode.
- To turn off the message alert tone, see Message alert tone on page 42.

# Message playback

#### To listen to messages

You can use either a handset or the telephone base to play messages. If there are new messages, the system plays back only the new messages (oldest first). If there are no new messages, the system plays back all old messages (oldest first).

 
When playback begins, the total number of messages is announced. Before each message, you hear the day and time it was received. After the last message, you hear "End of messages." If the system has less than three minutes of recording time left, you hear the remaining time. If the memory of the answering system is full, you hear "Memory is full."

# NOTES:

- If the date and time is not set when a message is recorded, the system announces, "Time and date not set" before the message is played. To set the date and time, see Set date/time on page 13.
- Only one handset or the telephone base can access the answering system at a time.
- · While a handset is on a call, you cannot play messages.

#### To listen to messages at the telephone base:

- 1. Press ►/■/PLAY/STOP on the telephone base to listen to the messages.
- 2. The system announces the number of messages, then begins playback. The message sequence is shown on the message window.
- 3. Press ►/■/PLAY/STOP to stop the playback.



# To listen to messages at the handset:

- Press MENU/select when in idle mode to enter the main menu.
- 2. Press MENU/SELECT to select >PLAY MESSAGES.
- The system announces the number of messages, then begins playback. The message sequence is shown on the handset's screen.
- 4. Press **5** to stop the playback.

NOTE: If there are no messages in the answering system, the handset shows NO MESSAGE and announces, "You have no message."



6.0







# Message playback

#### **Options during playback**

When a message is playing, you can adjust the playback volume, skip, repeat, or delete the message.

#### When messages are playing on the telephone base:

- Press ▲▼VOLUME to adjust the message playback volume (1-8).
- To repeat the message currently playing, press
   REPEAT after the answering system plays the day and time the current message was received.
- To listen to the previous message, press «REPEAT
  while the answering system is playing the day and time
  the current message was received.



- Press > SKIP to skip to the next message.
- Press X DELETE to delete the message. The telephone base announces, "Message deleted."
- Press ►/■/PLAY/STOP to stop the playback.

#### When messages are playing on the handset:

- Press ▲DIR/VOLUME to increase or press ▼CID/VOLUME to decrease the message playback volume.
- Press ◆ SPEAKER to switch between speakerphone and handset earpiece.
- To repeat the message currently playing, press 4 after the answering system plays the day and time the current message was received.
- To listen to the previous message, press 4 while the answering system is playing the day and time the current message was received.
- Press 6 to skip to the next message.
- Press 3 to delete the message. The handset announces, "Message deleted."
- Press **5** to stop the playback.



# Message playback

#### To delete all old messages

Use this feature to delete all old messages. Once deleted, you cannot retrieve the deleted messages. New (unheard) messages cannot be deleted until you have listened to them.

NOTE: If there are no old messages and you press **X DELETE** on the telephone base, the system announces, "You have no old message." On the handset, when you select **DELETE ALL OLD**, the screen shows **NO MESSAGE**.

#### To delete all old messages on the telephone base:

- Press X DELETE on the telephone base. The system announces, "To delete all old messages, press delete again."
- Press X DELETE within three seconds. The system announces, "All old messages deleted."



#### To delete all old messages on the handset:

- 1. Press MENU/SELECT when in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- 3. Press **△DIR** or **▼CID** to scroll to **>DELETE ALL OLD**.
- Press MENU/SELECT. The screen shows DELETE ALL OLD MESSAGES?.
- Press MENU/SELECT to confirm. The screen shows DELETING... and then ALL OLD MSGS DELETED! with a confirmation tone.
   OR-

Press -OFF/CLEAR to exit and leave all old messages intact.



# Recording and playing memos

Memos are messages you record yourself. They are saved, played back and deleted exactly like incoming messages. You can record a memo as a reminder to yourself, or leave a message for someone else using the same telephone.

#### To record a memo

- 1. Press MENU/SELECT when in idle mode to enter the main menu.
- Press ▲DIR or ▼CID to scroll to >ANSWERING SYS, then press MENU/SELECT.
- 3. Press **△DIR** or **▼CID** to scroll to **>RECORD MEMO**.
- 4. Press MENU/SELECT. The system announces, "Record after the tone. Press 5 when you are done."



- Speak towards the microphone on the handset after a long beep. You can record a memo up to four minutes. Memos shorter than two seconds are not recorded.
- 6. Press **5** to stop recording. The system announces "*Recorded*" to confirm the recording has finished.

NOTE: If the answering system memory is full, when you press MENU/SELECT in Step 4, the answering system announces, "Memory is full."

#### To play back memos

Memos are stored as messages. See **Message playback** on pages 46-48 for instructions on playback and deletion.

# Message window displays

The message window on the telephone base displays the total number of messages. See the following table for other message window displays.

0	There are no messages in the answering system.
<b>O</b> (flashing)	After a power failure, the number in the message window flashes to indicate that the date and time need to be set.
1-99	<ul><li>Total number of messages and memos.</li><li>Current message number during old message playback.</li></ul>
<b>1-99</b> (flashing)	Total number of new messages and memos. The number flashes when there are new messages that have not been reviewed.
	<ul> <li>Current message number during new message playback.</li> <li>After a power failure, the number in the message window flashes to indicate that the date and time need to be set.</li> </ul>
1-99 and F (alternating)	Memory is full. Messages must be deleted before new messages can be recorded.
	<ul> <li>The answering system is being programmed by a system handset.</li> <li>The answering system is answering a call or recording a memo or announcement.</li> <li>The answering system is being accessed remotely.</li> </ul>
0-5	Telephone base ringer volume while adjusting.
1-8	Speaker volume level of the telephone base while adjusting.

#### Remote access

You can access the answering system remotely by dialing your home telephone number from any touch-tone telephone.

#### To remotely access the answering system

- 1. Dial your telephone number from any touch-tone telephone.
- When the answering system answers, enter the two-digit remote access code (19, unless you have changed it; refer to **Remote access code** on page 42). The answering system automatically announces the number of messages (new or old) if there are any.
- 3. If there are new messages, the answering system automatically begins to play all new messages only.

#### -OR-

If there are no new messages, the answering system automatically begins to play all old messages.

4. You can also enter the remote commands:

Play all messages 1	Press to listen to all messages. If there are new messages, the system plays back only the new messages (oldest first). If there are no new messages, the system plays back all old messages (oldest first).
Play new messages 2	Press to listen to new messages only.
Delete a message 3	Press during message playback to delete the current message.
Delete all old messages 33	Press to delete all old messages.
Replay current or previous message 4	To repeat the message currently playing, press <b>4</b> after the answering system plays the day and time the current message was received.
	To listen to the previous message, press <b>4</b> while the answering system is playing the day and time the current message was received.
Stop 5	Press to stop playback and recording.
Play help menu * 5	Press to listen to a list of remote commands.
Skip to next message 6	Press during playback to skip the current message and advance to the next message.
Record an announcement * 7	Press to record a new announcement. Begin speaking after the long beep.
Turn system on or off <b>o</b>	Press to turn the answering system on or off.
Exit 8 or hang up	Press to end remote access (the call is terminated).

Answering system operation

#### Remote access

5. Hang up to end the call and save all messages.

There is a wallet card listing the remote commands at the back of this user's manual. Cut it out and keep it in your wallet for quick reference.

# NOTES:

- If you do not enter a valid remote access code, the system answers the call automatically.
- If the date and time is not set when a message is recorded, the system announces, "Time and date not set" before the answering system announces the number of messages.
- If there are no messages in the answering system, the system announces, "You have no message."
- If there are no new messages in the answering system, when you press 2 to play back new
  messages, the system announces, "You have no new message."
- If you pause for more than four seconds during remote access, you hear a help menu listing all features and commands. If there is no command for another 20 seconds, the call ends automatically.
- If the memory is full, the answering system answers after 10 rings and announces, "Memory
  is full. Enter the remote access code." Enter your remote access code to access the messages
  and announcements.
- When the answering system is turned off, the telephone answers after 10 rings, and announces, "Please enter your remote access code."

# Screen icons, indicator lights and alert tones

#### Screen icons



[] (flashing)	Low battery; place the handset in the telephone base or charger to recharge.	
(flashing)		
or or	Indicates the battery voltage level.	
(animated display)	Battery is charging.	
or		
(animated display)		
•	The speakerphone is in use.	
Ď	The handset ringer is turned off.	
V M	New voicemail received from the telephone service provider.	
ANS ON	Answering system is turned on.	
00	New message in the answering system.	
NEW	While reviewing the caller ID history, missed calls that have not been reviewed.	
MUTE	Microphone is muted.	
10/16	While playing messages, the sequence of the message currently playing. (XX/YY; XX is the sequence of the message currently playing; YY is the total number of all new or old messages.)	

#### **Handset indicator lights**



#### **CHARGE** light

On when the handset is charging in the telephone base or charger.

Backlight (lighted display and dial pad)

On when a call is coming in.

On when a key is pressed.

#### **◆** SPEAKER

On when the speakerphone is in use.

# Screen icons, indicator lights and alert tones

#### Telephone base indicator lights



#### **O ANSWER ON/OFF** light

On when the built-in answering system is on.

#### IN USE light

On when the handset is in use, when the answering system is answering an incoming call or when the answering system is being accessed remotely.

Flashes when another telephone on the same line is in use. Flashes quickly when there is an incoming call.

#### Handset alert tones

One short beep (Key tone or playback confirmation tone)	A key is pressed. Plays at the end of each message.
One long beep (Recording or playback confirmation tone)	Start or end recording. Plays at the end of all messages.
Two short beeps (Error tone)	Command has failed.  You have reached the beginning or end of the list.  You have reached the minimum or maximum listening volume.
Three short beeps (Out-of-range or no-power-at- base warning tone)	The handset is out of range or there is no power at the telephone base.
Three short high-pitched beeps (Confirmation tone)	The telephone has completed the command successfully.
Four short beeps (Low-battery warning tone)	Low battery warning.

# **Telephone base alert tones**

One short beep (Playback confirmation tone)	Plays at the end of each message.
Beeps every 10 seconds (Message alert tone)	Message alert.
One long beep (Recording or playback confirmation tone)	The answering system starts recording a message if call screening is on. Plays at the end of all messages.

# Handset display screen messages

CALL LOG EMPTY	You are accessing an empty caller ID history.	
CALL TRANSFERRED	You have transferred an outside call to another cordless handset.	
Calling HANDSET X	The handset is calling another handset (for intercom calls). The handset is going to transfer an outside call to another handset.	
DIRECTORY EMPTY	There are no directory entries.	
DIRECTORY FULL	The directory is full. You cannot save any new entries unless you delete some current entries.	
	You have just ended a call.	
HANDSET X IS CALLING	Another handset is calling.	
INCOMING CALL	There is a call coming in.	
INTERCO	The handset is on an intercom call.	
INTERCOM ENDED	The intercom call has just ended.	
INTERCOM TO: (For EL52300, EL52350, EL52400, EL52410, EL52450, EL52500 or EL52510)	<ul> <li>You have started the intercom process, and need to enter the number of the handset you wish to call.</li> <li>You have started transferring a call, and need to enter the desired handset number.</li> </ul>	
LINE IN USE	An extension telephone on the same line or one of the handsets is in use.	
LOW BATTERY	The battery needs to be charged.	
MICROPHONE ON	Mute is off so the other party can hear your voice.	
MUTED	The microphone is off.	
NEW VOICEMAIL	There are new voicemail messages from your telephone service provider.	
NO BATTERY	You place the handset in the telephone base or charger without installing a battery in that handset.	
NO LINE	There is no telephone line connected.	
NO MESSAGE	There are no messages in the answering system.	
NOT AVAILABLE AT THIS TIME	Someone else is already using the directory, speed dial list, caller ID log or answering system.	
NUMBER ALREADY SAVED	The telephone number you have entered is already stored in the directory.	

# Handset display screen messages

OUT OF RANGE OR NO PUR AT BASE	The handset has lost communication with the telephone base.	
OUTSIDE CALL	You have connected to the external call during call transfer.	
** FFGING **	The telephone base is paging all handsets.	
PHONE	The handset is on a call.	
PLACE IN CHARGER	The battery is very low. The handset should be placed in the telephone base or charger.	
REC MEM FULL	The answering system memory is full.	
RINGER MUTED	The ringer is muted temporarily during an incoming call.	
SAJED	The entry is now in the directory.	
SPEAKER	The handset speakerphone is in use.	
UNABLE TO CALL. TRY AGAIN	<ul> <li>Failed intercom.</li> <li>Two handsets are already on a call.</li> <li>While the handset is on a call, it is out of range or there is no power at the telephone base.</li> </ul>	
UNABLE TO SAVE	You cannot save a caller ID history entry to the directory without a number.	
XX MISSED CALLS	There are new calls in the caller ID history.	
XX NEW MESSAGES	There are new messages in the answering system.	

If you have difficulty with your telephone, please try the following suggestions. For customer service, or to purchase accessories or replacement parts, visit our website at **www.telephones.att.com**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**. When you call customer service, you will need the serial number or model number found on the bottom of the telephone base.

#### My telephone doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure that the battery connector is securely plugged into the cordless handset.
- Make sure the telephone line cord is securely and firmly plugged into the telephone base and the telephone wall jack.
- Make sure the battery is fully charged. See **Technical specifications** on page 74 for battery charging times. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
- If the battery is depleted, it may take approximately 30 minutes to charge the handset before it shows LOW BATTERY, refer to Battery charging on page 6 for details.
- Reset the telephone base. Unplug the electrical power. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- You may need to purchase a new battery. Please refer to Battery installation on page 5.

# The display shows NO LINE. I cannot get a dial tone.

- First try all of the suggestions mentioned above.
- If the previous suggestions do not work, disconnect the telephone line cord from your telephone and connect the telephone line cord to another telephone.
  - If there is no dial tone on that other telephone either, your telephone line cord may be defective. Install a new telephone line cord.
  - If changing the telephone line cord does not help, the wall jack (or the
    wiring to this wall jack) may be defective. Try using a different wall jack
    in your home to connect your EL52200/EL52210/EL52250/EL52260/
    EL52300/EL52350/EL52400/EL52410/EL52450/EL52500/EL52510
    telephone, or contact your telephone service provider (charges may
    apply).

#### I cannot dial out.

First try all the suggestions in the item The display shows NO LINE.
 I cannot get a dial tone.

- Make sure you have a dial tone before dialing. The cordless handset may take a second or two to find the telephone base and produce a dial tone. This is normal. Wait an extra second before dialing.
- Check that all the telephones connected to the same telephone line are hung up.
- Make sure to set the dial mode to the correct setting (pulse dialing or tone dialing) for the service in your area (see **Dial mode** on page 14).
- Eliminate any background noise. Noise from a television, radio or other appliances may cause the telephone not to dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room in your home with less background noise.
- If the other telephones in your home are having the same problem, the problem is in your wiring or telephone service. Contact your telephone service provider (charges may apply).

# My cordless handset isn't performing normally.

- Make sure the power cord is securely plugged into the telephone base.
   Plug the power adapter into a different, working electrical outlet not controlled by a wall switch.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away from these types of electronic devices as possible: television sets, VCRs, or other cordless telephones.

# OUT OF RANGE OR NO PWR AT BASE appears on my cordless handset.

- Ensure that the telephone base is powered on.
- Place the cordless handset in the telephone base for one minute to allow the cordless handset and base to synchronize.
- Move the cordless handset closer to the telephone base. You might have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away from these types of electronic devices as possible: television sets, VCRs, or other cordless telephones.

#### The batteries do not hold a charge.

- If the cordless handset is in the telephone base or charger and the charge light does not come on, refer to the item **The charge light is off** on this page.
- Make sure the battery is fully charged. See Technical specifications on page 74 for battery charging times. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
- If the battery is depleted, it may take approximately 30 minutes to charge the handset before it shows LOW BATTERY. Refer to Battery charging on page 6 for details.
- You may need to purchase a new battery. Please refer to **Battery installation** on page 5.

#### The charge light is off.

- Make sure the power cord is plugged in correctly and securely.
- Make sure the battery is installed correctly in the handset. Follow the instruction in **Battery installation** on page 5 to install the battery.
- Unplug the electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Clean the cordless handset and telephone base charging contacts each month using a pencil eraser or cloth.

#### I get noise, static, or weak signals even when I'm near the telephone base.

- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (see Telephone base and charger installation on page 4). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Other electronic products, such as computers, wireless routers, microwave ovens and other cordless telephones can interfere with the performance of your cordless telephone. You may be able to improve the performance of your telephone by installing the telephone base as far away as possible from other electronic devices.
- Do not install this telephone near a microwave oven or on the same electrical outlet. You may experience decreased performance while the microwave oven is operating.
- If your telephone is plugged in with a modem or a surge protector, plug
  the telephone (or modem/surge protector) into a different location. If this
  doesn't solve the problem, relocate your telephone or modem farther
  apart from one another, or use a different surge protector.

- Relocate your telephone to a higher location. The telephone will likely have better reception when installed in a high area.
- If the other telephones in your home are having the same problem, the problem is in your wiring or telephone service. Contact your telephone service provider (charges may apply).

### I experience poor sound quality when using the speakerphone.

- For increased sound quality while using the speakerphone, place the handset on a flat surface with the dial pad facing up.
- When using a speakerphone, controlling background noise in your environment is essential. While you are listening to your party, press
   MUTE/DELETE to temporarily turn your microphone off. When it is your turn to speak, remember to press MUTE/DELETE again to turn the microphone on.
- Excessive background noise will cause a speakerphone to fade in and out. Try controlling the background noise by turning off any audio devices near the speakerphone. Also, try to avoid interrupting the person at the other end of the conversation while they are speaking. If background noise cannot be controlled, you should terminate speakerphone operation and return to normal handset mode.

#### I hear other calls while using my telephone.

 Disconnect the telephone base from the telephone wall jack, and plug in a different telephone. If you still hear other calls, the problem is probably in your wiring or telephone service. Call your telephone service provider (charges may apply).

# My calls cut in and out while I'm using my cordless handset.

- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from electronic devices such as wireless routers, or other cordless telephones.
- Move the handset closer to the base. The operating range may vary with
  environmental conditions and time of use. There may be places within your
  environment that a cordless telephone will not work well. If the problem
  only occurs in certain areas of your environment, you can conclude that
  there is nothing wrong with the telephone.
- Do not install this telephone near a microwave oven or on the same electrical outlet. You may experience decreased performance while the microwave oven is operating.
- If your telephone is plugged in with a modem or surge protector, plug
  the telephone (or modem/surge protector) into a different location. If this
  doesn't solve the problem, relocate your telephone or modem farther
  apart from one another, or use a different surge protector.

- Relocate your telephone base to a higher location. The telephone will have better reception when installed in a high area.
- If the other telephones in your home are having the same problem, the problem is in your wiring or telephone service. Contact your telephone service provider (charges may apply).
- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (see Telephone base and charger installation on page 4). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

#### My cordless handset does not ring when I receive a call.

- Make sure that the ringer is not turned off. Refer to Ringer volume on page 11.
- Make sure the telephone line cord is plugged securely into the telephone base and the telephone wall jack. Make sure the power cord is securely plugged in.
- The cordless handset may be too far from the telephone base.
- Make sure the battery is fully charged. See Technical specifications on page 74 for battery charging times. For optimum daily performance, return the cordless handset to the telephone base or charger when not in use.
- You may have too many extension telephones on your telephone line to allow all of them to ring simultaneously. Try unplugging one telephone at a time until the telephone start ringing.
- The layout of your home or office might be limiting the operating range. Try moving the telephone base to another location, preferably on an upper floor.
- If the other telephones in your home are having the same problem, the problem is in your wiring or telephone service. Contact your telephone service provider (charges may apply).
- Test a working telephone at the telephone wall jack. If another telephone
  has the same problem, the problem is the telephone wall jack. Contact
  your telephone service provider (charges may apply).
- Other electronic products can cause interference to your cordless telephone. Try installing your telephone as far away as possible from electronic devices such as wireless routers, or other cordless telephones.
- Completely remove and then replace the battery. Place the cordless handset in the telephone base. Wait for the cordless handset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.

 Your telephone line cord might be defective. Try installing a new telephone line cord.

#### My caller ID isn't working.

- Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your telephone.
- Your caller must be calling from an area that supports caller ID.
- Both your and your caller's telephone service providers must use caller ID compatible equipment.
- Make sure the home area code is set correctly in the telephone (see **Home area code** on page 14).
- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (see Telephone base and charger installation on page 4). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

#### My telephone does not receive caller ID when on a call.

 Make sure you subscribe to caller ID with call waiting features provided by your telephone service provider. Caller ID features work only if both you and the caller are in areas offering caller ID service, and if both telephone service providers use compatible equipment.

# A icon shows on the display and I don't know why.

 Your telephone has voicemail indication that is separate from the built-in answering system. If 
 appears on the display, then your telephone has received a signal from your telephone service provider that you have a voicemmail message waiting for you to retrieve from your telephone service provider. Contact your telephone service provider for more information on how to access your voicemail.

#### I cannot retrieve voicemail messages.

Your telephone has both a built-in answering system and voicemail
indicator. They are independent features and each alerts you to new
messages differently (see Answering system and voicemail on page 43).
 If you subscribe to voicemail service from your telephone service provider
(charges may apply), contact your telephone service provider for more
information on how to access your voicemail.

#### Incomplete messages.

• If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after four minutes.

- If the caller pauses for longer than seven seconds, the answering system stops recording and disconnects the call.
- If the answering system's memory becomes full during a message, the answering system stops recording and disconnects the call.
- If the caller's voice is very soft, the answering system may stop recording and disconnects the call.
- If someone picks up the call at a telephone on the same line during a message, the answering system stops recording and disconnects the call. Part of the message may be lost.

#### Difficulty hearing messages.

- Press ▲▼VOLUME to adjust the speaker volume on the telephone base.
- Press ADIR/VOLUME to increase the message playback volume on a handset.

#### The answering system does not answer after correct number of rings.

- Make sure the answering system is on. When the answering system is on,
   ANS ON should show on the handset and the ΦANSWER ON/OFF light is lit on the telephone base (see Answering on/off on page 39).
- If toll saver is selected, the number of rings changes to two when there are new messages (see **Number of rings** on page 41).
- If the memory is full or the answering system is off, the answering system answers after 10 rings.
- In some cases, the answering system is affected by the ringing system used by the telephone service provider.
- If you subscribe to voicemail service, change the number of rings so that
  your answering system answers before your voicemail (see Answering
  system and voicemail on page 43). To determine how many rings activate
  your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try
  disconnecting the fax machine. If that solves the problem, consult your
  fax machine documentation for information on compatibility with
  answering systems.

# The answering system announces "Time and date not set."

• You need to reset the date and time (see Set date/time on page 13).

# The answering system does not respond to the remote commands.

- Make sure to enter your remote access code correctly (see Remote access on page 51).
- Make sure you are calling from a touch-tone telephone. When you dial a number, you should hear tones. If you hear clicks, the telephone is not a touch-tone telephone and cannot activate the answering system.

- The answering system may not detect the remote access code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- There may be interference on the telephone line you are using. Press dial keys firmly.

#### The answering system does not record messages.

- Make sure the answering system is on (see Answering on/off on page 39).
- Make sure the memory of the answering system is not full. When the answering machine memory is full, it does not record new messages until some old messages are deleted.
- If you subscribe to voicemail service, change the number of rings so that
  your answering system answers before your voicemail (see Answering
  system and voicemail on page 43). To determine how many rings activate
  your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try
  disconnecting the fax machine. If that solves the problem, consult your
  fax machine documentation for information on compatibility with
  answering systems.

#### Announcement is not clear.

- When you record your announcement, make sure you speak in a normal tone of voice, toward the microphone on the handset.
- Make sure there is no background noise (TV, music, etc.) while recording.

# I subscribe to a nontraditional telephone service that uses my computer to establish connections, and my telephone doesn't work.

- Make sure your computer is powered on.
- Make sure your Internet connection is working properly.
- Make sure that the software is installed and running for your nontraditional telephone service.
- Make sure to plug your USB telephone adapter into a dedicated USB port on your computer. Do not plug into a multiple port USB hub (USB splitter) that is not powered.
- In a few rare instances, the USB port on your computer may not have enough power. In these instances, try using a USB hub with its own external power supply.
- If you are using a firewall, it may prevent access to your nontraditional telephone service. Contact your service provider for more information.

#### Common cure for electronic equipment:

If the telephone is not responding normally, try resetting the telephone. Do the following in the order listed.

- 1. Disconnect the power to the telephone base.
- 2. Disconnect the cordless handset battery, and spare battery, if applicable.
- 3. Wait a few minutes.
- 4. Connect power to the telephone base.
- 5. Completely remove and then replace the battery. Place the cordless handset into the telephone base.
- 6. Wait for the cordless handset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.

#### Maintenance

#### Taking care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.
- Avoid rough treatment.
- · Place the handset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

#### Avoid water

 Your telephone can be damaged if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

#### **Electrical storms**

 Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

#### Cleaning your telephone

- Your telephone has durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Then, pull the telephone out by the unplugged cords.

# Important safety information

This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

#### Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There might be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Do not use this product near water, or when you are wet. For example, do not use it in a
  wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub.
  Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any
  liquids, unplug any line or power cord immediately. Do not plug the product back in until it
  has dried thoroughly.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- If this product does not operate normally, read Troubleshooting on page 57 in this user's
  manual. If you cannot solve the problem, or if the product is damaged, refer to Limited
  warranty on page 72. Do not open this product except as may be directed in your user's
  manual. Opening the product or reassembling it incorrectly may expose you to hazardous
  voltages or other risks.
- Replace batteries only as described in Battery installation and charging on page 5 in your user's manual. Do not burn or puncture batteries — they contain caustic chemicals.
- The power adapters are intended to be correctly oriented in a vertical or floor mount
  position. The prongs are not designed to hold the plug in place if they are plugged into a
  ceiling or an under-the-table or cabinet outlet.

caution: Use only the power adapters provided with this product. To obtain a replacement, visit our website at www.telephones.att.com, or call 1 (800) 222–3111. In Canada, dial 1 (866) 288-4268.

#### Especially about cordless telephones

Privacy: The same features that make a cordless telephone convenient create some
limitations. Telephone calls are transmitted between the telephone base and the handset
by radio waves, so there is a possibility that your cordless telephone conversations could
be intercepted by radio receiving equipment within range of the cordless handset. For this
reason, you should not think of cordless telephone conversations as being as private as
those on corded telephones.

# Important safety information

- Electrical power: The telephone base of this cordless telephone must be connected to a
  working electrical outlet which is not controlled by a wall switch. Calls cannot be made
  from the handset if the telephone base is unplugged, switched off or if the electrical
  power is interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may
  cause interference to TVs and VCRs. To minimize or prevent such interference, do not place
  the telephone base of the cordless telephone near or on top of a TV or VCR. If interference
  is experienced, moving the cordless telephone farther away from the TV or VCR will often
  reduce or eliminate the interference.
- Rechargeable batteries: This product contains nickel-metal hydride rechargeable batteries.
   Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner.
   Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.



The RBRC® Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. You may call 1-800-8-BATTERY® for locations accepting spent Ni-MH batteries.

RBRC® and 1-800-8-BATTERY® are registered trademarks of the Rechargeable Battery Recycling Corporation.

#### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

#### **Pacemaker patients**

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

#### Especially about telephone answering systems

**Two-way recording:** This unit does not sound warning beeps to inform the other party that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the conversation.

#### SAVE THESE INSTRUCTIONS

#### FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up.
- Perform such activities in off-peak hours, such as early morning or late evening.

#### **Industry Canada**

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this telephone.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1B. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules.

These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

# California Energy Commission battery charging testing instructions

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be disabled.

#### To activate the CEC battery charging testing mode:

- Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceeding.
- 2. While you press and hold HANDSET LOCATOR, plug the telephone base power adapter back to the power outlet.
- After about 20 seconds, when the IN USE light starts flashing, release HANDSET LOCATOR and then press it again within two seconds.



The process takes up to one minute to complete. When the phone successfully enters the CEC battery charging testing mode, the **IN USE** light turns off and all handsets display **1.PRESS HS LOC ON BS 4 SEC 2.THEN PRESS # ON HANDSET.** 

When the phone fails to enter this mode, repeat all the steps mentioned above.

**NOTE:** The telephone base will be powered up as normal if you fail to press **PHANDSET LOCATOR** within two seconds in Step 3.

#### To deactivate the CEC battery charging testing mode:

- 1. Unplug the telephone base power adapter from the power outlet, then plug it back in. The telephone base is powered up as normal.
- 2. Press and hold **HANDSET LOCATOR** on the telephone base until the **IN USE** light turns on.
- 3. Press # on the handset and the handset displays Registering... Please wait.
- 4. The CEC battery charging testing mode will be deactivated when the handset registration is successful.



# Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

#### 1. What does this limited warranty cover?

The manufacturer of this AT&T branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

# 2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative repairs or replaces at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer retains the defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer returns the repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

#### 3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

#### 4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- · PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States
  of America or Canada, or used for commercial or institutional purposes (including but not
  limited to products used for rental purposes); or
- · PRODUCT returned without a valid proof of purchase (see item 6); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

# Limited warranty

#### 5. How do you get warranty service?

To obtain warranty service in the United States of America, visit

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

NOTE: Before calling for service, please review the user's manual. A check of the PRODUCT's controls and features might save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer notifies you and requests that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

#### 6. What must you return with the PRODUCT to get warranty service?

You must:

- Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- b. Include a "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- c. Provide your name, complete and correct mailing address, and telephone number.

#### 7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you might also have other rights that vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation might not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion might not apply to you.

Please retain your original sales receipt as proof of purchase.

# Technical specifications

RF frequency band	1921.536MHz — 1928.448MHz
Channels	5
Operating temperature	32°F — 122°F 0°C — 50°C
Telephone base voltage (AC voltage, 60Hz)	96 — 130Vrms
Telephone base voltage (DC adapter output)	6VDC @ 400mA
Handset voltage	2.4 — 3.2VDC
Charger voltage (AC adapter output)	6VAC @ 300mA

Operating times and charging time differ depending on the capacity of the battery you are using.

Battery capacity	300mAh battery	400mAh battery
Operating times*	Talk time (handset): up to seven hours	Talk time (handset): up to seven hours
	Talk time (speakerphone): up to four hours	Talk time (speakerphone): up to five hours
	Standby: up to five days	Standby: up to seven days
Charging time	10 hours	16 hours

<sup>\*</sup> Operating times vary depending on your actual use and the age of the battery.

# **DECT 6.0 digital technology**

Telecommunications (DECT) 6.0 is a new frequency band that transmits your voice across multiple channels. This technology provides superior quality of voice and sound, high protection against wiretapping and better range than 2.4 GHz and 5.8 GHz phone systems, while not interfering with wireless routers.

#### Telephone operating range

This cordless telephone operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over a certain distance — which can vary with the locations of the telephone base and handset, the weather, and the construction of your home or office.

#### Index

#### Α

Alert tones, 54

Alphabetical search, 29

Announcement, 40

Answer a call, 17

Answer an incoming call during an

intercom call, 24

Answering mode, 39

Answering system, 43-52

Answering system and voicemail, 43

Answering system settings, 39-42

Any key answer, 17

Area code, 14, 33, 36

Auto off, 17

#### В

Base ringer volume (ringer volume control), 15

Base volume control, 44, 47

Battery charging, 6

Battery installation, 5

#### С

Caller ID, 33

Caller ID history (call log), 34–38

Call intercept, 45

Call screening, 41, 44

Call transfer (intercom transfer), 25

Call waiting, 20, 33

Chain dialing, 21

Character chart, 28

Charger installation, 4

Clock, 13

#### D

Date and time, 13

Delete all entries from caller ID history, 37

Delete messages, 47, 51

Dial a directory number, 30

Dial a number from caller ID history, 37

Dial a redial list number, 18

Dial a speed dial number, 32

Dialing options, 36

Dial mode, 14

Directory, 26-30

Directory storage, 27

Display dial, 18, 30, 32, 37

Display screen messages, 55-56

DSL filter, 4, 7

#### Е

Elapsed time, 16

End a call, 17

#### F

Flash, 20

#### н

Handset locator, 23

Handset ringer tone (selectable ringer tone), 11

Handset ringer volume (ringer volume control). 11

Handset volume control, 20, 40, 47

#### L

Important safety information, 67-68 Indicator lights, 53

Intercom call (intercom between handsets), 24

#### K

Key tone, 13

#### Index

#### L

Language, 11

Limited warranty, 72-73

#### М

Maintenance, 66

Make a call, 16

Memo, 49

Memory match, 34

Menu, 10

Message alert tone, 42

Message playback, 46

Message window displays, 50

Missed (new) call indicator, 35

Mute, 20

#### Ν

Number of rings, 41, 43

#### 0

Operation time, 74

#### P

Pause, 16, 27

Power adapter, 4

Predialing (on-hook dialing), 16

#### R

Reasons for missing caller ID

information, 35

Recording time, 44

Redial, 18

Remote access, 51

Remote access code, 42

Remote commands, 51

Repeat messages, 47, 51

Ring tone, 11

#### S

Screen icons, 53

Skip messages, 47, 51

Speakerphone switching, 17, 40, 47

Speed dial, 31-32

#### Т

Tabletop installation, 4

Technical specifications, 74

Temporary ringer silencing, 16

Temporary tone dialing, 21

Three-way conversation, 22, 25

Toll saver, 42

Troubleshooting, 57-65

#### V

Voicemail, 12, 43

Voice prompts, 44

Volume, 11, 15, 20, 40, 44, 47

#### W

Wall-mount installation, 7

#### Remote access wallet card

The wallet card, as shown below, lists the commands needed to control your answering system from any touch-tone telephone.

Cut along dotted line.



Call your telephone number, then enter your two-digit remote access code (preset to **19**).

# 

Fold here.

Help menu	.*5
Skip the message	.6
Record announcement	.*7
Turn system on or off	. 0
End remote access call	.8 (or hang up)

EL52200/EL52210/EL52250/EL52260/EL52300/EL52350/ EL52400/EL52410/EL52450/EL52500/EL52510 DECT 6.0 cordless telephone/answering system with caller ID/call waiting

© 2009-2015 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219. Printed in China.



www.telephones.att.com