

Charger installation

Plug one end of the telephone line cord into a telephone jack or a DSL filter.

Telephone line cord

If you have DSL high-speed Internet service, a DSL filter (not included) is required.

Plug the other end of the telephone line cord into the telephone jack on the back of the telephone base.

Plug the large end of the telephone base power adapter into a power outlet not controlled by a wall switch.

Route the cords through the channels.

Plug the small end of the telephone base power adapter into the power adapter jack on the back of the telephone base.

Route the handset cord through its channel.

One end of the coiled handset cord has already been plugged into the handset. Make sure it is plugged in firmly.

Plug the other end of the coiled handset cord into the jack on the back of the telephone base.

Raise the antenna.

Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Install the battery, as shown below. Charge your handset(s) before initial use. The battery is fully charged after 10 hours of continuous charging.

Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery with the label **THIS SIDE UP** facing up, as indicated.

Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

Charge the handset by placing it face forward in the handset charger. The **CHARGE** light on the top of the handset is on during charging.

On when the handset is charging in the charger.

▼CID/VOLUME

- Press **▼CID** to show caller ID history when the handset is not in use.
- Press to scroll down while in menus.
- While entering names or numbers, press to move the cursor to the left.
- Press to decrease the listening volume when on a call, or to decrease the message playback volume.

- During a call, press to mute the microphone.
- When the handset is ringing press to mute the ringer temporarily.
- While reviewing the caller ID history, the directory or the redial memory, press to delete an individual entry.
- While predialing, press to delete digits.
- During message or announcement playback, press to delete the playing message or the recorded announcement.

- Press to make or answer a call.
- During a call, press to answer an incoming call when you receive a call waiting alert.
- During message playback, press to call back the caller if the caller's number is available.

- While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory.
- Press and hold to set or dial your voicemail number.

- Press to switch to tone dialing temporarily during a call if you have pulse service.

PUSH TO TALK

Press to initiate a one-to-one or one-to-group broadcast.

Press and hold to broadcast to a group of system devices.

- Press **▲DIR** to show directory entries when the handset is not in use.
- Press to scroll up while in menus.
- While entering names or numbers, press to move the cursor to the right.
- Press to increase the listening volume when on a call, or to increase the message playback volume.

- When the handset is not in use, press to show the menu.
- While in the menu, press to select an item or save an entry or setting.

- During a call, press to hang up.
- While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display; press and hold this button to exit to idle mode.

- Press and hold while the telephone is not in use to erase the missed call indicator.

 
- Press repeatedly to display other dialing options when reviewing a caller ID log entry.

- During an outside call, intercom call, message or announcement playback, press to change the audio quality to best suit your hearing.

- Press repeatedly to view the last 10 numbers dialed
- While entering numbers, press and hold to insert a dialing pause.

Press to initiate a one-to-one or one-to-group broadcast.

Press and hold to broadcast to a group of system devices.



On when the telephone is in use, or when the answering system is answering an incoming call.

On when a handset is being registered.

Flashes when there is an incoming call or when all handsets are being deregistered.

Flashes when another telephone is in use on the same line.

Press and hold to broadcast to a group of system devices.

While reviewing the caller ID history, the directory or the redial memory, press to delete an individual entry.

While predialing, press to delete digits.

During message or announcement playback, press to delete the playing message or announcement.

Press twice to delete all old messages when the telephone is not in use.

While the telephone is idle, press to page all handsets.

While in a menu, press to cancel an operation back up to the previous menu or exit the menu display.

Press and hold to go back to idle mode.

When the telephone base is ringing, press to mute the ringer temporarily.

Press to display the caller ID history when the telephone is not in use.

Press to scroll down while in menus and lists.

While entering names or numbers, press to move the cursor to the left.

Press to turn the built-in answering system on or off

Press to start or stop message playback.

During playback, press to repeat the playing message.
During playback, press twice to play the previous message.

Press to skip a message.

During an outside call, intercom call, message or announcement playback, press to change the audio quality to best suit your hearing.

During a call, press to answer an incoming call when you receive a call waiting alert.

During message playback or call screening, press to adjust the listening volume.

 
While in idle mode, press to adjust the base ringer volume.

When on a call, press to adjust the listening volume.

During a call, press to mute the microphone.

When the telephone is ringing, press to mute the ringer temporarily.

Press to make or answer a call using the speakerphone.



Telephone operation

Operation	Steps
Making a call	Using a cordless handset: Press PHONE or /SPEAKER -> Enter the telephone number. Using the telephone base: Press /SPEAKER or lift the corded handset -> Enter the telephone number.
Answering a call	Using a cordless handset: Press PHONE or /SPEAKER , or press any dialing key (0-9 , TONE ✕ or #). Using the telephone base: Press /SPEAKER , or lift the corded handset.
Ending a call	Using a cordless handset: Press OFF or return the handset to the charger. Using the telephone base: Press /SPEAKER or hang up the corded handset.
Handset speakerphone	During a call, press /SPEAKER to switch between handsfree speakerphone and normal handset use.
Redial	Using a cordless handset: Press REDIAL repeatedly to select the desired entry -> PHONE or /SPEAKER to call. Using the telephone base: Press REDIAL repeatedly to select the desired entry -> press /SPEAKER or lift the corded handset to call.
Volume control	On the telephone base, press VOLUME▼ to decrease or press VOLUME▲ to increase the listening volume during a call. On a cordless handset, press ▼ or ▲ .
Call waiting (Requires subscription from telephone service provider)	Press FLASH on the handset or FLASH on the telephone base to put current call on hold and to take the new call; press again to switch back and forth between calls.

Caller ID

This product supports caller ID services offered by most telephone service providers. The telephone stores caller ID information of the last 50 incoming calls in the telephone base. This information is common to all devices.

Missed call indicator
When a handset or the telephone base is in idle mode and has new or missed calls, its screen shows XX Missed calls . You can erase the missed call indicator either by reviewing the call log one by one, or by <u>pressing and holding</u> CANCEL on the handset or CANCEL on the telephone base in idle mode.
Review and dial a number in the call log
1. CID in idle mode -> ▼ or ▲ to scroll through the list. 2. When the desired entry is displayed, press PHONE or /SPEAKER on the cordless handset to call. On the telephone base, lift the corded handset or press /SPEAKER to call.
Caller ID announce
When this feature is on and you have an incoming call, the handset and/or base speaks “ <i>Call from...</i> ” and the name of the caller based on the directory or caller ID information. You can turn this feature off for the base or each individual handset, or for all devices. 1. MENU -> ▼ or ▲ -> Settings -> SELECT . 2. ▼ or ▲ -> Caller ID annnc -> SELECT . 3. ▼ or ▲ to choose the desired option, then press MENU/SELECT . <ul style="list-style-type: none">Set all On/Off - Change the setting for the base and all handsets.Local handset - Change the setting for that handset only (when programming from a cordless handset only).Base - Change the setting for the telephone base only. 4. ▼ or ▲ to choose On or Off -> SELECT .

Directory

The directory can store up to 50 entries, which are shared by all system devices.

Operation	Steps
Adding an entry	1. MENU . 2. ▼ or ▲ -> Directory -> SELECT . 3. ▼ or ▲ -> Add contact -> SELECT . 4. Enter a telephone number up to 30 digits -> SELECT . 5. Enter a name up to 15 characters -> SELECT .
Searching/dialing an entry	1. DIR in idle mode. 2. Press ▼ or ▲ to browse through the directory, or press the dialing keys (0-9) to start a name search. 3. Press PHONE or /SPEAKER on a handset to call. -OR- On the telephone base, press /SPEAKER or lift the corded handset to call.

Answering system

About answering system and voicemail
Your telephone has separate indicators for two different types of voice messages: those left on the built-in answering system and those left at your telephone service provider’s voicemail. To listen to messages recorded on the built-in answering system, refer to the Message playback section on the next page; to listen to voicemail, contact your telephone service provider for more information.
Turn answering system on/off
The answering system must be turned on to answer and record messages. Using a cordless handset: 1. MENU . 2. ▼ or ▲ -> Answering sys --> SELECT . 3. ▼ or ▲ -> Answer ON/OFF --> SELECT . 4. ▼ or ▲ -> On or Off --> SELECT . When the answering system is on, the handset shows ANS ON . Using the telephone base: <ul style="list-style-type: none">Press /ANSWER ON/OFF to turn the answering system on or off. If the answering system is turned on, it announces, “<i>Calls will be answered.</i>” If the answering system is turned off, it announces, “<i>Calls will not be answered.</i>”
Message alert tone
When this feature is on, and there is at least one new message, the telephone base beeps every 10 seconds. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. ▼ or ▲ -> Ans sys setup -> SELECT . 3. ▼ or ▲ -> Msg alert tone -> SELECT . 4. ▼ or ▲ -> On or Off -> SELECT .
Call screening
Use this feature to choose whether incoming messages can be heard over at telephone base when they are being recorded. If you turn call screening on, you hear the incoming message. While monitoring an incoming message, you can answer the call by pressing PHONE on the handset, or pressing /SPEAKER or lifting the corded handset on the telephone base. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. ▼ or ▲ -> Ans sys setup -> SELECT . 3. SELECT to select Call screening . 4. ▼ or ▲ -> choose On or Off -> SELECT .

Answering system (continued)

Message playback		
Using the telephone base: Press ►/■/PLAY when the telephone base is in idle mode. If there are only new or only old messages, they are played automatically. If there are both old and new messages, press ▼ or ▲ -> Play new msgs or Play old msgs -> SELECT . Using a cordless handset: Press MENU twice when the handset is in idle mode. If there are only new or only old messages, they are played automatically. If there are both old and new messages, press ▼ or ▲ -> Play new msgs or Play old msgs -> SELECT . Options during playback		
Feature	On the telephone base	On a handset
Adjust playback volume	Press ▼/VOL/▲	Press ▼VOLUME or ▲VOLUME
Stop playback	Press ►/■/STOP	Press 5
Skip to the next message	Press ►/SKIP	Press 6
Repeat the message	Press ◄/REPEAT	Press 4
Play the previous message	Press ◄/REPEAT twice	Press 4 twice
Delete the message	Press X/DELETE	Press DELETE

For more detailed instructions, please refer to the Abridged user’s manual provided in your package, or for a full set of installation and operation instructions, refer to the online **CL84102/CL84152/CL84202/CL84252/CL84342/CL84352 DECT 6.0 corded/cordless telephone/answering system with caller ID/call waiting** Complete user’s manual at **www.telephones.att.com/manuals**.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.