




Quick start guide

SB3014

This quick start guide provides you with basic instructions only. For more complete instructions, refer to your user's manual provided in the package, or see the online user's manual at www.smbtelephones.att.com.

Base unit installation

 NOTE: If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, you must install a DSL filter between the telephone line cord and wall jack. Contact your DSL service provider for more information about DSL filter.

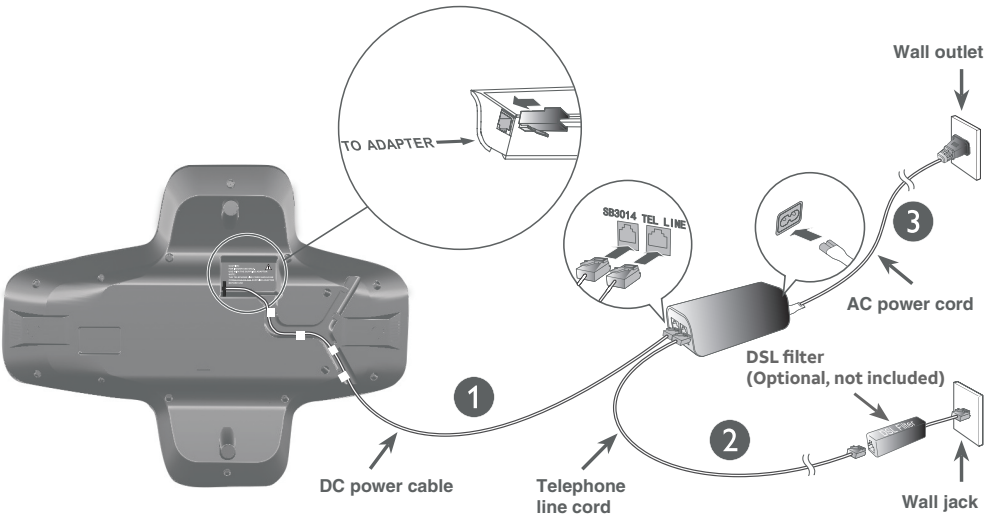


1. Plug one end of the DC power cable into the adapter jack of the base unit, and plug the other end into the **SB3014** jack of the power adapter. Route the cord through the slots.
2. Plug one end of the telephone line cord into the **TEL LINE** jack of the power adapter, and plug the other end into a wall jack.
3. Plug the small end of the AC power cord into the power jack of the adapter, and plug the large end into the wall outlet not controlled by a switch.

Caution: Use only the AC power adapter provided with this product. To obtain a replacement, visit our website at www.smbtelephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Battery installation


Install the battery, as shown below. Charge your wireless mic before initial use. The battery is fully charged after eight hours of continuous charging.

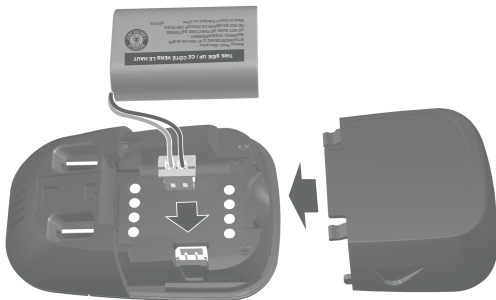

1. Plug the battery connector securely into the socket inside the battery compartment. Insert the battery with the label **THIS SIDE UP** facing up onto the battery compartment.
2. Slide the battery door until it clicks into place.
3. Place the wireless mic on the charging cradle until it is flush. The status indicator on the wireless mic turns orange when charging, and turns off when the battery is fully charged.

Caution: Use only the supplied rechargeable battery or replacement battery (model BT183642/ BT283642).

Quick reference guide - base unit

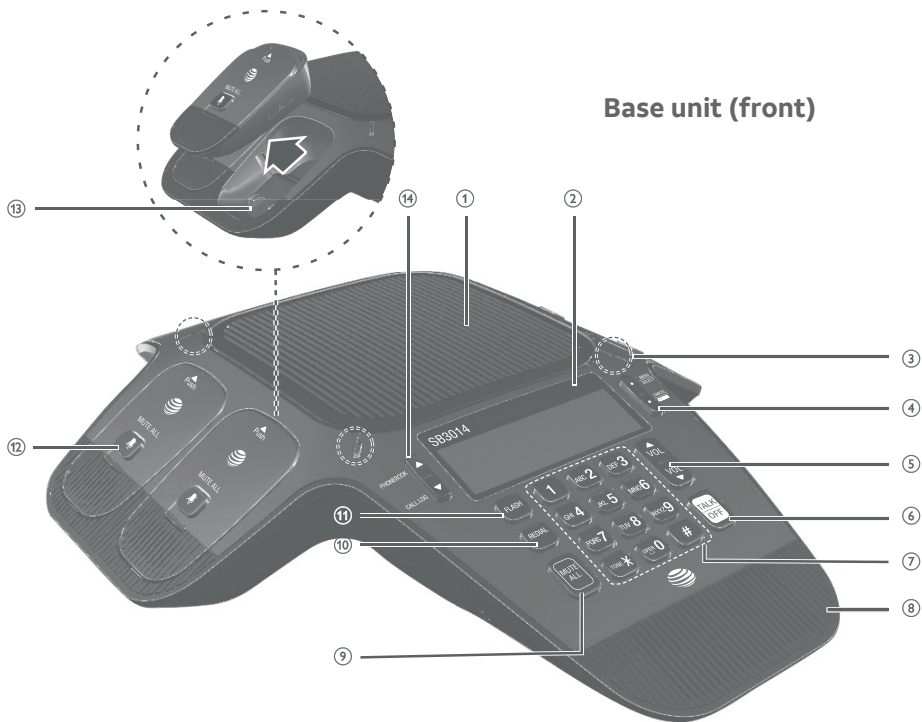

1. Speakerphone

2. LCD display

3. Status indicator

- Indicates the system status. See **Status indicators overview**.

4. MENU SELECT

- Press to show the menu.
- Press to select an item, or save an entry or setting in a menu.

CANCEL CLEAR

- While in a menu, press to return to the previous menu.
- While editing numbers or names, press to delete a character; or press and hold to delete all characters.

▲ VOL / ▼

- Press to scroll through the menu, phonebook, or call log.
- Press to adjust the ringer volume.
- During a call, press to adjust the listening volume.

6. TALK OFF

- Press to make, answer, or end a call.

7. Dialing keys

- Press to enter numbers or characters.
- While entering numbers, press and hold to insert a dialing pause.
- While editing names, press to add a space.

 
1. Status indicator

- Indicates the system status. See **Status indicators overview**.


2. Rear microphone

3. Adapter jack

- Refer to **Base unit installation**.

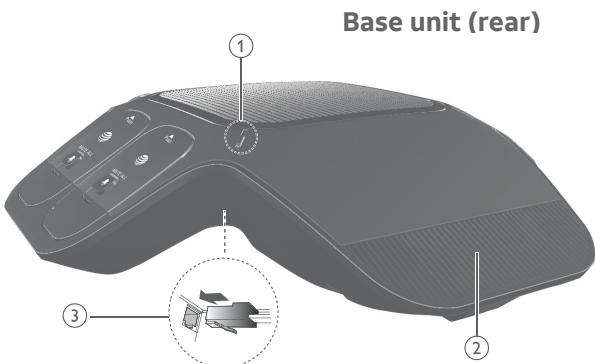

Quick reference guide - wireless mic

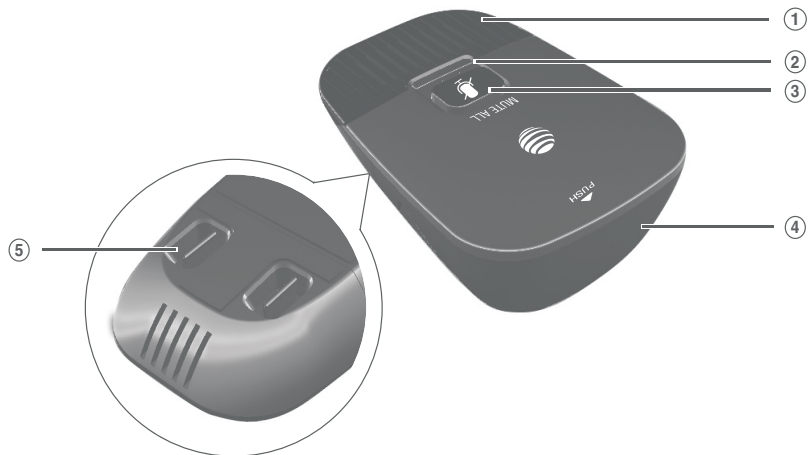 

1. Microphone

- Functions as an extended microphone of the base unit during a call.

2. Status indicator

- Indicates the system status. See **Status indicators overview**.

3. MUTE ALL

- During a call, press to mute or end mute all microphones in the system.

4. Battery door

5. Charging contacts

Status indicators overview



Base unit status indicator

Power up	• Turns green for about two seconds.
On a call	• Turns green during a call. • Red when the system is muted during a call.
Incoming call	• Flashes green when there is an incoming call.

Wireless mic status indicator


Power up	• Turns orange for about two seconds.
On the cradle	• Turns orange when charging in the cradle except during registration. • Flashes red and green alternately, when the non-registered wireless mic is charging on the cradle.
Off the cradle	• Turns green during a call. • Turns red when the system is muted during a call. • Off when the wireless mic is in idle mode or without a battery. • Flashes orange when the wireless mic's battery is low. • Flashes green when there is an incoming call. • Flashes red slowly when the wireless mic is: <ul style="list-style-type: none">• out of range; or• not registered; or• off cradle during paging (with a paging tone).
During registration	• Flashes red and green alternately.

Initial settings

We recommend you program your base unit before use. The following are a few examples of common features to set before using the base unit. Refer to the **Conference speakerphone settings** in the user’s manual for detailed instructions on setting all features.

Set date/time
Set the date/time before use. <div>1. Press MENU SELECT -> ▼ or ▲ -> Set date/time -> MENU SELECT.</div> <div>2. Enter the month, day and year using the dialing keys -> MENU SELECT.</div> <div>3. Enter the hour and minute using the dialing keys.</div> <div>4. ▼ or ▲ to choose AM or PM -> MENU SELECT.</div>
Ringer volume
You can set the ringer volume level to one of the six levels, or turn the ringer off. <div>• Press VOL ▼ or VOL ▲ in idle mode to sample each ringer volume level -> MENU SELECT.</div> <div>-OR-</div> <div>1. Press MENU SELECT -> ▼ or ▲ -> Ringers -> MENU SELECT.</div> <div>2. Press MENU SELECT to select Ringer volume.</div> <div>3. Press ▼ or ▲ to choose the desired level -> MENU SELECT.</div>
Reset language to English
If you have accidentally changed the screen display language and want to switch it back to English, follow the step, as mentioned below. <div>• Press MENU SELECT in idle mode-> enter ⓧ364#.</div>

Speakerphone operation

Operation	Steps
Making a call	Press TALK OFF -> Enter the telephone number.
On-hook dialing (predialing)	Enter the telephone number -> Press TALK OFF to call.
Answering a call	Press TALK OFF .
Ending a call	Press TALK OFF .
Using a wireless mic to join a call in progress	During a call, push the wireless mic and lift it from the charging cradle.
Last number redial	Press REDIAL .
Volume control	Press VOL ▲ to increase or press VOL ▼ to decrease the listening volume during a call.
Call waiting (Requires subscription from telephone service provider)	Press FLASH to put current call on hold and to take the new call; press FLASH again to switch back and forth between calls.
Temporary ringer silencing	When the base unit is ringing, press MUTE ALL .
Mute a call	During a call, press MUTE ALL on the base unit or  on a wireless mic.
Three-way conference	<div>1. TALK OFF -> Dial the number of the first call.</div> <div>2. When the first call is connected, press FLASH.</div> <div>3. Enter the number of the new outgoing call.</div> <div>4. When the second call is connected, press FLASH.</div>

Caller ID

This product supports caller ID services offered by most telephone service providers. The base unit stores caller ID information for the last 50 incoming calls.

Missed call indicator
When the base unit is in idle mode and has new or missed calls, its screen shows XX Missed calls . Each time after you reviewed a new call log entry, the number of missed calls decreases by one. If the base unit resumes power after power outage, the missed call indicator goes away.
Review and dial a number in the call log
<div>1. Press CALL LOG in idle mode -> ▼ or ▲ to scroll through the list.</div> <div>2. Press TALK OFF to call when the desired entry is displayed.</div>
Save a call log entry to the phonebook
<div>1. Press CALL LOG in idle mode -> ▼ or ▲ -> MENU SELECT.</div> <div>2. Press MENU SELECT -> Store to PB -> MENU SELECT.</div> <div>3. Edit the telephone number -> MENU SELECT</div> <div>4. Edit the name -> MENU SELECT.</div>

Phonebook

The phonebook can store up to 50 entries.

Operation	Steps
Adding an entry	<div>1. Press MENU SELECT in idle mode.</div> <div>2. Press MENU SELECT to select Phonebook.</div> <div>3. Press ▼ or ▲ -> Add contact -> MENU SELECT.</div> <div>4. Enter a telephone number up to 30 digits -> MENU SELECT.</div> <div>5. Enter a name up to 15 characters -> MENU SELECT.</div>
Searching/ dialing an entry	<div>1. Press PHONEBOOK in idle mode.</div> <div>2. Press ▼ or ▲ to browse through the phonebook, or press the dialing keys (0-9) to start a name search.</div> <div>3. Press TALK OFF to call.</div>

For a full set of installation and operation instructions, refer to the **SB3014 DECT 6.0 conference speakerphone with wireless mics** user’s manual provided in the package, or see the online user’s manual at **www.smbtelephones.att.com**.

For customer service or product information, visit our website at **www.smbtelephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.