



## Quick start guide

TL86109

DECT 6.0 2-line

corded/cordless telephone/  
answering system with

BLUETOOTH® wireless technology



# Installation

You must install and charge the handset battery before using the cordless handset.



**STOP!**

See page 5 for easy instructions.

Install the telephone base close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base should be placed on a flat surface. For optimum range and better reception, place the telephone base in a central and open location.

You may hear interference if your cellular phone is too close to the telephone base during a **CELLULAR** call. Make sure that your Bluetooth enabled cellular phone is within 15 feet of the telephone base in order to maintain a clear and consistent connection between your Bluetooth cell phone, telephone base and cell tower.

If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line(s), you must install a DSL filter between each telephone line cord and telephone wall jack (pages 2-3). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.


## **Avoid placing the telephone base too close to:**

- Communication devices such as television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of a washing machine or work bench.

# Telephone base installation


Install the telephone base, as shown below.

## Option 1: For using a 2-line wall jack

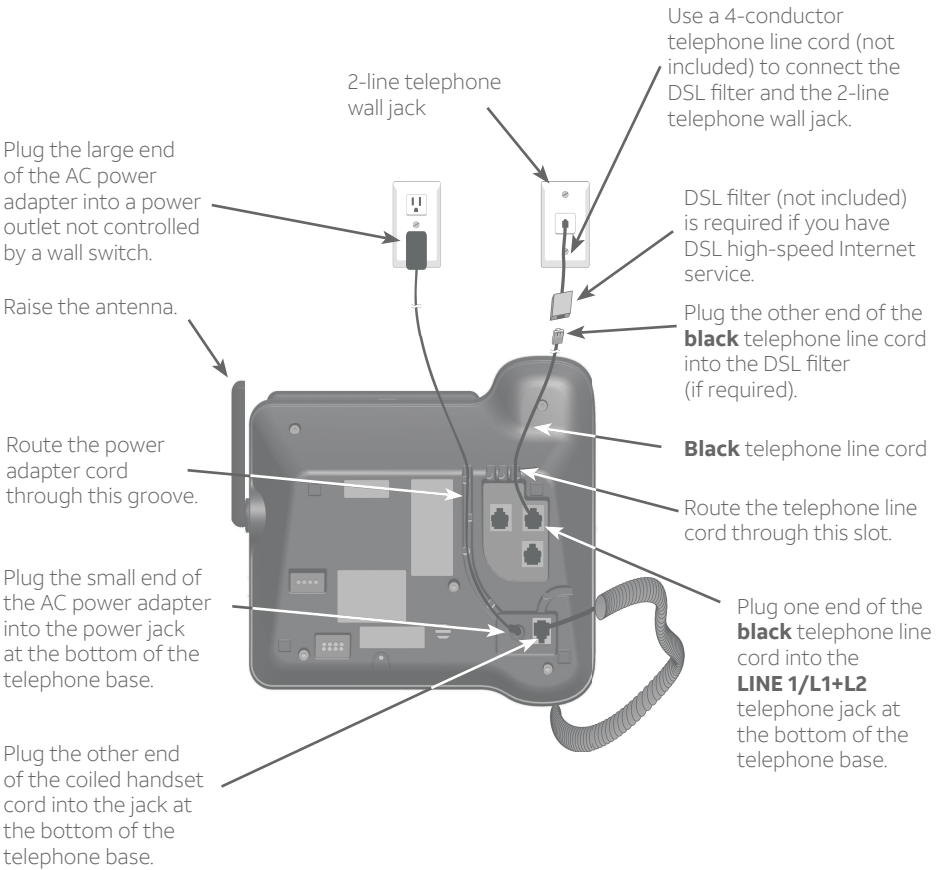

# Telephone base installation

## Option 2: For using two separate wall jacks

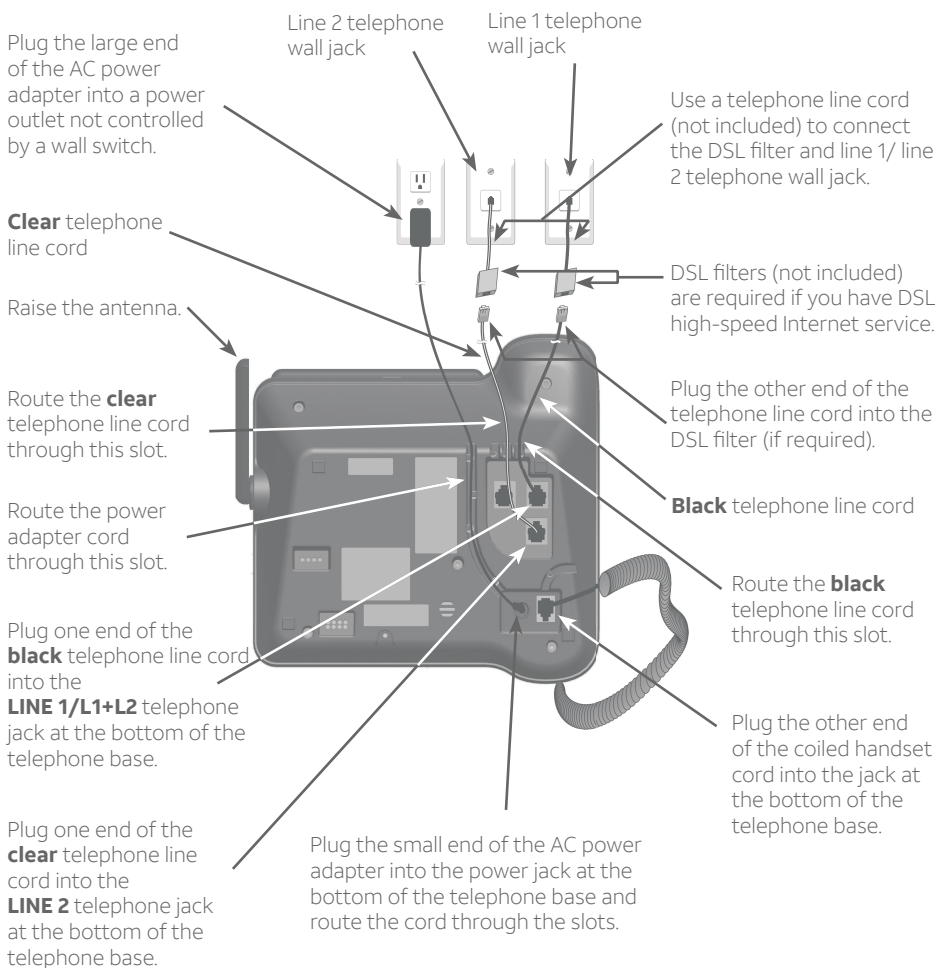


### **NOTES:**

- This telephone provides minimal functionality during a power outage. When AC power is not available, many telephone features do not function. The telephone uses power from the telephone line to enable you to make and answer calls using only the corded handset and dialing keys. However, only line 1 is available in the event of a power failure.
- Use only the power adapters provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

# Charger installation


Install the charger, as shown below.

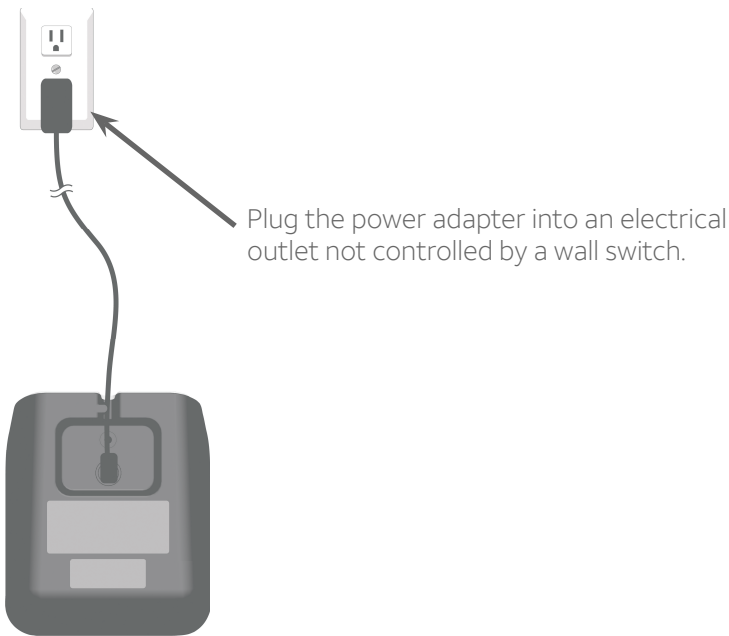


# Battery installation and charging

Install the battery, as shown below. For best performance, keep the handset in the charger when not in use. The battery is fully charged after 16 hours of continuous charging.

1. Plug the battery connector securely into the socket inside the handset battery compartment, matching the color-coded label. Insert the supplied battery with the label **THIS SIDE UP** facing up, as indicated.

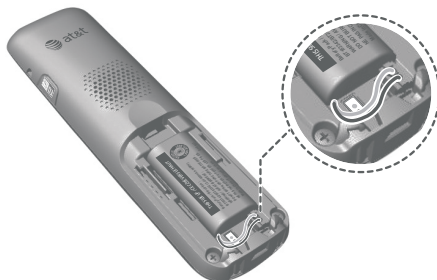

2. Align the cover flat against the battery compartment, then slide it upwards until it clicks into place.

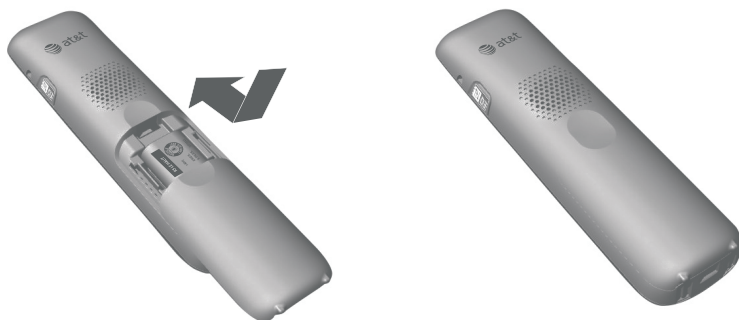

3. Charge the handset by placing it face up in the charger. The **CHARGE** light is on when charging.



## Battery installation and charging

After you install your telephone, the handset will prompt you to set the date and time. For instructions, see

**Set date/time** on the user's manual. To skip setting the date and time, press  **OFF/CLEAR**.



To replace the battery, press the tab and slide the battery compartment cover downwards. Lift out the old battery and disconnect it from the handset. Follow the instructions, as mentioned on the previous page, to install and charge the new battery.



### IMPORTANT INFORMATION:

1. Use only the supplied rechargeable battery or replacement battery (model BT183342/ BT283342). To order, visit our website at **[www.telephones.att.com](http://www.telephones.att.com)** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
2. If you do not use the handset for a long time, disconnect and remove the battery to prevent possible leakage.

# Quick reference guide - handset

## Softkeys (2)

Press to select a menu item displayed above the key.

## CHARGE light (blue ring around DIR/▲/VOL/▼/CID)

On when the handset is charging in the charger.

## DIR/▲/VOL

Press to scroll up while in menus.

Press to increase the volume level during a call.

Press to show directory entries when the telephone is not in use.

While entering names or numbers, press to move the cursor to the right.

## CELL

Press to make or answer a cell call.

Flashes quickly when there is an incoming cell call.

Flashes slowly when a cell call is on hold.

## 1 LINE/FLASH

Press **1 LINE/FLASH** to make or answer a call on line 1. During a call, press to answer an incoming call on line 1 when you receive a call waiting alert.

## 1

While reviewing a caller ID history entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory.

## TONE ✕

Press to switch to tone dialing temporarily during a call if you have pulse service.

## )/SPEAKER

Press to turn on the handset speakerphone. Press again to resume normal handset use.

## OFF/CLEAR

While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

Press and hold to return to idle mode.

While entering names or numbers, press to delete a digit or a character.

During a call, press to hang up.

## VOL/▼/CID

Press to scroll down while in menus.

Press to decrease the volume level during a call.

Press to show the caller ID history when the telephone is not in use.

While entering names or numbers, press to move the cursor to the left.

## 2 LINE/FLASH

Press **2 LINE/FLASH** to make or answer a call on line 2. During a call, press to answer an incoming call on line 2 when you receive a call waiting alert.

## # (pound key)

Press repeatedly to display other dialing options when reviewing a caller ID history entry.


## REDIAL/PAUSE

Press to view the redial list.

While entering numbers, press and hold to insert a dialing pause.

## HOLD

Press to put a call on hold.

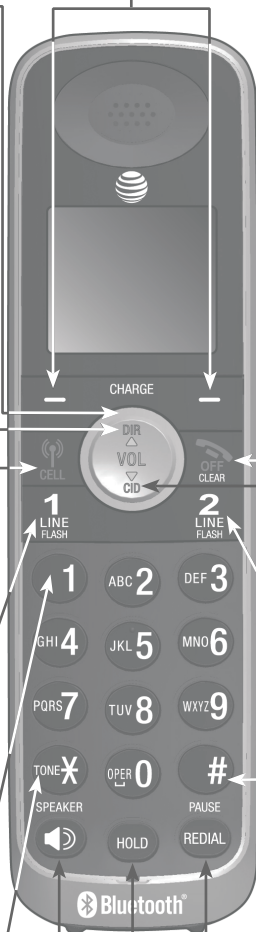

# Quick reference guide - handset




## EQ

During an outside call, intercom call, message or announcement playback, press to change the quality of the audio to best suit your hearing.



Press the **MENU** softkey to enter the main menu which includes the following:

- PLAY MESSAGES
- ANSWERING SYS
- DIRECTORY
- CALL LOG
- INTERCOM
- RINGER
- SETTINGS
- WEBSITE

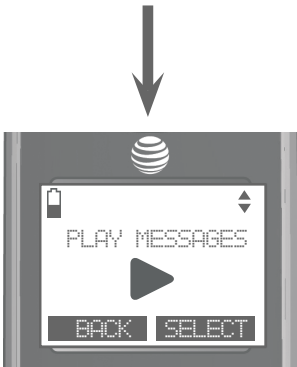

# Quick reference guide - telephone base



## ▼CID

- Press to scroll down while in a menu.
- Press to review the call log when the telephone is not in use.
- While entering names or numbers, press to move the cursor to the left.

## CANCEL

- While in a menu, press to exit without making changes or press and hold to return to idle mode.
- While entering names or numbers, press to delete a digit or a character.

## Softkeys (2)

- Press to select the menu item displayed above the key.

## ▲DIR

- Press to scroll up while in a menu.
- Press to show directory entries when the telephone is not in use.
- While entering names or numbers, press to move the cursor to the right.

## Antenna light

- On when the cell line is in use.
- Flashes quickly when there is an incoming cell call.

## DEVICE A/DEVICE B lights

- On when the telephone base is paired and connected with a Bluetooth device.
- Flash alternately while pairing a Bluetooth device.

## REDIAL

- Press to review the redial list.

# Quick reference guide - telephone base

## ◀/REPEAT

During message playback, press to repeat a message, or press twice to play the previous message.  
While entering names or numbers, press to move the cursor to the left.

## TONE ✕

Press to switch to tone dialing temporarily during a call if you have pulse service.

## HOLD

Press to put a call on hold.

## ▼ VOLUME ▲

Press to adjust the volume during playback.

Press to adjust the volume during a call.  
When the phone is not in use, press to adjust the telephone base ringer volume for all lines.

## FLASH

During a call, press to answer an incoming call when you receive a call waiting alert.

## SPEAKER 📢

Press to switch between the speakerphone and corded handset.  
Press to switch a call from the Bluetooth headset to speakerphone.  
Press to switch the base speakerphone on or off.

## HEADSET 📞

Press to transfer a call from the telephone base to a connected Bluetooth headset.  
Press to use a connected Bluetooth headset.  
Press to end a call while you are using the Bluetooth headset.

## ▲/DELETE

Press to delete the message currently playing.  
When the phone is not in use, press to enter a menu to delete all old messages.  
Press to scroll up while in a menu.

## 🔌/ON/OFF LINE 1/ 🔌/ON/OFF LINE 2

Press to turn the answering system on or off.

## ▶/SKIP

During message playback, press to skip to the next message.  
While entering names or numbers, press to move the cursor to the right.

## ▼/REC

Press to record a memo or announcement.  
Press to scroll down while in a menu.

## LINE 1/▶/■/MAILBOX/ LINE 2/▶/■/MAILBOX


Press to start or stop message playback.

## 1 LINE/2 LINE

Press to make or answer a call.

## CELLULAR 📶

Press to make or answer a cell call.

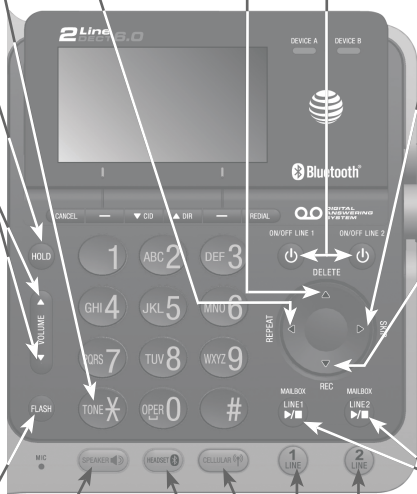

# Introducing Bluetooth

Your new AT&T **TL86109** telephone system with Bluetooth wireless technology has the following features:

- Pair up to four Bluetooth enabled devices (cell phones or headsets) with the telephone base.
- Connect a maximum of two cell phones to make and receive cell calls. Only one cell phone can be active on a call at a time.
- Connect a Bluetooth enabled headset for making and receiving line 1 or line 2 calls.
- Conference any combination of cell and line 1 or line 2 calls.
- Make and receive calls using your cell phone plan with your cordless system handsets.

## IMPORTANT INFORMATION

- After plugging in the telephone base, wait at least 20 seconds before connecting a Bluetooth device. The screen shows **Bluetooth system busy** if you try to connect too soon.
- Refer to the user's manual of your Bluetooth enabled cell phone or headset for more information about how that device uses Bluetooth connectivity.
- Bluetooth wireless technology operates within a short range (up to 30 feet) from the telephone base. Keep connected cell phones and headset within this range.
- If your cell phone has poor reception in your home, the **TL86109** cannot improve the reception. However, if there is a location in your house with better reception, you can leave your cell phone at that location while you use the **TL86109** cell line. For optimal performance, the cell phone must be within 15 feet of the telephone base.
- Charge your cell phone while it is connected to the telephone base. Your cell phone's battery discharges faster while it is connected to the telephone base via Bluetooth wireless technology.
- Monitor your cell phone's usage because minutes may be deducted from your cellular plan for the duration of all cell calls, depending on the terms of your plan.

The *Bluetooth*® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

# Bluetooth setup

Bluetooth wireless technology operates within a short range (up to 30 feet). When you pair a Bluetooth cell phone or Bluetooth headset to the telephone base, keep the device within 15 feet of the telephone base for optimal performance.

## Pair your first cell phone

### To pair and connect a cell phone:

1. Press the **MENU** softkey on the telephone base in idle mode to enter the main menu.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Bluetooth**, then press the **SELECT** softkey.
3. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Add cellular**, then press the **SELECT** softkey. The screen displays **Please set your cell to search for devices then press ↵**. Press the **NEXT** softkey.
4. Turn on the Bluetooth feature of your cell phone and search for or add new devices.
5. Once your cell phone finds **AT&T DECT 6.0**, press the appropriate key on your cell phone to continue the pairing process.
6. Enter the PIN of the telephone base (the default PIN is **0000**) into your cell phone.
7. When a device is successfully paired, the telephone base displays **Pairing complete**.
8. The telephone base then displays **Connect cell to base?**. Press the **YES** softkey to connect your cell phone to the telephone base. For certain cell phones, you may also need to press a key on your cell phone to confirm the connection. The telephone base displays **Device connected to the base**. The corresponding status icon (**ⓂA** or **ⓂB**) displays. The corresponding device light on the telephone base (**DEVICE A** or **DEVICE B**) turns on.



If you have trouble pairing your cell phone, it may not be compatible with your TL86109. Check the Bluetooth compatibility list at [www.telephones.att.com](http://www.telephones.att.com).

### NOTES:

- The pairing process may take up to one minute. If the pairing process fails, try again.
- The steps for the pairing process may vary for different cell phones. If this happens, follow the prompts on your cell phone and your **TL86109** to complete the pairing process.
- Refer to the user's manual of your cell phone on how to search for or add a new Bluetooth device.

# Bluetooth setup

## Pair your first headset

### To pair and connect a headset:

1. Press the **MENU** softkey on the telephone base in idle mode to enter the main menu.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Bluetooth**, then press the **SELECT** softkey.
3. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Add headset**, then press the **SELECT** softkey. The screen displays **Pls set headset to discoverable mode then press ↵**.
4. Set your headset to discoverable mode.
5. Press the **NEXT** softkey to set your telephone base to discoverable mode and search for your headset.
6. Once the telephone base finds your headset, press the **SELECT** softkey.
7. Enter the PIN of your headset (the PIN for most Bluetooth devices is **0000**), then press the **NEXT** softkey.
8. If the PIN is correctly entered, the telephone base displays **Headset setup complete**.
9. The telephone base displays **Connect headset to base?**. Press the **YES** softkey to confirm. The telephone base displays **Headset setup completed. Device connected..** The corresponding status icon (**ⓐ** or **ⓑ**) displays when the headset is successfully connected. The corresponding light on the telephone base (**DEVICE A** or **DEVICE B**) turns on.

If you have trouble pairing your headset, it may not be compatible with your TL86109. Check the Bluetooth compatibility list [www.telephones.att.com](http://www.telephones.att.com).

**i** **NOTE:** The pairing process may take up to one minute. If the pairing process fails, try again.



# Bluetooth setup

## Download directory

Before downloading the directory, make sure the cell phone is paired to your **TL86109** and is on the active devices list.


**Place your cell phone next to the telephone base when you download a cell phone directory to your TL86109.**

### To download a cell phone directory:

1. Press the **MENU** softkey on the telephone base in idle mode.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Bluetooth**, then press the **SELECT** softkey.
3. Press the **SELECT** softkey to choose **Download dir.**
4. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight a desired device when necessary, then press the **SELECT** softkey.
5. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight one of the following options:
  - **Phone memory** - download all contacts stored in your phone memory.
  - **SIM card only** - download all contacts stored in your SIM card.
  - **Phone and SIM** - download all contacts stored in both your phone memory and SIM card.

Press the **SELECT** softkey. During the download, the telephone base displays the progress. All cordless handsets display **LINK IN USE**.

6. When the downloading process completes, the telephone base displays **Download complete XXXX entries saved**. Press the **OK** softkey to return to the **Bluetooth** menu.

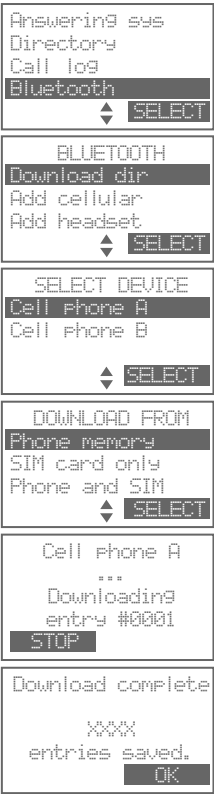


# Telephone settings

For complete instructions on using all features of this telephone, see your user's manual for details.

## Set date/time

### To set the date and time manually:

1. Press the **MENU** softkey on the handset or telephone base in idle mode to enter the main menu.
2. Press **▲** or **▼** to highlight **SETTINGS**, then press the **SELECT** softkey.
3. Press **▲** or **▼** to highlight **Set date/time**, then press the **SELECT** softkey.
4. Press the **SELECT** softkey to select **Date/time**.
5. Press **▲** or **▼** to select the month and then press the **SET** softkey to confirm, or enter the correct number using the dialing keys.
6. Press **▲** or **▼** to select the day and then press the **SET** softkey to confirm, or enter the correct number using the dialing keys.
7. Press **▲** or **▼** to select the year or enter the correct number using the dialing keys, then press the **SET** softkey.
8. Press **▲** or **▼** to select the hour and then press the **SET** softkey to confirm, or enter the correct number using the dialing keys.
9. Press **▲** or **▼** to select the minute and then press the **SET** softkey to confirm, or enter the correct number using the dialing keys.
10. Press **▲** or **▼** to choose **AM** or **PM**, then press the **SET** softkey to confirm. You hear a confirmation tone.

 **NOTE:** If the clock is not set when a message is recorded, the system announces, "Time and day not set," before the message is played.



# Telephone operation

## Make, answer or end a call on line 1 or line 2

---

### Using a cordless handset:

#### To make a call on line 1 or line 2:

1. Press **1 LINE/FLASH, 2 LINE/FLASH** or **📞/SPEAKER**.
2. Enter the telephone number.

#### To predial a call on line 1 or line 2:

1. Enter the telephone number.
2. Press **1 LINE/FLASH, 2 LINE/FLASH** or **📞/SPEAKER**.

#### To answer a call on line 1 or line 2:

- Press **1 LINE/FLASH, 2 LINE/FLASH** or **📞/SPEAKER**.

#### To end a call on line 1 or line 2:

- Press **🔌 OFF/CLEAR** or return the handset to the charger to hang up.

### Using the telephone base:

#### To make a call on line 1 or line 2:

1. Lift the corded handset or press **1 LINE, 2 LINE, HEADSET 📞 or SPEAKER 📞** on the telephone base.
2. Enter the telephone number.

#### To predial a call on line 1 or line 2:

1. Enter the telephone number.
2. Press **1 LINE, 2 LINE, HEADSET 📞 or SPEAKER 📞**, or lift the corded handset.

#### To answer a call on line 1 or line 2:

- Lift the corded handset.  
**-OR-**
- Press the line button of the ringing line.  
**-OR-**
- Press **HEADSET 📞 or SPEAKER 📞**.

#### To end a call on line 1 or line 2 call:

- If you are using the speakerphone, press **SPEAKER 📞**, or the corresponding line button to end the call.
- If you are using the corded handset, return it to the telephone base or press the corresponding line button.

# Telephone operation


## Using a Bluetooth headset:

Keep the headset within 15 feet of the telephone base for optimal performance. See the user's manual of your Bluetooth headset for more information.

## To answer a call on line 1 or line 2:



- Press **HEADSET**  on the telephone base or the call key on your headset.

## To end a call on line 1 or line 2:

- Press **HEADSET** , the corresponding line button, or the call key on your headset.

If you are on a call on line 1 or line 2 on the telephone base, you can transfer the call to your headset. The telephone base remains active.

## To transfer a call from the telephone base to a Bluetooth headset:

- Press **HEADSET** . The telephone base displays **Sending audio to headset**. To transfer the call from the Bluetooth headset back to the telephone base, lift up the corded handset or press **SPEAKER**  on the telephone base and continue speaking.

# Telephone operation

## Make, answer or end a cell call

---

### Using a cordless handset:

#### To make a cell call:

1. Press **CELL**, then enter the telephone number.
2. Press the **DIAL** softkey.

#### To predial a cell call:

- Enter the telephone number, then press **CELL**.

#### To answer a cell call:

- Press **CELL**.

#### To end a cell call:

- Press **OFF/CLEAR** or put the handset in the charger.

### Using the telephone base:

#### To make a cell call:

1. Press **CELLULAR**, then enter the telephone number.
2. Press the **DIAL** softkey.

#### To predial a cell call:

- Enter the telephone number, then press **CELLULAR**.

#### To answer a cell call:

- Press **CELLULAR**.

#### To end a cell call:

- Press **CELLULAR**, **SPEAKER**, or return the corded handset to the telephone base.

**NOTE:** If you have only one cell phone connected to the telephone base, it is automatically selected to make cell calls. If you have two cell phones connected to the telephone base, the telephone system prompts you to select a cell phone before you make a cell call.

# Telephone operation

## Conference calls on line 1 and line 2

---


### To conference both line 1 and line 2:

1. Press the **OPTION** softkey on the handset or telephone base.
2. Press the **SELECT** softkey to choose **Conference**.
3. The conferencing handsets or telephone base show **Lines now in conference**.

### To select an option while on a conference call:

1. Press the **OPTION** softkey on the handset or telephone base.
2. Press **▲** or **▼** on the handset or **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** on the telephone base to select one of the following options:
  - **End Line 1** - Hang up on line 1 and continue speaking on line 2.
  - **End Line 2** - Hang up on line 2 and continue speaking on line 1.
  - **End Conference**
  - **Directory**
  - **Call log**
3. Press the **SELECT** softkey.

### To end a conference call:

- Press  **OFF/CLEAR** on the cordless handset or put it back in the charger.  
**-OR-**
- Put the corded handset back to the telephone base to end the conference call.

# Telephone operation

## Hold

### To place a line 1 or line 2 call on hold:

- Press **HOLD** on the handset or telephone base.  
**L1) ON HOLD** or **L2) ON HOLD** appears on the handset and telephone base. The corresponding line buttons on the handset and telephone base flash.

### To resume a line 1 or line 2 call on hold:


- Press the corresponding line button:  
**1 LINE/FLASH** or **2 LINE/FLASH** on the handset, or  
**1 LINE** or **2 LINE** on the telephone base.

### To place a cell call on hold:

- Press **HOLD** on the handset or telephone base.  
The **CELLULAR** (📶) on the telephone base flash.

### To resume a cell call on hold:

- Press (📶) **CELL** on the handset or **CELLULAR** (📶) on the telephone base.

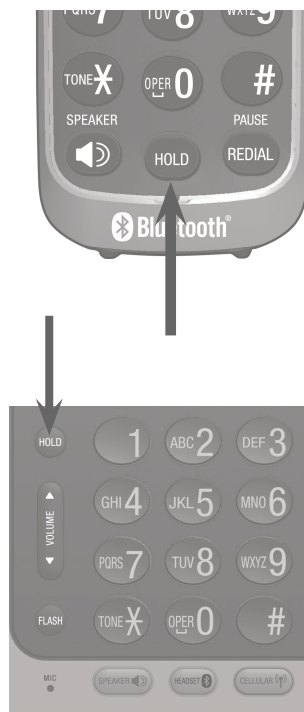

# Telephone operation

## Share an outside call

---

### To share an outside call:

#### Using a cordless handset:

- Press the corresponding line button (**1 LINE/FLASH** or **2 LINE/FLASH**) or **CELL** on another handset to join the call.
- Press **OFF/CLEAR** or place the handset in the charger to hang up. The call continues until all handsets and the telephone base hang up.

#### Using the telephone base:

- Lift the corded handset; press **1 LINE** or **2 LINE** to join the call on the respective line, or press **CELLULAR** for the cell line.
- Place the corded handset in the telephone base or press the corresponding line button (**1 LINE**, **2 LINE** or **CELLULAR**) to hang up. The call continues until all handsets and the telephone base hang up.

#### **NOTES:**

- You can use a maximum of four cordless system handsets and the telephone base at the same time on an outside call.
- The default line for the corded handset is determined by the line preference setting. To change the setting, please refer to the user's manual.

# Telephone operation

## Call transfer using intercom

---

### To transfer an outside call:

#### Using a cordless handset:

1. When on an outside call, press the **OPTION** softkey.
2. Press **▲** or **▼** to highlight **Intercom**, then press the **SELECT** softkey.
  - If you have only one cordless handset, press the **SELECT** softkey.
  - If you have two or more cordless handsets, your handset displays

#### **INTERCOM TO:**

- Press the **SELECT** softkey to select **BASE**.

**-OR-**

Press **0** for **BASE** and then press the **SELECT** softkey.

Your handset displays **Calling base**. The telephone base rings and displays **Handset X is calling**.

**-OR-**

- Press **▲** or **▼** to choose a destination handset, then press the **SELECT** softkey.

**-OR-**

Press **1-9** for **HANDSET 1-9**, **\*0** for **HANDSET 10**, **\*1** for **HANDSET 11** or **\*2** for **HANDSET 12**, and then press the **SELECT** softkey to initiate an intercom call.

Your handset displays **Calling handset X** and the destination handset rings and displays **Handset X is calling**.

3. To answer the call on the other handset, press **1 LINE/FLASH**, **2 LINE/FLASH** or **📞/SPEAKER**. The outside call is still on hold and both handsets now show **Intercom**.

**-OR-**

To answer the call on the telephone base, press **1 LINE**, **2 LINE** or **SPEAKER** **📞**. The outside call is still on hold and both the handset and telephone base now show **Intercom**.


4. Press the **OPTION** softkey and then the **SELECT** softkey to select **Transfer** on the calling handset, or put the original handset in the charger. The original handset displays **Call transferred**. The other handset or telephone base automatically connects to the outside call.



# Telephone operation

## Using the telephone base:

1. When on an outside call, press the **OPTION** softkey.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Intercom**, then press the **SELECT** softkey.
  - If you have only one cordless handset, the outside call is put on hold and the telephone base displays **Calling handset**. The cordless handset rings and displays **Base is calling**.
  - If you have two or more cordless handsets, the telephone base displays **INTERCOM TO:**.
    - Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to choose a destination handset, then press the **SELECT** softkey.
    - OR–  
Press **1-9** for **HANDSET 1-9**, **\*0** for **HANDSET 10**, **\*1** for **HANDSET 11** or **\*2** for **HANDSET 12**, and then press the **SELECT** softkey to initiate an intercom call.

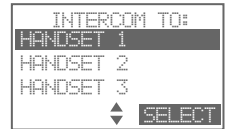

The telephone base displays **Calling handset X**. The destination handset rings and displays **Base is calling**.

3. To answer the call on the other handset, press **1 LINE/FLASH**, **2 LINE/FLASH** or **▲/SPEAKER**. The outside call is still on hold and both the handset and the telephone base now show **Intercom**. You can now have a private conversation between the cordless handset and the telephone base.
4. Press the **OPTION** softkey and then the **SELECT** softkey to select **Transfer** on the telephone base. The telephone base displays **Call transferred**. The destination handset automatically connects to the outside call.

# Answering system settings

## Answer ON/OFF

To turn the answering system on or off:


Using the telephone base:

- 1. Press **ON/OFF LINE 1** or **ON/OFF LINE 2** to turn on the corresponding answering system. The telephone base announces, *“Calls will be answered.”* The corresponding light turns on.
- 2. Press **ON/OFF LINE 1** or **ON/OFF LINE 2** to turn off the corresponding answering system. The telephone base announces, *“Calls will not be answered.”* The corresponding light turns off.



Using a cordless handset:

- 1. Press the **MENU** softkey on the handset in idle mode to enter the main menu.
- 2. Press **▲** or **▼** to scroll to **ANSWERING SYS**, then press the **SELECT** softkey.
- 3. Press **▲** or **▼** to choose **Mailbox 1** or **Mailbox 2**, then press the **SELECT** softkey.
- 4. Press **▲** or **▼** to highlight **Answer ON/OFF**, then press the **SELECT** softkey.
- 5. Press **▲** or **▼** to choose **On** or **Off**, then press the **SET** softkey to confirm. You hear a confirmation tone.

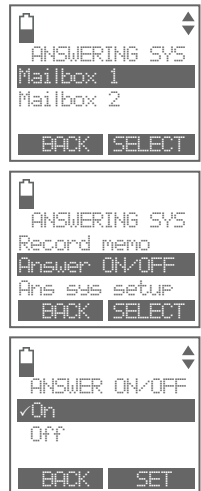

# Answering system settings

## Record your own announcement

### To record your announcement:

#### Using a cordless handset:

1. Press the **MENU** softkey on the handset in idle mode to enter the main menu.
2. Press **▲** or **▼** to scroll to **ANSWERING SYS**, then press the **SELECT** softkey.
3. Press **▲** or **▼** to choose **Mailbox 1** or **Mailbox 2**, then press the **SELECT** softkey.
4. Press the **SELECT** softkey again to choose **Announcement**.
5. Press the **SELECT** softkey again to choose **Annc audio**.
6. Press **▲** or **▼** to choose **Annc A** or **Annc B**, then press the **RECORD** softkey.
7. The handset announces, “Record after the tone. Press **STOP** when you are done.” After the tone, speak towards the microphone of the handset.
8. Press the **STOP** softkey when you finish recording.
9. The handset plays the recorded announcement and displays **Announcement playback**. Press the **STOP** softkey to stop the playback.



# Answering system settings

## Using the telephone base:

1. Press the **MENU** softkey on the telephone base in idle mode to enter the main menu.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Answering sys**, then press the **SELECT** softkey.
3. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to choose **Mailbox 1** or **Mailbox 2**, then press the **SELECT** softkey.
4. Press the **SELECT** softkey again to select **Announcement**.
5. Press the **SELECT** softkey again to choose **Annc audio**.
6. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to choose **Annc A** or **Annc B**, then press the **RECORD** softkey.
7. The telephone base announces, *“Record after the tone. Press **STOP** when you are done.”* After the tone, speak towards the microphone of the telephone base.
8. Press the **STOP** softkey when you finish recording.
9. The telephone base plays the recorded announcement and displays **Announcement playback**. Press the **STOP** softkey to stop the playback.



# Answering system settings

**-OR-**

1. Press **▼/REC** on the telephone base in idle mode.
2. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Announcement**, then press the **SELECT** softkey.
3. Press **▲DIR**, **▼CID**, **▲/DELETE** or **▼/REC** to highlight **Mailbox 1** or **Mailbox 2**, then press the **SELECT** softkey.
4. If the announcement mode is set to **Annc A only**, the telephone base displays **Current mode is Annc A only. Please select audio to record.** Press the **Annc A** softkey or the **Annc B** softkey to record an announcement.



**-OR-**

If the announcement mode is set to **Annc B only**, the telephone base displays **Current mode is Annc B only. Please select audio to record..** Press the **Annc A** softkey or the **Annc B** softkey to record an announcement.

**-OR-**

If the announcement mode is set to **A & B schedule**, the telephone base displays **Current mode is A & B schedule. Please select audio to record..** Press the **Annc A** softkey or the **Annc B** softkey to record an announcement.

5. The telephone base announces, *“Record after the tone. Press **STOP** when you are done.”* After the tone, speak towards the microphone of the telephone base. Press the **STOP** softkey when you finish recording.
6. The telephone base plays the recorded announcement and displays **Announcement playback**. Press the **STOP** softkey to stop the playback or press the **RETRY** softkey to record the announcement again.



**NOTES:**

- Your announcement can be up to 90 seconds in length.
- Announcements shorter than two seconds are not recorded.
- If the announcement you select to record does not match with the current announcement mode, the telephone base displays **Selected audio does not match current mode. Proceed?** Press the **YES** softkey to continue.

# Answering system operation

## Message playback

---

### To listen to messages at the telephone base:

Press **LINE 1/▶/■/MAILBOX** or **LINE 2/▶/■/MAILBOX** to listen to messages on the corresponding line.



Options during playback:

- Press **▼ VOLUME ▲** to adjust the speaker volume.
- Press **▶/SKIP** or the **SKIP** softkey to skip to the next message.
- Press **◀/REPEAT** or the **REPEAT** softkey to repeat the message currently playing. Press **◀/REPEAT** or the **REPEAT** softkey twice to listen to the previous message.
- Press **▲/DELETE** or **3** to delete the current message. The system advances to the next message.
- Press **LINE 1▶/■/MAILBOX**, **LINE 2▶/■/MAILBOX** or **CANCEL** to stop listening to messages.

### To listen to messages with a cordless handset:

1. Press the **MENU** softkey in idle mode.
2. Press the **SELECT** softkey to select **PLAY MESSAGES**.
3. Press **▲** or **▼** to select **Mailbox 1** or **Mailbox 2**, then press the **SELECT** softkey.
4. If there are new and old messages, press **▲** or **▼** to select **Play new msgs** or **Play old msgs**, then press the **SELECT** softkey.

Options during playback:

- Press **EQ**  to adjust the message playback audio quality.
- Press **▲/VOL** or **VOL/▼** to adjust the speakerphone volume.
- Press the **SKIP** softkey to skip to the next message.
- Press the **REPEAT** softkey to repeat the message currently playing. Press the **REPEAT** softkey twice to listen to the previous message.
- Press **3** to delete the current message. The system advances to the next message.
- Press  **OFF/CLEAR** to stop.



**[www.telephones.att.com](http://www.telephones.att.com)**

The *Bluetooth*® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

© 2010-2017 Advanced American Telephones. All Rights Reserved.  
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to  
Advanced American Telephones, San Antonio, TX 78219.  
Printed in China. Issue 10.0 AT&T 05/17.