

User's manual

TL87203 DECT 6.0 2-line corded/cordless telephone/ answering system with BLUETOOTH® wireless technology



Congratulations

on your purchase of this AT&T product. Before using this AT&T product, please read the **Important safety information** section on pages 171-173 of this manual. Please thoroughly read this user's manual for all the feature operations and troubleshooting information necessary to install and operate your new AT&T product. You can also visit our website at **www.telephones.att.com** or call **1 (800) 222-3111.** In Canada, dial **1 (866) 288-4268**.

This telephone meets the California Energy Commission regulations for energy consumption. Your telephone is set up to comply with the energy-conserving standards right out of the box. No further action is necessary.

This telephone system is compatible with certain AT&T DECT 6.0 cordless headsets and speakerphones. Visit **www.telephones.att.com/accessories** for a list of compatible cordless headsets and speakerphones.

Model number: TL87203 (corded telephone with one cordless handset and one cordless headset)

Type:

DECT 6.0 2-line corded/cordless telephone/answering system with BLUETOOTH[®] wireless technology

Serial number: _____

Purchase date: _____

Place of purchase: _____

Both the model and serial numbers of your AT&T product can be found on the bottom of the telephone base.

Save your sales receipt and original packaging in case it is necessary to return your telephone for warranty service.



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

The *Bluetooth*[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

© 2018 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219. Printed in China.

Parts checklist

Your telephone package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.





Telephone line cords (one black and one clear)



CD-ROM



USB cable

Parts checklist



Cordless headset with earbud attached



Headset charger



Battery with battery compartment cover attached





Five earbuds



Headset charger power adapter



Three over the ear hooks



Two over the head bands



Behind the neck band

User's manual

TL87203 DECT 6.0 2-line corded/cordless telephone/answering system with BLUETOOTH® wireless technology

Table of contents

Getting started

Installation	1
Quick reference guide - handset	2
Quick reference guide - telephone	
base	6
Quick reference guide - cordless	
headset and charger	. 10
Telephone base and charger	
installation	11
Telephone base installation	11
Handset charger installation	
Headset charger installation	
Battery installation and charging	
Handset battery installation	
Headset battery installation	
Power on/off the headset	
Line power mode (no AC power)	. 18
To make a call during a power	
failure	. 18
To answer a call during a power	
failure	. 18
Connect your telephone base to	
computer	
Compatibility	19
Installation of AT&T Softphone	
Call Manager on computer	
Audio Settings	
Installation options	21
Tabletop to wall-mount	24
installation	21
Wall-mount to tabletop	22
installation	.23
Belt clip & optional cordless	25
handset	
Headset attachments	.26

Bluetooth

Introducing Bluetooth	5 6 7 7 9
Bluetooth connection from idle mode4 Device list and connection4 Review the device list4 Connect/disconnect an active device42	1
Remove a paired device	3 4 6
Change PIN	7

Telephone settings

Cordless handset and telephone	
base settings	48
Ringer volume	49
Ringer tone	
LCD language	
Set date/time	
Caller ID announce	54
Set speed dial voicemail	
number	55
Voicemail (visual message	
waiting) number	57

Clear voicemail indication	57
Key tone	58
Use caller ID to automatically	
set date and time	58
Home area code	59
Cell area code	61
Dial mode	63
Line preference	63
QUIET mode	
Web address	64
No line alert	65
Cell alert	65
Cordless headset settings	66
Headset earpiece ringer	

Telephone operation

Telephone operation	67
Make, answer, or end a call on	
line 1 or line 2	67
Call waiting on line 1 or line 2	69
Make, answer, or end a cell call	
Call waiting on the cell line	
Answer an incoming cell call	
while on line 1 or line 2	73
Answer an incoming call on	
line 1 or line 2 while on a	
cell call	74
Make, answer or end a	
softphone call	75
Voice command	
Conference calls	77
Conference calls on line 1 and	
line 2	77
Conference calls on line 1 or	
line 2 with cell calls	78
Options while on calls	80
Silencing the ringer	80
Page all devices	80
Speakerphone	81
Join a call in progress	81
Volume control	82
Mute	
Temporary tone dialing	83
Hold	83
Equalizer	84
Chain dialing	85
Redial	
Review the redial list	
Dial a redial entry	87

Save a redial entry to the	
directory	.89
Delete a redial entry from the	
directory	.90

Multiple handset use

Intercom	91
Answer an incoming call during	
an intercom call	.93
Call transfer using intercom	.94
Push-to-talk (PTT)	.96
Turn PTT on or off	.96
PTT call to a single device	.97
PTT call to multiple devices	.99
Answer a PTT call	100
Change a one-to-one PTT call	
to an intercom call	101
Answer an incoming call during	
a PTT call	101
Make an outgoing call during	
PTT call	102
End or leave a PTT call	102

Directory

About the directory1	
Create directory entries 1	04
Create a new entry in the	
home directory1	04
Dialing keys1	06
Add a predialed telephone	
number to the directory1	107
Review the directory1	08
Review directory entries	
Search the directory1	
3-character alphabetical	
search	110
Dial, edit, or delete a directory	
entry	111
Dial a directory entry	
Edit a directory entry	
Edit the type of a directory	
	117
entry	
Delete a directory entry	113
Remove a downloaded	
directory1	114

Caller ID

About caller ID1	115
Information about caller ID with	
call waiting1	115

Caller ID log	116
How the caller ID log works	116
Missed (new) call indicator	116
Memory match	116
Caller ID operation	117
Review the caller ID log	117
View dialing options	118
Dial a caller ID log entry	118
Save a caller ID log entry to	
the directory	119
Delete caller ID log entries	121
Reasons for missing caller ID	
information	122

Answering system

Answering system settings	123
Announcement	123
Answer on/off	126
Call screening on/off	127
Number of rings	
Remote access code	
Message alert tone	130
Message recording time	
About the answering system	132
Answering system and	
voicemail indicators	132
Using the answering system	
and voicemail together	132
Message capacity	133
Voice prompts	133
Temporarily turning off the	
message alert tone	133
Call screening	
Call intercept	134
Message playback	
Options during playback	136
Delete all old messages	138
Recording and playing memos	
Record a memo	
Playback a memo	139
Remote access	.140

Appendix

Adding and registering cordless	
handsets/headsets/	
speakerphones	.142
Register a cordless handset to	
your telephone base	.142
Register a cordless headset to	
your telephone base	.143

Deregister all devices	144
Deregister all devices from the	
telephone base	144
Screen icons, alert tones, and	
lights	.145
Cordless handset screen icons	.145
Telephone base screen icons	146
Cordless handset alert tones	.147
Telephone base alert tones	
Headset alert tones	
Telephone base and cordless	
handset lights	.150
Headset lights	
Display screen messages	
Ścreen messages	
Troubleshooting	
Important safety information	
Safety information	
Especially about cordless	
telephones	. 172
Precautions for users of	
implanted cardiac	
pacemakers	.173
ECO mode	
Especially about telephone	
answering systems	.173
For C-UL compliance	
Mesures de sécurité	
importantes	.174
FCC Part 68 and ACTA	
FCC Part 15	
California Energy Commission	
battery charging testing	
instructions	180
Limited warranty	
Technical specifications	
DECT 6.0 digital technology	
Telephone operating range	
Redefining long range	
coverage and clarity	.183
HD audio	
Simulated full-duplex handset	
speakerphone	.183
Index	
Index	184

Getting started Installation

You must install and

using the telephone.

S See pages 14-16 charge the battery before for easy instructions.

Install the telephone base close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or vertically mounted on the wall (pages 21-22). For optimum range and better reception, place the telephone base in a central and open location.


If vou subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (pages 11-12). The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

Avoid placing the telephone base and chargers too close to:

- Communication devices such as television sets, VCRs, or other . cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage. .
- Excessive moisture.
- Extremely low temperature. •
- Mechanical vibration or shock such as on top of a washing machine or workbench.

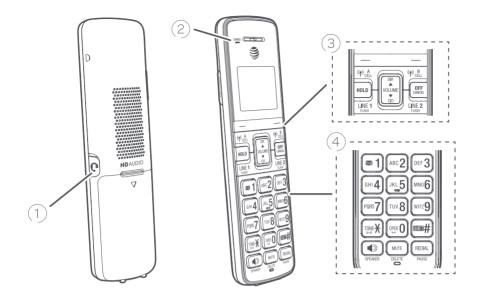

1 Headset jack

 Plug a 2.5 mm headset (not included) into the jack for handsfree telephone conversations.

(2) CHARGE light

• Steadily on when the handset is charging in the charger.

(3) Softkeys (2)

- Press to select the menu item displayed above the key).
- While in a menu, press to select an item or save an entry or setting.

() A CELL/ () B CELL

- Press to make or answer a cell call (page 70).
- During a cell call, press to answer an incoming cell A or cell B line call when you receive a call waiting alert (page 72).

HOLD


 During a call, press to put the current call on hold (page 83).

▲DIR/VOLUME

- Press to show directory entries when the telephone is not in use (page 108).
- Press to scroll up while in menus.
- While entering names or numbers in the directory, press to move the cursor to the right.
- Press to increase the listening volume when on a call (page 82), or to increase the message playback volume (page 136).

▼CID/VOLUME

- Press to show the caller ID log when the telephone is not in use (page 117).
- Press to scroll down while in menus.
- While entering names or numbers in the directory, press to move the cursor to the left.
- Press to decrease the listening volume when on a call (page 82), or to decrease the message playback volume (page 136).

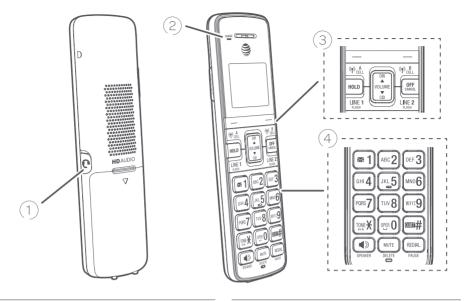

(3) OFF/CANCEL

- During a call, press to hang up (page 67).
- While in a menu, press to cancel an operation, return to the previous menu, or exit the menu display. You can also press and hold this button to return to idle mode.
- When the handset is ringing, press to mute the ringer temporarily (page 80).
- Press and hold while the telephone is not in use to erase the missed call indicator.

LINE 1/FLASH/LINE 2/FLASH


 Press LINE 1/FLASH to make or answer a call on line 1 (page 67). During a call, press to answer an incoming call on line 1 when you receive a call waiting alert (page 69). Press LINE 2/FLASH to make or answer a call on line 2 (page 67). During a call, press to answer an incoming call on line 2 when you receive a call waiting alert (page 69).

(4) 1

- While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory (page 118).
- Press and hold to set (page 55) or dial your voicemail number.

TONEX/a>A

- Press to switch to tone dialing temporarily during a call if you have pulse service (page 63).
- Press to switch between upper case and lower case while entering characters.

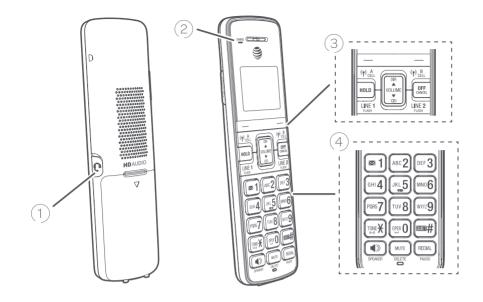

(4) **QUIET #** (pound key)

- Press repeatedly to display other dialing options when reviewing a caller ID log entry (page 118).
- Press and hold to enter the QUIET mode setting screen, or to deactivate QUIET mode (page 64).
- Press to toggle the name order when saving a caller ID log entry into directory.

■)/SPEAKER

- Press to make a call on line 1 or line 2 using the handset speakerphone (page 67).
- Press to answer a call on line 1 or line 2, cell A, or cell B line using the handset speakerphone (page 67, or 70).
- Press to switch between the handset speakerphone and the normal cordless handset use during a call (page 81).


MUTE/DELETE

- During a call, press to mute the microphone (page 82).
- While the telephone base is ringing, press to mute the ringer temporarily (page 80).
- While reviewing the redial list, directory, or caller ID log, press to delete an individual entry.
- While predialing, press to delete digits.
- While entering or editing a directory entry, press to erase a digit or character; or press and hold to erase all digits or characters.

REDIAL/PAUSE


- Press repeatedly to view the last 10 numbers dialed (page 87).
- While entering numbers, press and hold to insert a dialing pause (page 87).

- 5 PUSH TO TALK
 - Press to initiate a one-to-one (page 97) or one-to-group broadcast (page 99).
 - Press and hold to broadcast to a group of system devices (page 99).

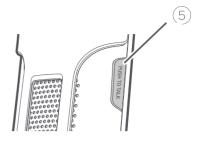

Main menu

The selected menu item is highlighted.

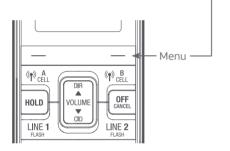


→ Feature menu

- Play messages (page 136)
- Directory (page 103)
- Caller ID log (page 115)
- Intercom (page 91)
- Ringers (page 49)
- Set date/time (page 52)
- Settings (page 48)
- Web address (page 64)
- Voice command (page 76)

Using menus:

- Press **MENU** to show the menu.
- ▶ Press ▼CID or ▲DIR to scroll through menu items.
- Press SELECT to confirm or save changes to a highlighted menu item.
- Press oFF/CANCEL to cancel an operation, back up to the previous menu, or exit the menu display.

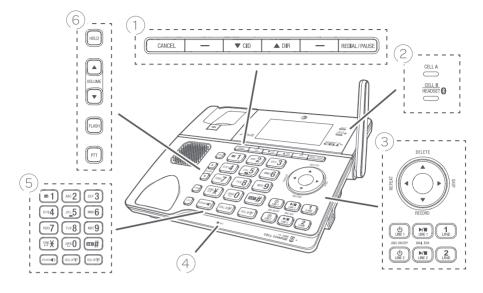

1 CANCEL

- While in a menu, press to exit without making changes; or press and hold to return to idle mode.
- Press and hold while the telephone is not in use to erase the missed call indicator (page 116).

Softkeys (2)

 Press to select the menu item displayed above the key.

▼CID

- Press to scroll down while in a menu.
- Press to review the caller ID log when the telephone is not in use (page 117).

▲DIR

- Press to scroll up while in a menu.
- Press to show directory entries when the telephone is not in use (page 108).

REDIAL/PAUSE

- Press repeatedly to view the last 10 numbers dialed (page 87).
- While entering numbers, <u>press</u> and hold to insert a dialing pause (page 118).

(2) CELL A light


- Steadily on when the telephone base is paired and connected with a Bluetooth device on Cell A line (page 37).
- Flash alternately while pairing a Bluetooth device (page 42).

CELL B/HEADSET 🚯 light

- Steadily on when the telephone base is paired and connected with a Bluetooth device on Cell B line (page 37).
- ► Flash alternately while pairing a Bluetooth device (page 42).

(3) ◀/REPEAT

- Press to repeat a message (page 136).
- Press twice to play the previous message.
- While editing names or numbers, press to move the cursor to the left.

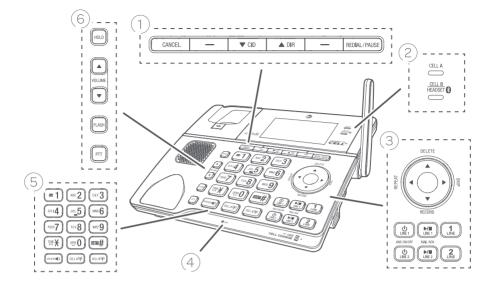

(3) ▲/DELETE

- Press to delete the message currently playing (page 136).
- When the phone is not in use, press to access the **DELETE OLD** MSGS menu (page 138).
- While entering names or numbers, press to delete a digit or a character.
- While predialing, press to delete a digit.
- Press to scroll up while in a menu.

►/SKIP

- During message playback, press to skip to the next message (page 136).
- While editing names or numbers, press to move the cursor to the right.

▼/RECORD

- Press to record an announcement or a memo (page 123).
- Press to scroll down while in a menu.

ပံ/LINE 1 ANS ON/OFF ပံ/LINE 2 ANS ON/OFF

 Press to turn the answering systems of line 1 or line 2 on or off (page 126).

▶/■/LINE 1 MAILBOX ▶/■/LINE 2 MAILBOX

- Press to play line 1 or line 2 messages (page 135).
- Press to stop playing line 1 or line 2 messages (page 135).

1 LINE/2 LINE

- Press to make or answer a call on line 1 or line 2 (page 67).
- Flashes slowly when a call on line 1 or line 2 is on hold.


(4) Microphone

(5) 🔼 1

- While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory (page 118).
- Press and hold to set or dial your voicemail number (page 55).

TONEX/a>A

- Press to switch to tone dialing temporarily during a call if you have pulse service (page 63).
- Switch between upper case and lower case while entering characters.

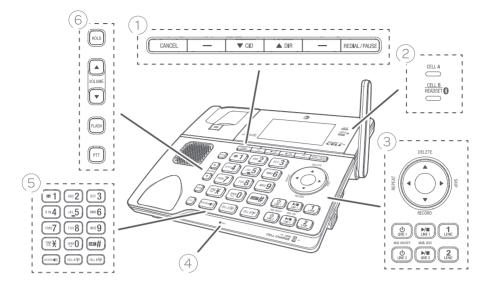

5 QUIET # (pound key)

- Press repeatedly to display other dialing options when reviewing a caller ID log entry.
- Press and hold to enter the QUIET mode setting screen, or to deactivate QUIET mode (page 64).

SPEAKER ()

- Press to make a call on line 1 or line 2 using the speakerphone (page 67).
- Press to answer a call on line 1, line 2, cell A, or cell B line using the speakerphone (page 67, or page 70).
- Press to switch between the corded handset and speakerphone (page 81).

CELL A()/CELL B()

- Press to make or answer a cell call (page 70).
- During a cell call, press to answer an incoming call when you receive a call waiting alert (page 72).
- Flashes quickly when there is an incoming cell call.
- Flashes slowly when a cell call is on hold.

6 HOLD

 During a call, press to put the current call on hold (page 83).

▼/VOLUME/▲

- Press to adjust the volume during message playback (page 135).
- Press to adjust the listening volume during a call (page 82).
- When the phone is not in use, press to adjust the telephone base ringer volume for all lines.

FLASH

 During a call on line 1 or line 2, press to answer an incoming call on the other line when you receive a call waiting alert (page 69).

PTT


- Press to initiate a one-to-one (page 97) or one-to-group broadcast (page 99).
- Press and hold to broadcast to a group of system devices (page 99).


(7) Micro USB port

- A micro USB port in the telephone base for connection to your computer via the USB cable is provided in the package (page 19).
- (8) USB charging ports
 - Two standard size USB ports in the telephone base for charging your cell phones.

Main menu

The selected menu item is highlighted.

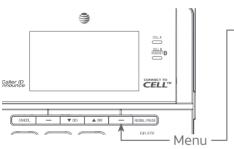

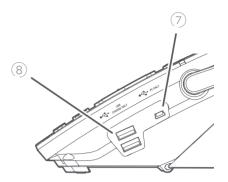


➤ Feature menu

- Answering system (page 123)
- Directory (page 103)
- Caller ID log (page 115)
- Intercom (page 91)
- Page all devices (page 80)
- Bluetooth (page 33)
- Ringers (page 49)
- Set date/time (page 52)
- Caller ID Annc (page 54)
- Settings (page 48)
- Web address (page 64)
- Voice command (page 76)

Using menus:

- Press MENU in idle mode to show the main menu.
- ▶ Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to scroll through menu items.
- Press SELECT to confirm or save changes to a highlighted menu item.
- Press CANCEL to cancel an operation, back up to the previous menu, or exit the menu display.

Getting started Quick reference guide - cordless headset and charger

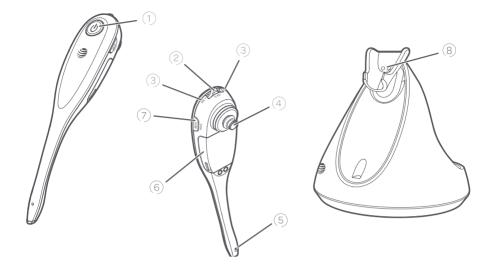

ျာပံ (On/off button and light)

 Press to make, answer or end a call (page 67).

(2) FLASH

 Press to answer an incoming call when you receive a call waiting alert during a call (page 69).

(3) VOL+/VOL-

 Slide the volume switch to the right or left to adjust the headset ringer volume while in idle mode, or the listening volume while on a call (page 82).

(4) Earpiece

(5) Microphone

 The microphone incorporates noise canceling technology for clearer calls.

(6) Battery with cover attached

 Remove to replace the battery (page 16).

7 MUTE/VOICE

- Press to mute the microphone during a call (page 82).
- Press to mute the ringer in the earpiece when there is an incoming call (page 80).
- Press to initiate the voice command feature when in idle mode (page 76).

(8) Magnetic charging mount

 Place the headset on the charger for charging.

Getting started Telephone base and charger installation


Install the telephone base and chargers, as shown below.

The telephone base is ready for tabletop use. If you want to change to wallmounting, see **Installation options** on page 21 for details.

Telephone base installation


- 1. Plug the corded handset cord into the **CORDED HS** jack at the back of the telephone base. Route the cord through the slot.
- 2. Plug the red end of the telephone base power adapter into the **POWER** jack at the bottom of the telephone base. Plug the other end into an electrical outlet not controlled by a wall switch. Route the cord through the slot.
- 3. Plug the telephone line(s) according to the instructions.

Option 1: If you have separate wall jacks for each line, plug the telephone lines, as shown below.

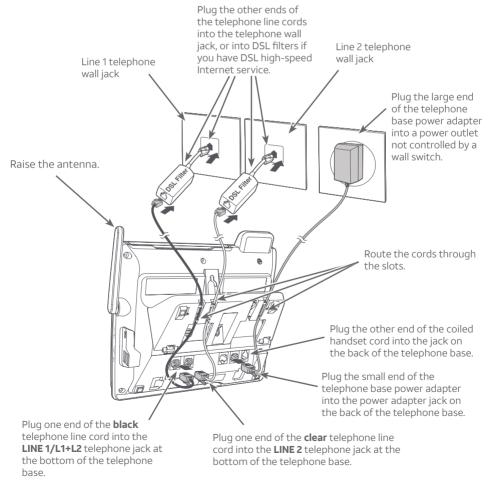


Getting started Telephone base and charger installation

Option 2: If you have a 2-line wall jack, plug the 4-conductor black telephone line, as shown below.

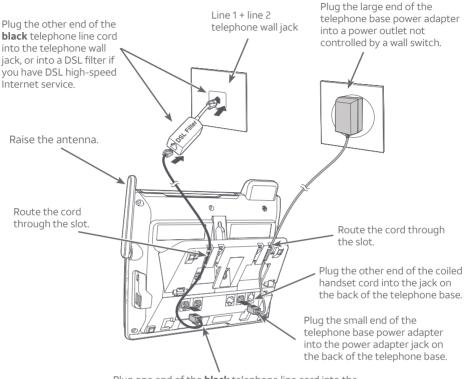

Plug one end of the **black** telephone line cord into the **LINE 1/L1+L2** telephone jack at the bottom of the telephone base.


Handset charger installation

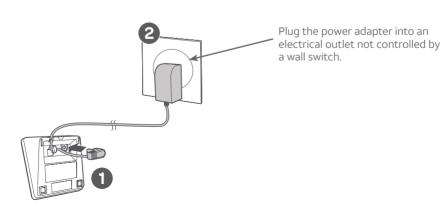

Getting started Telephone base and charger installation

Headset charger installation

Plug the small end of the headset charger power adapter into the power jack at the bottom of the headset charger. Route the power cord through the power cord slot. Plug the large end of the power adapter into an electrical outlet not controlled by a wall switch.

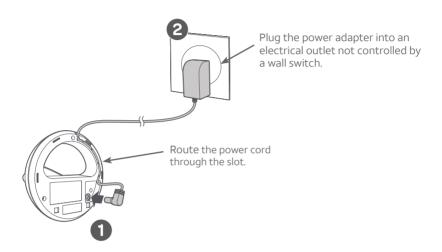

IMPORTANT INFORMATION:

- Use only the power adapter(s) supplied with this product. To obtain a replacement, visit our website at www.telephones.att.com or call 1 (800) 222-3111.
 In Canada, dial 1 (866) 288-4268.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of the telephone, so do not connect them to any ceiling, under-the-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.

Getting started Battery installation and charging

Install the handset battery, as shown below. Once you have installed the battery, the handset screen indicates the battery status (see the following table). For best performance, keep the cordless handset in the charger when not in use. The battery is fully charged after 11 hours of continuous charging. See the table in the **Technical specifications** section on page 183 for battery operating times.

If the screen shows **Place in charger** and [] flashes, you need to charge the cordless handset without interruption for at least 30 minutes to give the handset enough charge to use the telephone for a short time. The following table summarized the battery charge indicators and actions to take.

Handset battery indicators	Handset battery status	Action
The screen is blank or shows Place in charger and ⁽¹⁾ flashes.	The battery has no or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).
The screen shows Low battery and ^[] flashes.	Battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).
The screen shows HANDSET X .	Battery is charged.	To keep the battery charged, place it in charger when not in use.




NOTE: If you are on a phone call in low battery mode, you hear four short beeps every minute.

Getting started Battery installation and charging

Handset battery installation


Step 1

Plug the battery connector securely into the socket inside the handset battery compartment. Insert the supplied battery with the label **THIS SIDE UP** facing up, as indicated.

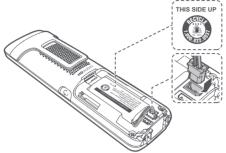

Step 2

Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

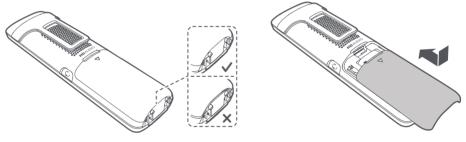



Step 3

Charge the cordless handset by placing it face forward in the charger. The **CHARGE** light on the top of the handset is on during charging.

IMPORTANT INFORMATION:


- Use only the supplied rechargeable battery or replacement handset battery (model BT183342/ BT283342). To order, visit our website at **www.telephones.att.com** or call **1 (800) 222–3111**. In Canada, dial **1 (866) 288–4268**.
- If you do not use the cordless handset for a long time, disconnect and remove the battery to
 prevent possible leakage.

Getting started Battery installation and charging


Headset battery installation

The headset battery is permanently attached to the battery compartment cover. Do not try to separate them from each other. After installing the battery, charge it for at least 15 minutes. You may be able to make and receive short calls. For optimal performance, charge the headset battery for at least three hours before use. When fully charged, the headset battery provides approximately 12 hours of talk time or 5 days of standby time. When the headset is not in use, recharge it by returning it to the headset charger.

- 1. Insert the battery into the battery compartment.
- 2. Press down on the battery until it clicks into place.

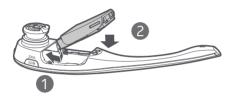

3. Insert the headset into the magnetic charging mount.

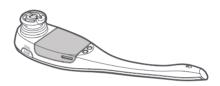

 The magnet holds the top of the headset in place. The **v** light turns on.





NOTE: Remove any headset attachment, except the earbud, before battery replacement.

IMPORTANT INFORMATION:

Use only the supplied rechargeable battery pack or replacement headset battery pack. To
order a replacement battery (model BT191665/BT291665), visit our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

Getting started Power on/off the headset

Power on the headset before use.

To power on the headset:

- Place the headset in the headset charger.
 - -OR-
- Press and hold ^ψ for two seconds.

The ${\bf \upsilon}$ light flashes blue three times. You hear three beeps when it is being powered on.

Power off the headset if it will not be used for a long time.

To power off the headset:

▶ Press and hold 𝔄 for four seconds.

The ${\bf \Phi}$ light flashes red three times. You hear three beeps when it is being powered off.

Prolonged exposure to high volume levels using the headset may damage your hearing.

_{Getting started} Line power mode (no AC power)

This telephone provides minimal functionality during a power failure. When AC power is not available, the screen is blank and many telephone features do not function. Only touch-tone dialing and corded handset volume adjustment are supported. The telephone uses power from the telephone line to enable you to make and answer calls on **Line 1** only using the corded handset and dialing keys.

After you install your telephone or the power returns following a power outage, the telephone base or cordless handset will prompt you to set the date and time. For instructions, see **Set date and time** on page 52 for details. To skip setting the date and time, press **CANCEL** or **BACK** on the telephone base, or press **OFF/CANCEL** or **BACK** on the corded handset.

To make a call during a power failure

- Lift the corded handset and wait for a dial tone. The screen displays
 No AC power. System can only access Line 1.
- 2. Slowly dial a telephone number using the dialing keys. Wait to hear each key tone upon inputting a digit before pressing the next dialing key.



NOTE: When the telephone is not powered by the supplied power adapter, there is a delay when dialing digits.

To answer a call during a power failure

1. Lift the corded handset.



NOTE: The screen does not show incoming caller ID information during a power failure.

Getting started Connect your telephone base to computer

Your new AT&T **TL87203** allows you to make and receive softphone calls by connecting the telephone base to your computer by using the USB cable provided in the package. You can manage softphone Voice over IP (VoIP) calls through Skype[®] or Microsoft Lync[®], landline calls, or cell calls by using the **AT&T Softphone Call Manager**. You can also use the voice command feature to make calls (see page 60) after you have installed the **AT&T Softphone Call Manager**. For more details about the software, refer to the English or French **Installation and Operation Guide**, available in the CD-ROM which comes with the package.


Compatibility

The AT&T Softphone Call Manager works with:

Operating systems	Software programs and versions
Windows Vista [®] , Windows 7, Windows 8	Skype [®] 5.0 or above, Windows Media Player [®] 10 or above, Microsoft Outlook [®] 2003 or above, Microsoft Lync [®] 2010/2013, iTunes [®] 10 or above, Landline calls controllers

To connect the telephone base to your computer:

 Plug the USB cable into your computer, as shown below. Wait for your computer to recognize your AT&T TL87203.

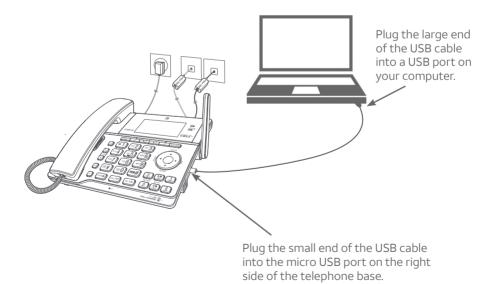

Installation of AT&T Softphone Call Manager on computer

To install AT&T Softphone Call Manager:

 Put the CD-ROM that comes with the package into your computer. Open My computer, and then double click to open the disk drive.
 -OR-

Visit **www.telephones.att.com/downloads** to download the software. Unzip the file after download.

- 2. Double click the installation file to begin the InstallShield Wizard.
 - If any security warning window pops up, tick the option check box to authorize the installation of the software. Click **Run**.
- 3. Select the language to be displayed during the installation and in the program. Click **OK** to continue.
- 4. Click **Next>**. Read the license agreement, and then accept the terms by pressing the upper check box. Press **Next>** to continue.
- The default installation path is:
 "C:\Program Files\AT&T\AT&T Softphone Call Manager v3".
 Click the Browse... button to change the path, if necessary. Click Next>.
- 6. Select the program to connect to the software. Click **Next>**.
- 7. Click Install.
- 8. When the installation is complete, press **Finish** to exit the installation program.
 - If you want to launch the AT&T Softphone Call Manager after installation, tick the option check box before pressing Finish.

Audio Settings

After you have installed the **AT&T Softphone Call Manager**, check to make sure the audio setting is properly configured in your Skype and/or Microsoft Lync.

Audio settings in Skype:

- 1. Launch the Skype program.
- 2. Click **Tools**, and then **Options**.
- 3. Click Audio settings.
- 4. Make sure **AT&T USB Audio** is selected under the speakers and microphone settings.

Audio settings in Microsoft Lync:

- 1. Launch the Microsoft Lync program.
- 2. Click **Options**, and then **Audio device**.
- 3. Make sure **AT&T USB Audio** is selected under the Audio device setting.

IMPORTANT



Periodically check for software updates. Go to the **ABOUT** tab under the **Settings** panel in the **AT&T Softphone Call Manager**, and then click **Check Update**. For more details, refer to the **Software updates** section in the **Installation and Operation Guide**, available in the **CD-ROM** which comes with the package.


Getting started Installation options

The telephone base comes with a mount bracket set for tabletop use. If you want to mount your telephone on a wall, rotate the mount bracket down so the telephone can connect with a standard dual-stud telephone wall-mounting plate. If you do not have this mounting plate, you can purchase one from many hardware or consumer electronics retailers. You might need a professional to install the mounting plate.

Tabletop to wall-mount installation

To install the telephone base in the wall-mount position, make sure that you first unplug the telephone line cords and power adapter from the telephone wall jack and power outlet.

1. Pull the integrated wall-mount bracket and release it from the tabletop orientation, as shown below. Rotate it down into wall-mount position and then push it into the telephone base until it clicks into place.

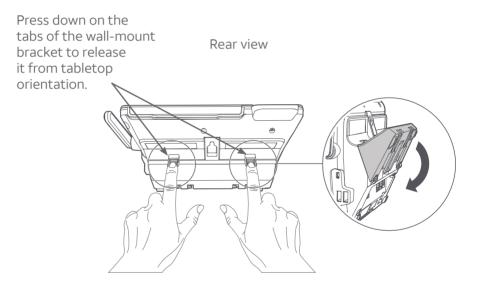





Wall-mount

Getting started Installation options


2. Slide the handset tab upward. Rotate the handset tab by 180 degrees. The protruding edge of the handset tab holds the corded handset in place when the telephone is mounted on the wall.

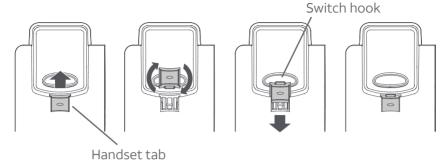

3. Make sure the telephone line cords and the power adapter are plugged into their jacks on the telephone base, and are routed through the channels. If necessary, bundle the telephone cords and power adapter cord, and secure them with twist ties. Plug the power adapter and telephone lines into the wall outlets.

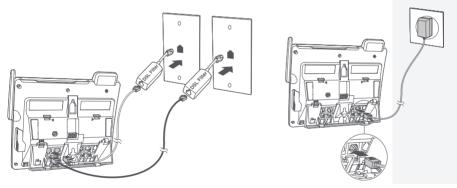


4. Align the mounting studs on the mounting plate with the mounting holes on the bracket and press the telephone base down until it clicks securely into place.

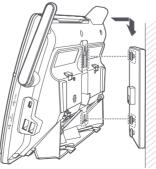

Wall-mount to tabletop installation


To change the telephone base from the wall-mount position to tabletop position:

- 1. Remove the telephone base from the wall.
- 2. If necessary, untie the bundled telephone line cords and power adapter cord. Make sure that you unplug the power adapter and telephone line cords from the wall outlets before you begin.
- 3. Push, as indicated by arrows in the illustration, until the bracket is released, and then rotate it upward until it clicks into the tabletop position.

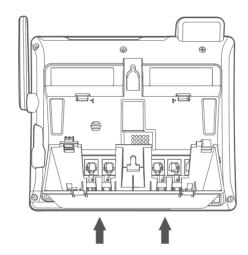


Rear view



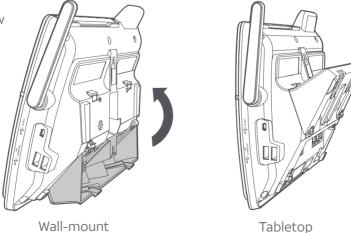


Getting started Installation options

4. Slide the handset tab upward. Rotate the handset tab by 180 degrees.

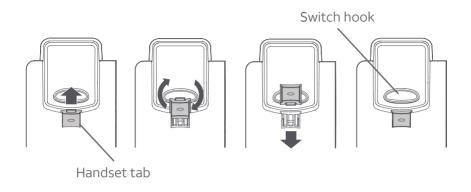


5. Make sure the telephone line cords and power adapter cord are securely plugged into their jacks on the back of the telephone base. Plug the power adapter and telephone lines into the wall outlets.

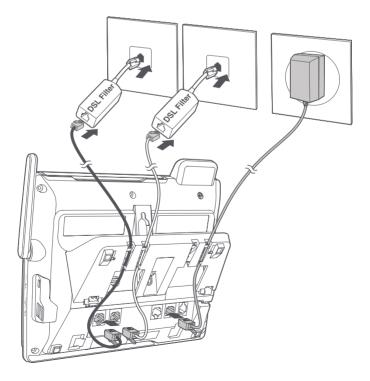

Getting started Belt clip & optional cordless handset




To attach the belt clip: Snap the belt clip into the slots on both sides of the cordless handset

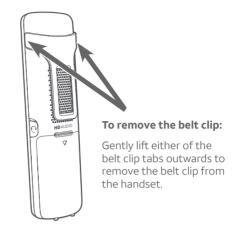

For handsfree telephone conversations, you can use any industry standard 2.5 mm headset (purchased separately). For best results, use an AT&T 2.5 mm headset. To purchase a headset, visit our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

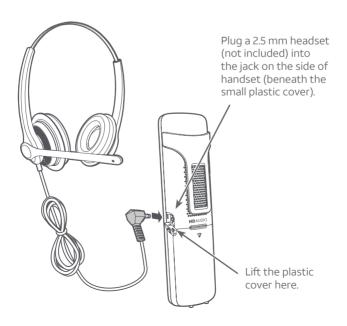

Earbud

There are a total of six earbuds provided. One of them has been attached to the headset. They come in three sizes of which there are two types: one normal and one providing a deeper fit. Follow the steps, as mentioned below, to change the earbud.

To remove the earbud from the headset earpiece:

Hold both sides of the earbud. Twist and pull the earbud until it separates from the earpiece.






2

To attach the earbud to the headset earpiece:

- 1. Choose an appropriate earbud.
 - Insert the earbuds into your ear to check the best fitting. Remove them from your ear after checking.



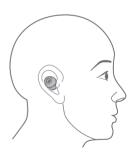

- 2. Position the earbud on the earpiece, as shown below.
- 3. Press the earbud down on the earpiece until it securely holds in place. Move the earbud around so that the protruding bump on the earbud is pointing towards your mouth when placed on your ear.





Over the ear hook

There are three ear hooks provided. Choose the size that best fits your need to attach to the headset. Follow the steps, as mentioned below, to attach an ear hook to the headset.

To position the headset to wear on the left or right ear:

- To wear on the left ear:
 - 1. Make sure the ear hook loop is positioned, as shown on the right.
 - 2. Attach the ear hook to the headset, as instructed below.




Ear hook loop

Ear hook loop


- To wear on the right ear:
 - 1. Make sure the ear hook loop is positioned, as shown on the right.
 - 2. Attach the ear hook to the headset, as instructed below.

To attach the ear hook to the headset:

- 1. Make sure there is no headset attachment, except the earbud, connected to the headset.
- 2. Insert the earpiece into the ear hook loop.
- 3. Press the edge of the ear hook loop towards the earpiece until it clicks into place.
- 4. Adjust and rotate the ear hook position to fit your ear.

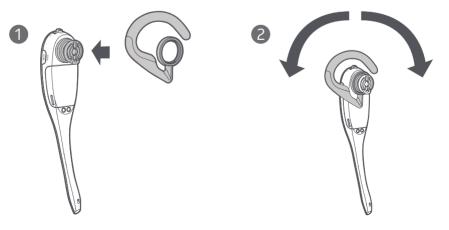


5. Hook the headset onto the desired ear. Adjust the angle of the headset until the microphone is pointing towards your mouth, as shown below.

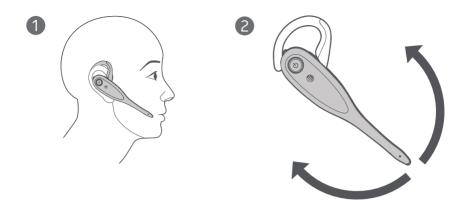

To remove the ear hook from the headset:

Hold the headset with one hand. Twist and pull the ear hook with the other hand until it separates from the earpiece.

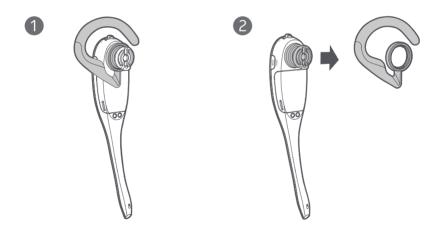

Over the head band


There are two over the head bands provided. Choose the one that best fits your need to attach to the headset. Follow the steps, as mentioned below, to attach an over the head band to the headset.

To attach the head band to the headset:

- 1. Make sure there is no headset attachment, except the earbud, connected to the headset.
- 2. Insert the earpiece into the loop of the ear pad.
- 3. Push the earpiece into the ear pad until it clicks into place.



4. Adjust the head band to fit your head. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth, as shown below.

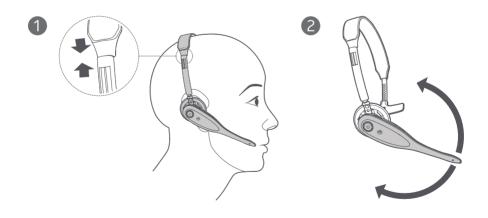





- To wear on the other ear, rotate the headset within the loop of the ear pad.
- Firmly grip the ear pad with one hand whenever adjusting the headset microphone up or down.

Getting started Headset attachments

To remove the head band from the headset:

Hold the headset with one hand and the ear pad with the other hand. Twist and pull the headset until it separates from the ear pad.

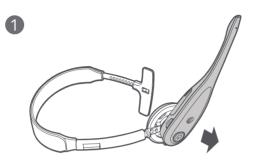

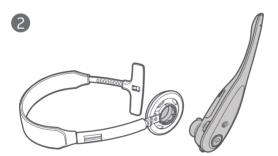


Getting started Headset attachments

Behind the neck band


By default, the ear pad on the neck band is positioned to be worn on the right ear.

To attach the headset to the neck band:

- 1. Make sure there is no headset attachment, except the earbud, connected to the headset.
- 2. Insert the earpiece into the loop of the ear pad.
- 3. Gently press the earpiece inward until it clicks into place.

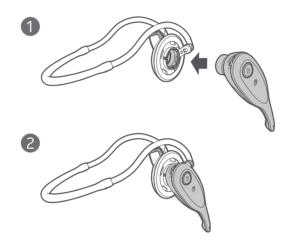


- 4. Place the neck band around your neck and over your ears.
- 5. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth.

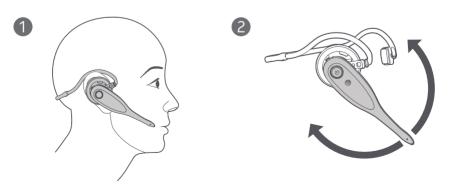

Getting started Headset attachments


To wear the headset on your left ear:

- 1. Remove the ear pad and supporting pad from the neck band by carefully pulling them up through the stems at the end of the neck band.
- 2. Snap the socket of the ear pad into the stem at the left end of the neck band. Snap the socket of the supporting pad into the stem at right end of the neck band.
- 3. Follow Steps 1-5 in **To attach the headset to the neck band** on page 31.

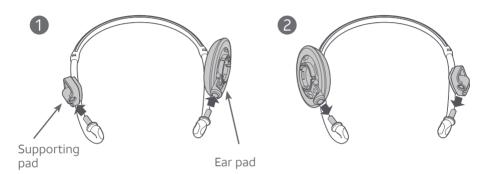

To remove the neck band from the headset:

Hold the headset with one hand and the ear pad with the other hand. Twist and pull the headset until it separates from the ear pad.

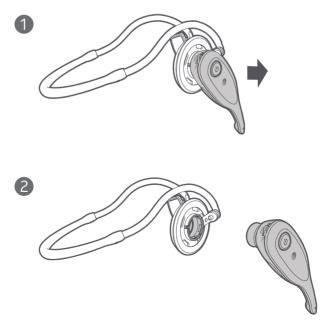

Bluetooth Introducing Bluetooth

Your new AT&T **TL87203** telephone system with Bluetooth wireless technology has the following features:

- Pair up to 4 Bluetooth enabled devices (cell phones or headsets) with the telephone base.
- Connect a maximum of 2 Bluetooth enabled devices to make and receive cell calls. Both cell phones can be active on a call at a time.
- Connect a Bluetooth enabled headset for making and receiving calls on line 1 or line 2.
- Conference any combination of cell and line 1 or line 2 calls.
- Make and receive calls by using your cell phone service with your telephone base or system handsets.
- Download phonebook entries from your cell phone.
- Ringtone share feature allows you to set your telephone to play your iPhone[®] (iOS 4.1 or later) ringtone.

IMPORTANT INFORMATION


- After plugging in the telephone base, wait at least 20 seconds before connecting a Bluetooth device. The screen shows **Bluetooth system busy** if you try to connect too soon.
- Refer to the user's manual of your Bluetooth enabled cell phone or headset for more information about how that device uses Bluetooth connectivity.
- Bluetooth wireless technology operates within a short range (up to 30 feet) from the telephone base. Keep connected cell phones and headsets within this range.
- If your cell phone has poor reception in your home, the **TL87203** cannot improve the reception. However, if there is a location in your house with better reception, you can leave your cell phone at that location while you use the **TL87203** cell line. For optimal performance, the cell phone must be within 15 feet of the telephone base.

iPhone® is a registered trademark of Apple. Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

Bluetooth Introducing Bluetooth

 If you experience poor sound quality, it may be caused by the distance between your cell phone and the telephone base. To improve the performance, place your cell phone closer to the telephone base (within 15 feet) and make sure that there are no physical obstacles such as large furniture or thick walls in between.

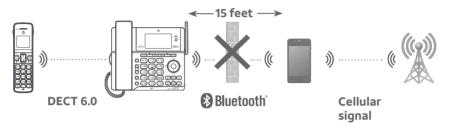

- Charge your cell phone while it is connected to the telephone base. Your cell phone's battery discharges faster while it is connected to the telephone base via Bluetooth wireless technology.
- Monitor your cell phone's usage because minutes may be deducted from your cellular plan for the duration of all cell calls, depending on the terms of your plan.

Refer to the **Bluetooth setup** section (pages 37-47) to learn how to set up your Bluetooth device. Refer to the **Telephone operation** section (pages 67-102) on how to operate your Bluetooth devices with your new AT&T **TL87203** telephone system with Bluetooth wireless technology. Refer to the **Troubleshooting** section (pages 156-169) if you experience difficulty when using the telephone system.

The *Bluetooth*[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Bluetooth Introducing Bluetooth

Connect to Cell[™] application

If you are using Bluetooth-enabled cell phones with Android[®] OS 2.3 or above, you can further extend the flexibility of your **TL87203** with use of the free **Connect to Cell** application.

Connect to Cell comprises **Caller ID manager** and **Alerts manager** that help integrate your cell phone with the AT&T telephone system.

Caller ID manager (Caller ID share) allows you:

- To view your AT&T phone's caller ID log on your Android cell phone;
- To use your Android cell phone to call back or send messages to individuals who have called to line 1 or line 2 on the AT&T telephone;
- To store callers' names and numbers to your Android phone's directory for future use.

Alerts manager (Mobile notifications) allows you to extend your Android phone's alerts to your AT&T telephone system. Your AT&T telephone will notify you whenever you receive certain text messages, e-mails, or social media updates on your Android phone, so you will always be kept up-to-date.

To use **Caller ID manager** and **Alerts manager**, you must first download **Connect to Cell** to your Android cell phone using the **Google Play® Store** app. Scan the QR code on the right to download the application.



Connect to Cell^ ${}^{\rm M}$ is a trademark of Advanced American Telephones. Android® and Google Play® are registered trademarks of Google Inc.

Bluetooth Glossary of terms

The following are some terms used in this user's manual to help you become familiar with using your Bluetooth devices and your new AT&T telephone system.

Active devices - the Device list has two active slots for two cell phones, or one cell phone and one headset. When a device in the list is active, it will have an A: or B: in front of the device name. In order to use a Bluetooth device on a call, it must be in an active slot and be connected.

Bluetooth cell phone - refers to a mobile Bluetooth enabled cellular telephone.

CELL line - the telephone line associated with your cell phone service. On your **TL87203**, press (**n**) **A CELL** or (**n**) **B CELL** on a handset, or **Cell A**(**n**) or **CELL B**(**n**) on the telephone base to use the cell line.

Connected - when you pair a Bluetooth device to the **TL87203**, it is placed in an active slot and automatically connected. When a device is connected, an **A** and/or **B** will display on the screens of the handset and the telephone base. **CELL A** and/or **CELL B/HEADSET** light on the telephone base will be on. If a device loses its connection to the telephone base, it must be reconnected before you can use the device with the telephone system.

Device list - the list of devices connected to the telephone.

Disconnected - when a device is disconnected, **A (b)** and/or **(b) b** displays on the screens of cordless handsets and the telephone base. **CELL A** and/or **CELL B/HEADSET (b)** light on the telephone base is/are off.

Discoverable mode - before a Bluetooth enabled device can be paired, it must be set to this mode. When pairing your cell phone, the telephone base is set to this mode. Depending on the cell phone manufacturer, this mode is sometimes referred to as **Find Me** or **Visibility**.

LINE 1 and **LINE 2** - your conventional telephone landlines. Press **LINE 1/FLASH** or **LINE 2/FLASH** on a handset, or press **1 LINE** or **2 LINE** on the telephone base to use the corresponding line.

Paired devices - the Bluetooth enabled devices (cell phones or headsets) that have shared registration information with the telephone base. A total of four Bluetooth enabled devices can be paired to the telephone base. However, only two paired devices can communicate with the base at a time.

Pairing - sometimes referred to as **bonding**. The process of sharing registration information between two Bluetooth enabled devices. Your Bluetooth enabled cell phone or headset must first be paired to the telephone base in order to use it with this telephone system.

PIN - by default, the PIN is **0000** for the telephone base and for most Bluetooth devices. PIN information may be exchanged between Bluetooth devices before they can be used. This is also known as a **Passkey** or **Passcode**.

To use a Bluetooth enabled cellular phone or headset with your telephone, you must first pair and connect your Bluetooth cellular phone or headset with the telephone base. The **TL87203** can be used to make or answer calls on the cell phone line.

Bluetooth wireless technology operates within a short range (up to 30 feet). When you pair a Bluetooth cell phone or Bluetooth headset to the telephone base, keep the device within 15 feet of the telephone base for optimal performance.

Add a cell phone

Before you begin, make sure that you have cellular coverage and your Bluetooth enabled cell phone is not connected to any other Bluetooth device. Refer to your cell phone user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a cell phone:

Using the telephone base:

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Bluetooth, and then press SELECT.
- 3. Press **SELECT** to choose **Add device**.
- Press SELECT to choose Add cellular. The screen displays Please wait..., followed by 1. If cell is connected to BT device, please disconnect it. The cell device lights (CELL A and CELL B/HEADSET) on the telephone base flash, alternately.
 - If there are already 4 paired devices on the device list, the 4th one on the list will be automatically removed, regardless of whether the pairing of the new device is successful or not.
 - If there are already 2 active devices on the device list with prefix A: or B:, the telephone base shows Cell phone A is deactivated for adding a new device.
- Caller ID 109 Intercom Page all devices Bluetooth BACK ◆ SELECT BLUETOOTH Add device Device list Download dir BACK ◆ SELECT ADD DEVICE Add cellular Add headset
 - Set cell to search base: AT&T DECT 6.0 discoverable PIN:0000

BACK 🗘 SELECT

- 5. Press **NEXT**. The screen displays **2. Place cell phone next** to base.
 - All devices that are connected to the telephone base are disconnected until the pairing process completes.
- 6. Press **NEXT** to turn on the telephone base discoverable mode. The screen displays **Set cell to search base: AT&T DECT 6.0 PIN: 0000**. Promptly turn on the Bluetooth feature of your cell phone and search for or add new devices.

- Once your cell phone finds your AT&T phone (AT&T DECT 6.0), press the appropriate key on your cell phone to continue the pairing process.
 - Your cell phone may require a passcode. In this case, the telephone base displays Check cellular. ENTER PASSCODE. Enter the cell phone passcode (typically 0000) into the telephone base and press SET.
 - Enter the PIN of the telephone base (the default PIN is 0000) into your cell phone to continue the pairing process, if required. The telephone base displays
 Adding Cell Phone A.

Addin9 Cell Phone A

Cell Phone A is added and connected to base.

 When a device is successfully connected, the telephone base displays Cell Phone A is added and connected to base. You hear a confirmation tone. The corresponding status icon (A O or B) displays. The corresponding device light on the telephone base (CELL A and/or CELL B/HEADSET O) turns on.

If you have trouble pairing your cell phone, it may not be compatible with your TL87203. Check the Bluetooth compatibility list at www.telephones.att.com/bluetooth.

|--|

- The pairing process may take up to one minute. If the pairing process fails, turn off the Bluetooth feature on your cell phone and on the **TL87203** by pressing **Cell A**(n) or **CELL B**(n). Repeat the steps, as mentioned above, to pair and connect again. In some cases, it may take you a few attempts to complete the pair process.
- ▶ The steps for the pairing process may vary for different cell phones. If this happens, follow the prompts on your cell phone and your **TL87203** to complete the pairing process.
- Refer to the user's manual of your cell phone on how to search for or add a new Bluetooth device.

Add a headset

Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device. Refer to your Bluetooth headset user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a headset: Using the telephone base:

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to choose **Add device**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Add headset, and then press SELECT. The screen displays Please wait..., followed by If headset is connected to cell, please disconnect it.
 - If there are already 4 paired devices on the device list, the 4th one on the list will be automatically removed, regardless of whether the pairing of the new device is successful or not.
 - If there is another headset already active, the screen will show Only Bluetooth headset in slot B can be ready for connection, and then Please wait..., followed by Headset X is deactivated.
- Press NEXT. The screen displays Pls set headset to discoverable mode. Set your headset to discoverable mode (refer to the user's manual of your headset), and then press NEXT.
 - All devices that are connected to the telephone base are temporarily disconnected.
- 6. The screen displays **Searching for Bluetooth headsets...**
- 7. When the screen displays the found devices, press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight your headset, if necessary, and then press SELECT.
 - Enter the PIN of your headset, if required. The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your headset), and then press NEXT.



- 8. The screen displays **Adding Headset A** when the base is connecting to your headset.
- 9. When a device is successfully connected, the telephone base displays Headset A is added and connected to base and the corresponding status icon (B) displays. You hear a confirmation tone. CELL B/HEADSET B light on the telephone base turns on.

Headset A is added and connected to base.

If you have trouble pairing your cell phone or headset, it may not be compatible with your TL87203. Check the Bluetooth compatibility list at www.telephones.att.com/bluetooth.

1	
I	\equiv
I	_

NOTES:

- The pairing process may take up to one minute.
- If the pairing process fails, turn off the Bluetooth feature on your headset and on the TL87203 by pressing Cell A⁽ⁿ⁾ or CELL B⁽ⁿ⁾. Repeat the steps of To pair and connect a headset to pair your headset and the telephone base. In some cases, it may take you a few attempts to complete the pairing process.
- ▶ When a connected headset is charging, it may disconnect from the telephone base and the CELL B/HEADSET ③ light on the telephone base turns off. For some headset models, you may need to turn on the headset and reconnect it to the telephone base again.
- Refer to the user's manual on how to set your headset to discoverable mode.

Auto connection

When an active device moves within Bluetooth range of the telephone base, or is turned on within range, the telephone base tries to connect to the device. When the device moves out of range, it is disconnected. Your device might make a connect or disconnect sound.

A connected device could also be disconnected by:

- Turning off the Bluetooth device.
- ▶ Turning off the Bluetooth feature of the device.
- Disconnecting through the telephone base **Device list**. If you disconnect through the **Device list**, the telephone base will not attempt to reconnect until your device is moved out of range and then back in range again.

Bluetooth connection from idle mode

When you have active devices that are not connected, **CONNECT** appears on the telephone base in idle mode. Press **CONNECT** on the telephone base to start connecting an active device. When there are two active devices, the screen will prompt you to choose one before connection.

Device list and connection

Up to 4 devices can be paired to the telephone base. All paired devices are shown on the device list. To use a paired device, it must be in an active slot (**A**: or **B**:) on the device list and connected. Both Bluetooth-enabled devices can be on a call at a time.

Once you have paired a device with the telephone base, you do not need to repeat the pairing procedure again unless you delete the device from the device list.



NOTE: When connecting a Bluetooth device to the device list, all connected devices will be temporarily disconnected until the procedure is complete. It may take up to two minutes to reconnect.

Review the device list

- 1. Press MENU on the telephone base in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Bluetooth, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Device list, and then press SELECT.

Connect/disconnect an active device

While in the device list menu, you may connect or disconnect your active device.

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Bluetooth, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Device list, and then press SELECT.
- 4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight a device, and then press OPTION.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Connect/Disconnect (whichever is applicable), and then press SELECT. The telephone base displays Device connected/Device disconnected. You hear a confirmation tone.




NOTE: When your active device is connected, you are prompted to select **Disconnect**. When your active device is disconnected, you are prompted to select **Connect**.

Remove a paired device

When you already have a maximum of 4 paired devices and you want to add another device, you must first delete one from the device list.

To remove a paired device:

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Device list**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired device, and then press OPTION.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Remove**, and then press **SELECT**.
- The handset displays Remove Cell Phone X? or Remove Headset X? (X represents the slot of the device). Press YES to confirm. The telephone base displays Device removed from device list and you hear a confirmation tone.

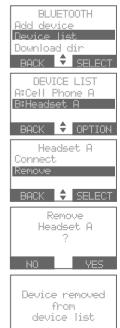

Replace an active device

If you already have 2 active devices and you want to activate a different one, you must deactivate one of the 2 active devices.

To replace an active device:

- 1. Press MENU on the telephone base in idle mode.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Device list**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the device you want to activate without a prefix A: or B:, and then press OPTION.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Connect, and then press SELECT. The handset displays Only 2 devices can be ready for connection, and then a list of devices for deactivation.
- 6. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the device to be deactivated, and then press NEXT. The screen displays Cell Phone X is deactivated or Headset X is deactivated (X represents the slot of the deactivated device) and you hear a confirmation tone. Then, the screen displays Connecting Cell Phone X to the base... or Connecting Headset X to the base... (X represents the slot of the replacement device).
- 7. Depending on your cell phone settings, you may need to press a key on your cell phone to confirm the connection. When the new device is successfully activated and connected, the handset displays **Device connected**. You hear a confirmation tone.



BACK 🗧 OPTION

NOTE: When adding removing, or replacing a Bluetooth device on the active devices list, all connected devices are temporarily disconnected until the procedure completes. It may take up to two minutes to reconnect.

44

Bluetooth setup

Download directory

You can download up to 4 cell phone directories (phonebooks) to your **TL87203** telephone system via Bluetooth wireless technology. Each downloaded directory can store up to 1,500 entries with up to 30 digits for each phone number and 15 characters for each name.

Before downloading a directory, make sure the cell phone is paired, active, and connected to your **TL87203** telephone system.

Place your cell phone next to the telephone base when you download a cell phone directory to your **TL87203** telephone system.

To download a cell phone directory:

- 1. Press **MENU** on the telephone base in idle mode.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Download dir**, and then press **SELECT**.
 - If there is no cell phone paired to the system, the telephone base displays **Device list is empty**.
 Press **OK** to return to the Bluetooth menu.
 - If there are two active devices on the device list, press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired device, and then press SELECT.
 - If the selected device is active but disconnected, the telephone base displays Cellular phone not connected. Press CONNECT.
- 4. Press **▼CID**, **△DIR**, **▼/RECORD**, or **△/DELETE** to highlight one of the following options:
 - Phone memory download all contacts stored in your phone memory.
 - SIM card only download all contacts stored in your SIM card.
 - Phone and SIM download all contacts stored in both your phone memory and SIM card.

Press **SELECT** to continue. During the download, the telephone displays the progress. All other idle system handsets display **CL) Downloading...**.

- Your cell phone may require you to press a key to confirm the directory download.
- Your cell phone may require a passcode. In this case the screen displays Check cellular. ENTER PASSCODE. Enter the cell phone passcode into the telephone base and press SET to save.



If the selected device's directory has already been downloaded to **TL87203** before, the telephone base displays the date of the last update of your cell phone. The directory stored on the **TL87203** for that cell phone will be erased and replaced with the current cell phone directory. If you have edited the downloaded entries (page 111), those changes will be lost. Press **NEXT** to start the download.



- If you already have 4 downloaded directories, the telephone base displays Memory is full. Replace existing directory?. Press YES . Highlight the cell phone directory replaced and press SELECT . The screen displays Replace Cell Phone A directory?. Press YES to confirm.
- When the downloading process completes, the telephone base displays Download ended XXXX entries saved. You hear a confirmation tone. Press OK to return to the Bluetooth menu.

- For certain cell phones, you may need to press a key to confirm the directory download.
- Certain cell phones do not support SIM card download. If this is the case, transfer the contacts from your SIM card to your cell phone memory first, and then download from your cell phone memory. For more information on how to transfer contacts from your SIM card to your cell phone memory, see the user's manual of your cell phone.
- If Phone memory is chosen but with no entries saved, the telephone base displays
 No entries found. Download from SIM only?. Press YES to confirm. If SIM card only is chosen but with no entries saved, the handset displays No entries found. Download from Phone only?. Press YES to confirm. If Phone and SIM are chosen but with no entries saved in either or both directories, the telephone base displays No entries found. Download from Phone only?. Press YES to confirm.
- When downloading the directory from your Bluetooth enabled cell phone, some data may not transfer. For example, if you have home, mobile, and work numbers for a particular contact, the three category descriptions may not transfer to your **TL87203**.

Interruption to directory download

If you are downloading a directory from a cell phone and the phone receives a call, the download process will stop. The telephone base returns to idle mode and displays **CL) Download fail**. When you try to view the downloaded directory, the telephone base and handsets display **Last Download failed: MM/DD/YY**. You need to download the directory again (see page 44).

When you are downloading a directory from a cell phone and you wish to stop the download process, you may press **STOP**. The telephone base displays **Download directory cancelled**. The telephone base returns to idle mode and displays **CL) Download fail**.




NOTE: During the download process, do not attempt to make changes to your cell phone directory.

View the directory download information

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Directory**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the desired downloaded directory, and then press OPTION.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Last update, and then press SELECT.
 - The telephone base displays Cell phone A Last Update: MM/DD/YY Total #XXXX.
 -OR-
 - The telephone base displays Cell phone A Last Download failed: MM/DD/YY if there was an interruption during that directory download.
- 5. Press **OK** to exit.



NOTE: If you try to access the directory with a cordless handset while a Bluetooth directory download is in progress, the screen shows **Not available at this time**.

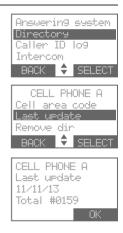

Change PIN

You may be required to enter a PIN when establishing a Bluetooth connection. The default PIN of your telephone base is **0000**.

To change the PIN:

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Change PIN, and then press SELECT. The telephone base displays ENTER NEW PIN and the existing PIN.
- 4. Use the dialing keys to enter a new 4-digit code.
 - Press A/DELETE to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase all digits.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
- 5. Press **SET** to save.

Cell ringer

If this feature is on and you have connected an iPhone device (iOS 4.1 or later) to your telephone system, the telephone plays your iPhone ringtone when there is an incoming call.

- 1. Press **MENU** on the telephone base in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Bluetooth**, and then press **SELECT**.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Cell ringer, and then press SELECT.
 - If there is more than one paired device on the device list, press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired device, and then press SELECT.



RINGER
SET

4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose On or Off, and then press SET.



NOTE: The quality of ringtone played on your telephone is subject to individual ringtone characteristics.



Use the menu to change the cordless handset or telephone base settings.

Using a cordless handset:

- 1. Press **MENU** when the cordless handset is not in use to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight the feature to be changed. When scrolling through the menu, the selected menu item is highlighted.
- 3. Press **SELECT** to select the highlighted item.

Using the telephone base:

- 1. Press **MENU** when the telephone base is not in use to enter the main menu.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the feature to be changed. When scrolling through the menu, the selected menu item is highlighted.
- 3. Press **SELECT** to select the highlighted item.



NOTE: Press **OFF/CANCEL** on the handset, or press **CANCEL** on the telephone base to cancel an operation, back to the previous menu, or exit the menu display. To return to idle mode, press and hold **OFF/CANCEL** on the handset, or press and hold **CANCEL** on the telephone base.

Ringer volume

You can select the ringer volume for incoming calls on all lines.

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Ringers**, and then press **SELECT**.
- 3. Press **SELECT** to choose **Ringer volume**.
- Press ▼CID or ▲DIR to highlight All lines, Line 1, Line 2, Cell A, Cell B, or PC call, and then press SELECT.
- 5. Press **▼CID** or **▲DIR** to sample each ringer volume.
- 6. Press **SELECT** to save. Your hear a confirmation tone and the screen returns to the previous menu.

Using the telephone base:


- 1. Press MENU in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Ringers**, and then press **SELECT**.
- 3. Press **SELECT** to choose **Ringer volume**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight All lines, Line 1, Line 2, CELL A, Cell B, or PC call, and then press SELECT.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to sample each ringer volume.
- 6. Press **SELECT** to save. Your hear a confirmation tone and the screen returns to the previous menu.

-OR-

- 1. Press **▼/VOLUME/**▲ on the telephone base to set the ringer volume while the telephone base is in idle mode.
- 2. Press **SELECT** to confirm and you hear a confirmation tone.

NOTES:

- Changing the handset ringer volume does not affect the base ringer volume, and vice versa.
- The ringer volume level also determines the ringer levels of intercom calls (page 91).
- If the ringer volume on line 1 and/or line 2 is set to off, the screen will display L1) Ringer off and/or L2) Ringer off.
- If the ringer volume on cell A line, cell B line, or both cell lines are set to off, the screen will display CL) A Ringer off, CL) B Ringer off, or CL) Ringers off, respectively.
- ▶ If the ringer volume on PC line is set to off, the screen will display the PC ringer off icon ∰PC.
- If the ringer volume is set to off, the caller ID will not be announced and the screen will briefly display Caller ID won't be announced.

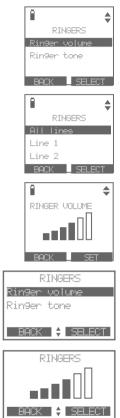

Ringer tone

You can select the ringer tones for incoming landline and cell calls.

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Ringers**, and then press **SELECT**.
- 3. Press ▼CID or ▲DIR to highlight Ringer tone, and then press SELECT.
- Press ▼CID or ▲DIR to highlight All lines, Line 1, Line 2, Cell A, Cell B, or PC call, and then press SELECT.
- 5. Press **▼CID** or **▲DIR** to sample each ringer tone. A sample of each ringer tone plays as you scroll through the choices.
- 6. Press **SELECT** to save. You hear a confirmation tone and the screen returns to the previous menu.

Using the telephone base:

- 1. Press MENU in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Ringers**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Ringer tone**, and then press **SELECT**.
- 4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight All lines, Line 1, Line 2, CELL A, Cell B, or PC call, and then press SELECT.
- 5. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to sample each ringer tone. A sample of each ringer tone plays as you scroll through the choices.
- 6. Press **SELECT** to save. You hear a confirmation tone and the screen returns to the previous menu.



NOTE: When the ringer is off, you will not hear ringer tone samples and ringer tone during an incoming call.



RINGER TONE
All lines
Line 1
Line 2
BACK 🗘 SELECT
r
RINGER TONE
RINGER TONE
RINGER TONE
RINGER TONE

LCD language

You can select English, French, or Spanish to be used for all screen displays.

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Settings**, and then press **SELECT**.
- 3. Press **SELECT** to choose **LCD language**.
- Press ▼CID or ▲DIR to choose from English, Français or Español, and then press SELECT. The screen prompts Set English/Français/Español as LCD language?.
- Press YES to confirm. Your hear a confirmation tone and the screen returns to the previous menu. Press NO to cancel the operation.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Settings**, and then press **SELECT**.
- 3. Press **SELECT** to choose **LCD language**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose from English, Français or Español, and then press SELECT. The screen prompts Set English/ Français/Español as LCD language?.
- Press YES to confirm. Your hear a confirmation tone and the screen returns to the previous menu. Press NO to cancel the operation.



SETTINGS
LCD language
Voicemail #
Clr voicemail
BACK 🗧 SELECT
LCD LANGUAGE
LCD LANGUAGE English
English



NOTE: If you accidentally changed the LCD language to French or Spanish, you can reset it back to English without going through the French or Spanish menus. Press **MENU** on the cordless handset or telephone base in idle mode, and then enter **364#**. To reset the LCD language back to English during a call, press **OPTION** on the cordless handset or telephone base, and then enter **364#**.

Set date/time

The answering system announces the day and time of each message prior to playing it. Before using the answering system, set the date and time as follows. If you subscribe to caller ID service, the day, month and time are set automatically with each incoming call. The year must be correct so that the day of the week can be calculated from the caller ID information. You can turn off the date and time settings of a caller ID service and set the date and time manually (see **Use caller ID to automatically set date and time** on page 58).

After power failure or handset registration, the system prompts you to set the date and time. Follow the steps to set the month, day, year, and time.

Using a cordless handset:

To set the date and time manually:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Set date/time**, and then press **SELECT**.
- 3. Press ▼CID or ▲DIR to choose the month, and then press NEXT, or enter the 2-digit number using the dialing keys.
- Press ▼CID or ▲DIR to choose the day, and then press NEXT, or enter the 2-digit number using the dialing keys.
- Press ▼CID or ▲DIR to choose the year, or enter the 2-digit number using the dialing keys, and then press NEXT to move on to set the time.



- 6. Press **▼CID** or **▲DIR** to choose the hour, and then press **SAVE**, or enter the 2-digit number using the dialing keys.
- 7. Press **▼CID** or **▲DIR** to choose the minute, and then press **SAVE**, or enter the 2-digit number using the dialing keys.
- 8. Press **▼CID** or **▲DIR** to highlight **AM** or **PM**, or press **2** for **AM** or **7** for **PM**, and then press **SAVE** to confirm. You hear a confirmation tone and the screen returns to the previous menu.

Using the telephone base:

To set the date and time manually:

- 1. Press **MENU** in idle mode to enter the main menu.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Set date/time, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the month, and then press NEXT, or enter the 2-digit number using the dialing keys.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the day, and then press NEXT, or enter the 2-digit number using the dialing keys.

SET	DAIE
	07/29/13
	MM/00/YY
	-CK 🗧 NEXI
SET	TIME
SET	TIME 05:41 PM
SET	
SET	

- 5. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the year, or enter the 2-digit number using the dialing keys, and then press NEXT to move on to set the time.
- 6. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the hour, and then press SAVE, or enter the 2-digit number using the dialing keys.
- 7. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose the minute, and then press SAVE, or enter the 2-digit number using the dialing keys.
- 8. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight AM or PM, or press 2 for AM or 7 for PM, and then press SAVE to confirm. You hear a confirmation tone and the screen returns to the previous menu.



NOTE: If the clock is not set when a message is recorded, the system announces, "*Time and day not set*," before it plays the message.

Caller ID announce

To use the caller ID announce feature, you must subscribe to caller ID service from your telephone service provider. The caller ID announce feature lets you know who's calling without having to look at the display. When you have an incoming call, the cordless handset and telephone base speak "*Call from...*" and the name of the caller based on the directory or caller ID information. If the caller's name is private or unknown, the phone number up to the last 11 digits will be spoken. If the caller's phone number is also private or unknown, no information will be spoken.

The default setting of caller ID announce feature is **On**.

To turn on or off the caller ID announce feature:

Using the telephone base:

- 1. Press MENU in idle mode to enter the main menu.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Caller ID Annc, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose On or Off, and then press SELECT. You hear a confirmation tone and the screen shows CID Annc ON/OFF on all HS & BS briefly before returning to the previous menu.



NOTES:

- When there are up to five handsets registered, the telephone system supports caller ID announce for all handsets. If six or more devices are registered, the system supports caller ID announce for the first four registered handsets only.
- This feature does not announce information for call waiting calls.
- It takes at least two rings for the phone to receive caller ID information and announce it. If the phone is answered before the end of the second ring, the phone won't have time to announce the caller's information.
- Pronunciation of names may vary with this feature. Not all names may be pronounced correctly.
- ▶ When this feature is on, the telephone plays both the caller ID information and the ringer at the same time when there is an incoming call.
- Caller ID announce is available in English only.
- If you have paired an AT&T TL80133 cordless speakerphone to the telephone base, the TL80133 speakerphone will also speak "Call from..." and the name of the caller based on the directory or caller ID information during an incoming call.

Set speed dial voicemail number

This feature lets you save your voicemail number for easy access when you press and hold the $\boxtimes \mathbf{1}$ key.

To set your voicemail number:

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Settings**, and then press **SELECT**.
- 3. Press **▼CID** or **▲DIR** to highlight **Voicemail #**, and then press **SELECT**.
- Press ▼CID or ▲DIR to highlight Line 1 or Line 2, and then press SELECT.
- 5. Use the dialing keys to enter the voicemail access number provided by your telephone service provider (up to 30 digits) when prompted.
 - Press ▼CID or ▲DIR to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - <u>Press and hold</u> **MUTE/DELETE** to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a dialing pause (a p appears).
- 6. Press **SAVE** to save. There is a confirmation tone and the screen displays **Voicemail # saved**, and then returns to the previous menu.



Using a the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Settings, and then press SELECT.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Voicemail #**, and then press **SELECT**.
- 4. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Line 1** or **Line 2**, and then press **SELECT**.
- 5. Use the dialing keys to enter the voicemail access number provided by your telephone service provider (up to 30 digits) when prompted.
 - ▶ Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or ►/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE on the telephone base to enter a dialing pause (a p appears).
- 6. Press **SAVE** to confirm. There is a confirmation tone and the screen displays **Voicemail # saved**, and then returns to the previous menu.

SETTINGS
Voicemail #
Clear voicemail
Key tone
BACK 🗧 SELECT
1.1.00.00.0001.0.000
VOICEMAIL #
Line 1
Line 2
BACK 🗧 SELECT
VOICEMAIL #
800-222-311_
BACKSP

Voicemail (visual message waiting) number

If you subscribe to a voicemail service offered by your telephone service provider, this feature provides a visual indication when you have new voicemail messages, **Voicemail** and the icon appear on the telephone base and handset screens. Contact your telephone service provider for more information and assistance about using your voicemail service.



- This feature does not indicate new messages recorded on your phone's built-in answering system.
- For more information about the difference between your answering system and voicemail, see
- page 132.

Clear voicemail indication

Use this feature when the telephone indicates there is new voicemail but there is none. For example, when you have accessed your voicemail while away from home. This feature only turns off the displayed **Voicemail** and the ricon; it does not delete your voicemail messages. As long as you have new voicemail messages, your telephone service provider continues to send the signal to turn on the indicators.

To manually turn off the new voicemail indicators:

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Settings**, and then press **SELECT**.
- Press ▼CID or ▲DIR to highlight Clr voicemail, and then press SELECT. The screen shows Reset voicemail indication?.
- 4. Press YES to turn the voicemail indicator off. You hear a confirmation tone and the screen returns to the previous menu.

Using the telephone base:

- 1. Press MENU in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Settings**, and then press **SELECT**.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Clear voicemail, and then press SELECT. The screen shows Reset voicemail indication?.
- 4. Press **YES** to turn the voicemail indicator off. You hear a confirmation tone and the screen returns to the previous menu.

notes:

- Your telephone service provider voicemail might alert you to new messages with a stutter (broken) dial tone. Contact your telephone service provider for more details.
- For information about using your voicemail service, contact your telephone service provider.



Key tone

The telephone base and handset are set to beep with each key press. You can adjust the key tone volume or turn it off. When the key tone is off, there are no beeps when you press keys.

Using a cordless handset:

- 1. Press MENU in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Settings**, and then press **SELECT**.
- 3. Press **▼CID** or **▲DIR** to highlight **Key tone**, and then press **SELECT**.
- 4. Press **VCID** or **ADIR** to select the desired volume or **Off**.
- 5. Press **SET** to confirm. You hear a confirmation tone and the screen returns to the previous menu.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Settings**, and then press **SELECT**.
- 3. Press **▼CID** or **▲DIR** to highlight **Key tone**, and then press **SELECT**.
- 4. Press **VCID** or **ADIR** to select the desired volume or **Off**.
- 5. Press **SET** to confirm. You hear a confirmation tone and the screen returns to the previous menu.

Use caller ID to automatically set date and time

If you subscribe to caller ID service, the day, month, and time are set automatically with each incoming call. Follow the steps to turn the **CID time sync** feature on or off. The default setting is **On**.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Settings**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **CID time sync**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to select On or Off, and then press SELECT to save. You hear a confirmation tone and the screen returns to the previous menu.



SETTINGS
Key tone
CID time sync
Dial mode
BACK 🗧 SELECT
KEY
TONE

BARK 🔶 SET

SETTINGS Clear voicemail
Key tone
CID time sync BACK \$ SELECT
CID TIME SYNC
On
Off

Home area code

If you dial seven digits to make a local call (no area code required), enter your area code into the telephone as the home area code. When you receive a call from within your home area code, the caller ID log only displays the seven digits of the telephone number.

This feature makes it easy for you to place a call from the caller ID log. If you dial 10 digits to make a local phone call, do not use this home area code feature. If you do, you cannot place local calls from your caller ID log, as they will have only seven digits.

To set the home area code:

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Directory**, and then press **SELECT**.
- 3. Press **OPTION** to choose **Home**.
- Press ▼CID or ▲DIR to highlight Home area code, and then press SELECT . The screen briefly shows Only for 7 digits dialing from Caller ID log.

HOME	AREA	CODE
BACK	SP	SAVE

- 5. Use the dialing keys to enter a three-digit home area code.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
- 6. Press **SAVE** to confirm. You hear a confirmation tone and the screen shows **Area code will not be shown in Caller ID log** briefly before returning to the previous menu.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Directory**, and then press **SELECT**.
- 3. Press **OPTION** to choose **Home**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Home area code, and then press SELECT. The screen briefly shows Only for 7 digits dialing from Caller ID log.
- 5. Use the dialing keys to enter a three-digit home area code.
 - Press A/DELETE or BACKSP to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase all digits.
 - Press ▼CID or ◀/REPEAT to move the cursor to the left. Press ▲DIR or ►/SKIP to move the cursor to the right.
- 6. Press **SAVE** to confirm. You hear a confirmation tone and the screen shows **Area code will not be shown in Caller ID log** briefly before returning to the previous menu.

NOTE:

If in the future, your telephone service provider requires you to dial ten digits to make a local call (area code plus telephone number), you need to delete your home area code. With the home area code displayed, press and hold MUTE/DELETE on the handset or press and hold

 /DELETE on the telephone base until the digits are deleted, and then press SAVE. The home area code is now restored to its default setting of ____ (empty).



Cell area code

Most cell phone entries are stored in a 10-digit format. If all of your cell phone entries are stored this way, you do not need to program your cell area code.

If your cell phone stores entries in a 7-digit format, we recommend that you program your cell area code so that your 7-digit directory entries can be dialed correctly.

To set the cell area code:

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID** or **▲DIR** to highlight **Directory**, and then press **SELECT**.
- 3. Press **▼CID** or **▲DIR** to highlight a desired downloaded directory, and then press **OPTION**.



- Press ▼CID or ▲DIR to highlight Cell area code, and then press SELECT. The screen briefly shows Only for 7 digits dialing from Caller ID log.
- 5. Use the dialing keys to enter a three-digit home area code.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - Press and hold **MUTE/DELETE** to erase all digits.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
- 6. Press **SAVE** to confirm. You hear a confirmation tone and the screen shows **Area code will not be shown in Caller ID log** briefly before returning to the previous menu.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Directory**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight a desired downloaded directory, and then press OPTION.
- CELL AREA CODE ----BACKSP SAVE
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Cell area code, and then press SELECT. The screen briefly shows Only for 7 digits dialing from Caller ID log.
- 5. Use the dialing keys to enter a three-digit home area code.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - Press and hold /DELETE to erase all digits.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
- 6. Press **SAVE** to confirm. You hear a confirmation tone and the screen shows **Area code will not be shown in Caller ID log** briefly before returning to the previous menu.

Dial mode

The dial mode is preset to tone dialing. If you have pulse (rotary) service, you must change the dial mode to pulse dialing before using the telephone.

Using the telephone base:

- 1. Press MENU in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Settings**, and then press **SELECT**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Dial mode**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose Touch-tone or Pulse, and then press SELECT. The screen displays Dial mode is touch-tone or Dial mode is pulse. You hear a confirmation tone and the screen returns to the previous menu.

Line preference

The line preference setting determines the default line for the corded handset, and the speakerphones on a cordless handset or the telephone base, for outgoing calls. You can select **Auto**, **Line 1**, or **Line 2** for your call.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Settings, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Line preference, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Auto, Line 1, or Line 2, and then press SELECT to save. You hear a confirmation tone and the screen returns to the previous menu.

NOTE: If both line 1 and line 2 are in use or on hold, the telephone system will take line 1 automatically when you use the corded handset, or the speakerphone on a cordless handset or the telephone base.





SETTINGS



QUIET mode

When **QUIET** mode is turned on, the telephone silences all sounds during the set period of time (1-12 hours). However, the handset locator paging tone and any sound-generating operations initiated by users, such as making calls by using the speakerphone or setting ringer volume, will sound as normal. After you turn on **QUIET** mode, this feature activates immediately and the answering system turns on automatically.

When **QUIET** mode is on, the answering system takes calls and records messages without broadcasting them.

To turn QUIET mode on:

- 1. <u>Press and hold</u> **QUIET #** in idle mode to enter the **QUIET** mode setting screen. The screen shows **SET QUIET MODE DURATION (1 to 12 hours)**__.
- Use the dialing keys to enter the desired number of hours (1-12) you would like to turn on QUIET mode, and then press SELECT. The screen briefly displays Answering sys is ON during quiet mode, and then displays Z steadily in the idle screen.

To turn QUIET mode off:

While QUIET mode is on, press and hold QUIET #. Then, the screen shows Quiet mode is off and you hear a confirmation tone.



NOTES:

- If you change the base ringer, handset ringer, ringer volume, key tone, or caller ID announce features when QUIET mode is on, the sample plays but the feature is still muted after saving the setting.
- ▶ After **QUIET** mode is turned off or the set period of time has expired, all muted features will be activated again.
- ▶ The **PTT** function is not available when **QUIET** mode is on.

Web address

You can use this feature to view the AT&T website address.

Using a cordless handset:

- 1. Press **MENU** in idle mode to enter the main menu.
- Press ▼CID or ▲DIR to highlight Web address, and then press SELECT. The screen displays the AT&T website address.
- 3. Press OK to exit.

Using the telephone base:

- 1. Press **MENU** in idle mode to enter the main menu.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Web address, and then press SELECT. The screen displays the AT&T website address.
- 3. Press OK to exit.





No line alert

If there is no telephone line connected to line 1 and/or line 2 of the telephone base, the screens of the cordless handset and telephone base will display **L1) No line** and/or **L2) No line**. If you do not want to display this message on the screens (for example, if you use the cell line only), you can turn off the no line alert using the code, as described below.

To turn off the no line alert:

 Press MENU on the cordless handset or telephone base in idle mode, and then enter **X662#**. You hear a confirmation tone.

To turn the no line alert back on:

 Press MENU on the cordless handset or telephone base in idle mode, and then enter **X661#**. You hear a confirmation tone.

Cell alert

If you have downloaded the **Connect to Cell** application and used the **Alerts manager** (page 35), there will be message notifications sent to your telephone system. Your telephone system beeps once when your Android cell phone receives text messages, e-mails, or social media updates. You can turn on or off the alert tone using the code, as described below.

To turn off the alert tone:

Press MENU on the cordless handset or telephone base in idle mode, and then enter **X252#**. You hear a confirmation tone.

To turn the alert tone back on:

Press MENU on the cordless handset or telephone base in idle mode, and then enter **X251#**. You hear a confirmation tone.

Telephone settings Cordless headset settings

Headset earpiece ringer

The headset charger and headset do not have external ringers. When you receive calls, the headset earpiece rings, as well as the cordless handset and the telephone base.

To change the volume of the earpiece ringer:

 Slide the volume switch at the top of the headset towards VOL+ or VOLwhen the headset is not in use.

To turn off the earpiece ringer:

 Slide the volume switch at the top of the headset towards VOL- until you hear two beeps when the headset is not in use.

Make, answer, or end a call on line 1 or line 2

The **TL87203** telephone base can be used to make or answer calls on up to two individual landlines (pages 11 and 12).

Using a cordless handset:

To make a call on line 1 or line 2:

▶ Press LINE 1/FLASH, LINE 2/FLASH, or ◄)/SPEAKER, and then enter the telephone number.

To predial a call on line 1 or line 2:

Enter the telephone number, and then press LINE 1/FLASH, LINE 2/FLASH, or
 >>SPEAKER.

To answer a call on line 1 or line 2:

Press LINE 1/FLASH, LINE 2/FLASH, ()/SPEAKER, or any dialing key (0-9 or TONE X).

To end a call on line 1 or line 2:

Press **OFF/CANCEL**, or place the cordless handset into the charger.

Using the telephone base:

To make a call on line 1 or line 2:

- Press 1 LINE, 2 LINE, or SPEAKER ◄), and then enter the telephone number. -OR-
- Lift the corded handset, and then enter the telephone number.

To predial a call on line 1 or line 2:

▶ Enter the telephone number, and then press 1 LINE, 2 LINE, or SPEAKER ◄).

To answer a call on line 1 or line 2:

- Press 1 LINE, 2 LINE, SPEAKER ◄), or any dialing key (0-9 or TONE ¥). -OR-
- Lift the corded handset.

To end a call on line 1 or line 2:

- Press the corresponding line button, 1 LINE or 2 LINE.
 -OR-
- ▶ Press **SPEAKER** ■) or return the corded handset to the telephone base.



- The screen shows the elapsed time as you talk (in hours, minutes and seconds).
- When predialing (preview numbers before dialing), press MUTE/DELETE on the cordless handset or A/DELETE on the telephone base to backspace and delete; press and hold REDIAL/PAUSE on the cordless handset or REDIAL/PAUSE on the telephone base to insert a dialing pause (a p appears).
- > You cannot answer a call on line 1 or line 2 using your connected cell phone.
- You can also make or answer a call on line 1 or line 2 using AT&T Softphone Call Manager. Please refer to the Installation and Operation Guide in the CD-ROM which comes with the package.

Using a cordless headset:

To make a call:

- 1. Follow the instructions on the previous page to make a call on line 1 or line 2 using the cordless handset or the telephone base.
- 2. Press **b** on the headset at any time to join the call.
- 3. After you join the call, you can hang up the telephone and continue the call on the headset.

To answer a call:

Press U on the headset.

To end a call:

Press 🜢 on the headset or place the headset in the headset charger.

Using a Bluetooth headset:

You can use a Bluetooth headset paired with your **TL87203** for calls on line 1 or line 2. However, you need to keep the device within 15 feet of the telephone base for optimal performance. Please refer to the user's manual of your Bluetooth headset for more information.

To answer or end a call on line 1 or line 2 using a Bluetooth headset:

Press the call key on your Bluetooth headset.



NOTE: If you have paired a cordless headset or speakerphone to your telephone base, you can also answer or end a call using the paired device. Refer to the user's manual of your cordless headset or speakerphone for more information.

If you make or answer a call on line 1 or line 2 on a cordless handset or the telephone base, you can transfer the call to your cordless headset. If you have paired a Bluetooth headset or speakerphone to your telephone base, you can also transfer the call to the headset or speakerphone.

To transfer a call from a telephone base to a Bluetooth headset: Using the telephone base:

- 1. Press **OPTION** during a call on line 1 or line 2.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Use BT headset, and then press SELECT. The telephone base displays Transferring audio to Headset A, and then the message disappears if the call is successfully transferred to the Bluetooth headset.

To transfer a call from a cordless handset or the telephone base to a cordless headset or speakerphone:

Using a cordless handset or the telephone base:

- 1. Press **OPTION** during a call on line 1 or line 2.
- Press ▼CID or ▲DIR on the handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base, to highlight Intercom, and then press SELECT.
- 3. Press ▼CID or ▲DIR on the handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base, to highlight HDST/SPK, and then press SELECT.
- 4. Press the call key on your cordless headset to answer the intercom call.
- 5. Press **OPTION** during the intercom call.
- Press ▼CID or ▲DIR on the handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base, to highlight Transfer, and then press SELECT.

	h	
 _	=	L
-		L

NOTE: If a total of two cordless headset(s) and or speakerphone(s) are registered, they will appear as **HDST/SPK 1** and **HDST/SPK 2**, respectively, in the intercom menu during a call.

Call waiting on line 1 or line 2

If you subscribe to call waiting service offered by your telephone service provider, and someone calls while you are already on a call on the same line, you hear a call waiting alert tone.

Using a cordless handset or the telephone base:

- Press the corresponding line button, LINE 1/FLASH or LINE 2/FLASH on the handset, or FLASH on the telephone base to put your current call on hold and take the new call.
- Press the same key at any time to switch back and forth between calls.

Using a cordless headset:

- Press down the FLASH switch at the top of the headset to put your current call on hold and answer the new call.
- Press the FLASH switch again at any time to switch back and forth between calls.

Make, answer, or end a cell call

The **TL87203** can be used to make or answer calls on the cell lines. You can connect a maximum of 2 Bluetooth enabled cell devices to the telephone base. Both cell devices can be used on two cell lines at the same time.

Using a cordless handset:

To make a cell call:

Press (♠) A CELL or (♠) B CELL, and then enter the telephone number. Press DIAL, ◄)/SPEAKER, (♠) A CELL, or (♠) B CELL to dial.

To predial a cell call:

Enter the telephone number, and then press (P) A CELL or (P) B CELL.

To answer a cell call:

To end a cell call:

> Press **OFF/CANCEL**, or place the cordless handset into the charger.

Using the telephone base:

To make a cell call:

Press CELL A(𝑎) or CELL B(𝑘), and then enter the telephone number. Press DIAL or SPEAKER ◄).

To answer a cell call:

- Press SPEAKER (), CELL A(), or CELL B().
 -OR-
- Lift the corded handset.

To end a cell call:

- Press the corresponding cell button, CELL A(P) or CELL B(P).
 -OR-
- ▶ Press **SPEAKER**) or return the corded handset to the telephone base.



NOTES:

- You can also use your cell phone to answer the call. If you answer with your cell phone, it disconnects from the telephone base.
- If you do not want to answer the call, press REJECT.
- When you try to make a cell call but your cell phone is not connected to the base, the telephone base displays Cellular phone not connected. Please connect to proceed. Press CONNECT on the telephone base to connect your cell phone to the telephone system. Refer to Bluetooth connection from idle mode on page 41 and Connect/disconnect an active device on page 42.
- You can also make or answer a cell call using AT&T Softphone Call Manager. Please refer to the Installation and Operation Guide in the CD-ROM which comes with the package.

Using a cordless headset:

To make a call:

- 1. Follow the instructions on the previous page to make a cell call using the cordless handset or the telephone base.
- 2. Press **b** on the headset at any time to join the call.
- 3. After you join the call, you can hang up the telephone and continue the call on the headset.

To answer a call:

Press U on the headset.

To end a call:

▶ Press � on the headset or place the headset in the headset charger.

Call waiting on the cell line

If you subscribe to call waiting service from your cell phone service provider, and someone calls while you are already on a call on the same line, you hear a call waiting alert tone.

To answer the incoming call from the same cell line:

Using a cordless handset:

- Press SWAP, (*A CELL or (*) B CELL on the handset. The original call is put on hold and you take the new call.
- Press OPTION on the handset. Press ▼CID or ▲DIR to highlight
 Swap cell X (X represents the cell line slot). Press SELECT to resume the original call. The other incoming cell call is put on hold.

Using the telephone base:

- Press SWAP, CELL A (1) or CELL B (1) on the telephone base. The original call is put on hold and you take the new call.
- Press OPTION on the telephone base. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Swap cell X (X represents the cell line slot). Press SELECT to resume the original call. The other incoming cell call is put on hold.

To answer the incoming call from the other cell line:

Using a cordless handset:

- Press the corresponding key of the other cell line, (P) A CELL or (P) B CELL, to put your current call on hold and take the new call.
- Press the corresponding key of the original cell line, (P) A CELL or (P) B CELL, to switch back to the original call.

Using the telephone base:

- Press the corresponding key of the other cell line, CELL A(1) or CELL B(1), to put your current call on hold and take the new call.
- Press the corresponding key of the original cell line, CELL A(1) or CELL B(1), to switch back to the original call.



NOTE: If you do not want to answer the incoming call from a different cell line, press REJECT.

Answer an incoming cell call while on line 1 or line 2

If you are on a call using line 1 or line 2 and you receive an incoming cell call, you hear a beep, and $\exists \langle \mathbf{q} \rangle, \langle \mathbf{q} \rangle \exists$, or $\exists \langle \mathbf{q} \rangle \exists$ displays on the cordless handset or telephone base you are using. The telephone base and all other handsets ring.

To answer the incoming cell call:

Using a cordless handset:

Press (P) A CELL or (P) B CELL to answer the incoming cell call. The call on line 1 or line 2 is automatically placed on hold. All other handsets and the telephone base display L1) On hold and/or L2) On hold. At the same time, the screens will display CL) A in use, CL) B in use, or CL) A&B in use.

Using the telephone base:

Press CELL A⁽ⁿ⁾ or CELL B⁽ⁿ⁾ to answer the incoming cell call. The call on line 1 or line 2 is automatically placed on hold. All handsets and the telephone base display L1) On hold and/or L2) On hold. At the same time, the screens will display CL) A in use, CL) B in use, or CL) A&B in use.

Using the cordless headset:

Press on the headset.

To end the cell call:

Using a cordless handset:

 Press OFF/CANCEL. Line 1 or line 2 is still on hold. The telephone base and all other cordless handsets display L1) On hold and/or L2) On hold.

Using the telephone base:

Press CELL A(1) or CELL B(1). Line 1 or line 2 is still on hold. The telephone base and all cordless handsets display L1) On hold and/or L2) On hold.

Using the cordless headset:

Press 🜢 on the headset.

To resume the call on line 1 or line 2 On hold:

Using a cordless handset:

Press LINE 1/FLASH or LINE 2/FLASH on the handset.

Using the telephone base:

Press 1 LINE or 2 LINE on the telephone base.

Answer an incoming call on line 1 or line 2 while on a cell call

If you are on a cell call and you receive an incoming call on line 1 or line 2, you hear a beep, and then **1 2**, **3 2**, or **1 2**, and **Incoming call** displays on the handset or telephone base you are using. The telephone base and all other handsets ring.

To answer the incoming call on line 1 or line 2:

Using a cordless handset:

Press LINE 1/FLASH or LINE 2/FLASH to answer the incoming call on line 1 or line 2. The cell call is automatically placed on hold. All screens display CL) A On hold, CL) B On hold, or CL) A&B On hold. At the same time, the screens will display L1) In use and/or L2) In use.

Using the telephone base:

Press 1 LINE or 2 LINE to answer the incoming call on line 1 or line 2. The cell call is automatically placed on hold. All screens display CL) A On hold, CL) B On hold, or CL) A&B On hold. At the same time, the screens will display L1) In use and/or L2) In use.

Using the cordless headset:

Press on the headset.

To end the call on line 1 or line 2:

Using a cordless handset:

 Press OFF/CANCEL on the cordless handset. The cell line is still on hold. The telephone base and all other cordless handsets display CL) A On hold, CL) B On hold, or CL) A&B On hold.

Using the telephone base:

 Press 1 LINE or 2 LINE on the telephone base. The cell line is still on hold. The telephone base and all cordless handsets display either CL) A On hold, CL) B On hold, or CL) A&B On hold.

Using the cordless headset:

Press b on the headset.

To resume the cell call On hold:

Using a cordless handset:

Press (P) A CELL or (P) B CELL on the handset.

Using the telephone base:

Press CELL A() or CELL B() on the telephone base.



NOTE: If you have turned on your answering system and you do not answer the incoming call on line 1 or line 2, the call is answered by your answering system.

Make, answer or end a softphone call

You can make and receive calls on line 1, line 2, or cell lines, or softphone VoIP calls by using the **AT&T Softphone Call Manager** installed on your computer (see page 19).

Before managing a softphone VoIP call, make sure Skype or Lync is installed.

To make a Skype call:

Using a cordless handset or the telephone base:

Enter the telephone number in idle mode, and then press PC CALL to dial a softphone call.

To answer an incoming Skype/Lync call:

Using a cordless handset:

Press I)/SPEAKER or ANSWER to answer an incoming softphone call.

Using the telephone base:

 Press SPEAKER () or lift the corded handset to answer an incoming softphone call.

To hold a Skype/Lync call:

Using a cordless handset or the telephone base:

- Press HOLD to hold the softphone line. The handset screen displays PC CALL ON HOLD.
- Press PC CALL to resume the call.

To end a Skype/Lync call:

Using a cordless handset:

Press OFF/CANCEL, or place the cordless handset into the charger.

Using the telephone base:

Press SPEAKER (*) or return the corded handset to the telephone base.

- Only Skype can make a softphone VoIP call.
- Make sure the USB cable is connected to the telephone base and your computer.
- Make sure the AT&T Softphone Call Manager is launched on your computer.
- During an incoming call, the screens display Skype and Lync without any specific details about the name and number of the caller. If the caller ID announce (page 54) is turned on, the telephone will announce Call from Skype or Call from Lync.
- If you do not want to answer the call, press REJECT.
- ▶ To answer a softphone call with the cordless headset, press 𝔄 on the cordless headset.
- Missed call from softphone is logged in the caller ID log of the telephone system. Skype or Lync is stored as the name of the caller ID log entry.
- ▶ When the ringer of PC line is off, the screens of cordless handsets and the telephone base display *Q*PC.
- You can also make a Skype call or answer a Skype/Lync call using AT&T Softphone Call Manager. Please refer to the Installation and Operation Guide in the CD-ROM which comes with the package.

Voice command

TL87203 supports voice recognition when the phone system is connected to **AT&T Softphone Call Manager** installed on your computer (see page 20). You can make calls on line 1 or line 2 (according to the line preference set, see page 63) through the voice command (name dialing) function by using the telephone base, the cordless handset, or the cordless headset.

Before making a voice command, make sure your desired contacts are in the phonebook directory of the **AT&T Softphone Call Manager** that is independent from the home and downloaded directories. For detailed instructions, please refer to the **Installation and Operation Guide** in the **CD-ROM** which comes with the package.

To make a call using voice command:

Using a cordless handset or the telephone base:

- 1. Press **MENU** in idle mode.
- Press ▼CID or ▲DIR on the cordless handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base to highlight Voice Command, and then press SELECT. The screen displays Processing Voice command.... You hear "Who would you like to call?", followed by a confirmation beep.
- 3. Say your desired contact name, which is stored in the phonebook directory of the **AT&T Softphone Call Manager**, to dial.

NOTES:

- Make sure the USB cable is connected to the telephone base and your computer (page 19).
- Make sure the **AT&T Softphone Call Manager** is launched on your computer.
- When there is an incoming call from any line, the voice recognition will stop immediately.
- To say a command again when processing, press STOP and select Voice Command again from the menu.
- To cancel a voice command activity before making another voice command, say "Cancel".
- If the voice command setting is set as Disable in the AT&T Softphone Call Manager, voice command requests will be rejected.
- You can also make a voice command using an AT&T TL80133 speakerphone paired with your TL87203 telephone base. Press MUTE on the speakerphone. You hear "Who would you like to call?", followed by a confirmation beep. Say your desired contact name, which is stored in the phonebook directory of the AT&T Softphone Call Manager, to dial.

Conference calls on line 1 and line 2

When you have calls established on line 1 and line 2, either in use or on hold, you can conference line 1 and line 2 using a handset, headset or the telephone base.

To conference both line 1 and line 2:

Using a cordless handset:

- 1. Press **OPTION**.
- 2. Press **▼CID** or **▲DIR** to highlight **Conference**.
- 3. Press **SELECT**. The conferencing devices' screen display **Lines now in conference**, followed by **Conf.**

Using the telephone base:

- 1. Press **OPTION**.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Conference**.
- 3. Press **SELECT**. The conferencing devices' screen display **Lines now in conference**, followed by **Conf.**

Using a cordless headset:

Press Φ on the headset at any time to join the call.

To select an option while on a conference call: Using a cordless handset:

- 1. Press **OPTION**.
- 2. Press **VCID** or **ADIR** to highlight one of the following options:
 - End Line 1
 - End Line 2
 - Equalizer
 - Caller ID log
 - ▶ Directory
- 3. Press SELECT.

Using the telephone base:

- 1. Press **OPTION**.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following options:
 - ► End Line 1
 - ▶ End Line 2
 - ▶ Equalizer
 - Caller ID log
 - ▶ Directory
- 3. Press **SELECT**.

Telephone operation Conference calls

To end a conference call:

Using a cordless handset:

Press **OFF/CANCEL**, or place the cordless handset into the charger. The call continues until all people hang up.

Using the telephone base:

Press **SPEAKER** (), **1 LINE**, or **2 LINE**, or put the corded handset back to the telephone base. The call continues until all people hang up.

Using a cordless headset:

 If you joined the call using the cordless headset, press b on the headset, or place the headset in the charger. The call continues until all people hang up.

Conference calls on line 1 or line 2 with cell calls

When you have calls established on line 1 or line 2, and also a cell line, either in use or on hold, you can create a 3-way conference.

To conference line 1 or line 2 with cell calls:

Using a cordless handset:

- 1. Press **OPTION**.
- 2. Press **▼CID** or **▲DIR** to highlight **Conference**.
- 3. Press **SELECT**. The conferencing devices' screen display **Lines now in conference**, followed by **Conf.**

Using the telephone base:

- 1. Press **OPTION**.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Conference**.
- 3. Press **SELECT**. The conferencing devices' screen display **Lines now in conference**, followed by **Conf.**

Using a cordless headset:

Press of on the headset at any time to join the call.

To select an option while on a conference call:

Using a cordless handset:

- 1. Press **OPTION**.
- 2. Press **VCID** or **ADIR** to highlight one of the following options:
 - ▶ End Line 1
 - End Line 2
 - End Cell A line
 - End Cell B line
 - ▶ Equalizer
 - Caller ID log
 - Directory
- 3. Press **SELECT**.

Using the telephone base:

- 1. Press **OPTION**.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following options:
 - End Line 1
 - **End Line 2**
 - End Cell A line
 - End Cell B line
 - ▶ Equalizer
 - ▶ Caller ID log
 - Directory
- 3. Press **SELECT**.

To end a conference call:

Using a cordless handset:

Press **OFF/CANCEL**, or place the cordless handset into the charger. The call continues until all people hang up.

Using the telephone base:

Press **SPEAKER** (), **1 LINE**, **2 LINE**, **CELL A**(), or **CELL B**() on the telephone base; or put the corded handset back to the telephone base. The call continues until all people hang up.

Using a cordless headset:

 If you joined the call using the cordless headset, press b on the headset, or place the headset in the charger. The call continues until all people hang up.

Using line 1 or line 2 and cell lines together:

- You can be on two different calls at the same time using a cell line, and line 1 or line 2, with two handsets.
- You can be on a call using the cell line and a Bluetooth headset via line 1 or line 2 at the same time.
- If you are on a call using the cell line, you cannot join the call using your paired cell phone. However, you can join the call using another **TL87203** device. As your cell phone is being used for the phone call, only features that are normally available during a call can be used.

Silencing the ringer

When the telephone is ringing, you can temporarily silence the ringer of the cordless handset or telephone base without disconnecting the call. The next call rings normally at the preset volume.

To silence the handset ringer:

Using a cordless handset:

Press **SILENCE**, **OFF/CANCEL**, **MUTE/DELETE**, or **QUIET #**. The handset screen displays **Ringer muted**.

To silence the base ringer:

Using the telephone base:

Press **SILENCE**, **CANCEL**, or **QUIET #**. The telephone base screen displays **Ringer muted**.

To silence the headset earpiece ringer:

Press **MUTE/voice** to temporarily silence the ringer in the headset earpiece. This silences the ringer without disconnecting the call. The next incoming call rings normally at the preset volume.

Page all devices

This feature helps you find the misplaced devices.

To start paging:

Using the telephone base:

- 1. Press **MENU** in idle mode.
- 2. Press **Page all devices**, and then press **SELECT** to start the paging tone on all handsets for 60 seconds. All idle handsets ring and display **** Paging ****.

To stop the paging tone on a cordless handset: Press **SILENCE, MUTE/DELETE, QUIET #**, or **OFF/CANCEL**.

To end paging:

Using a cordless handset:

Press STOP on the telephone base, or LINE 1/FLASH, LINE 2/FLASH, ◄୬/SPEAKER, (♥ A CELL, (♥ B CELL, or any dialing key (0-9 or TONE ¥) on the handset.

Using the telephone base:

Press **SPEAKER ◄)**, **1 LINE**, **2 LINE**, **CELL A**(¶), **CELL B**(¶), **DELETE**, **QUIET #**, or **CANCEL** on the telephone base.

- If the handset ringer volume is set to off, the handset still rings when paging.
- If there is no response after 60 seconds, the paging ends.

Speakerphone

If you are on speakerphone, () displays on the cordless handset or telephone base you are using.

On a call using a cordless handset:

 Press ()/SPEAKER on the cordless handset to switch between normal cordless handset use and the speakerphone.

On a call using a corded handset:

Press SPEAKER •) on the telephone base to switch between normal corded handset use and the speakerphone.

On a call using the telephone base:

▶ Press **SPEAKER** ■) on the telephone base to end a call.

Join a call in progress

Another device can join you on an outside call. The call continues until all people hang up. You can share an outside call with telephone base and up to four devices in the system.

To join a call on line 1 or line 2:

Using a cordless handset:

Press LINE 1/FLASH or LINE 2/FLASH on another handset to join the call.

Using the telephone base:

Press 1 LINE or 2 LINE to join the call.

Using a cordless headset:

Press U on the headset.

To join a cell call:

Using a cordless handset:

Press (*) A CELL or (*) B CELL on another handset to join the call.

Using the telephone base:

Press CELL A() or CELL B() to join the call.

Using a cordless headset:

Press on the headset.



NOTE: If you have paired a cordless headset or cordless speakerphone to the telephone base, you can also join a call in progress using the paired device. Refer to the user's manuals of your cordless headset or speakerphone for more information.

Volume control

While on a call, you can adjust the listening volume on the cordless handset, telephone base, or cordless headset.

If it is a cell call and the volume is too loud, too quiet or drops out, try changing the volume on your cell phone. On some cell phones, changing the volume on the cell phone affects your cell call volume on the **TL87203** telephone base or cordless handset.

To adjust the listening volume of a cordless handset:

Press ▼CID/VOLUME or ▲DIR/VOLUME while on a call.

To adjust the listening volume of the telephone base:

▶ Press ▼/VOLUME/▲ while on a call.

To adjust the listening volume of a cordless headset:

While on a call, slide the volume switch at the top of the headset towards
 VOL+ or VOL- to adjust the listening volume.

NOTES:

- The cordless handset earpiece volume setting (1-6) and speakerphone volume setting (1-6) are independent. The corded handset earpiece volume setting (1-8) and telephone base speakerphone volume setting (1-8) are also independent.
- When the cordless headset listening volume reaches the minimum or maximum setting, you hear two beeps.

Mute

Use the mute function to turn off the microphone. You can hear the caller, but the caller cannot hear you.

Using a cordless handset:

To mute a call:

While on a call, press MUTE/DELETE on the handset. When mute is on, the handset screen shows Microphone off for a few seconds and the MUTE icon appears until the mute function is turned off.

To take a call off mute:

Press MUTE/DELETE on the handset and resume speaking, the MUTE icon disappears, and the screen shows Microphone on for a few seconds.

Using the telephone base: To mute a call:

While on a call, press MUTE on the telephone base. When mute is on, the handset screen shows Microphone off for a few seconds and the MUTE icon appears until the mute function is turned off.

To take a call off mute:

Press MUTE on the telephone base and resume speaking, the MUTE icon disappears, and the screen shows Microphone on for a few seconds.

Mute is automatically canceled when you end the call.

Using a cordless headset:

To mute a call:

Press MUTE/voice on the headset to turn off the headset microphone. The voice prompt "Mute on" plays. The MUTE light on the headset base flashes and a short beep plays every 30 seconds.

To take a call off mute:

Press MUTE/voice on the headset to resume the two-way conversation. You hear the voice prompt "Mute off".

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to touch-tone dialing temporarily during a call. This is useful if you need to send touch-tone signals to access your telephone banking or long distance services.

During a call:

- 1. Press **TONEX** on the cordless handset or telephone base.
- 2. Use the dialing keys to enter the desired number. The telephone sends touch-tone signals.
- 3. The telephone automatically returns to pulse dialing after you end the call.

Hold

You can place a call on hold. You hear an alert tone at the telephone base if you have not taken the call off of hold after 14 minutes. You hear another alert tone at the telephone base 30 seconds later. At 15 minutes on hold, the call on hold automatically disconnects.

To place a call on line 1 or line 2 on hold:

Press HOLD on a cordless handset or the telephone base. L1) On hold and/ or L2) On hold appears on the cordless handset and telephone base. 12, and the telephone base.

To resume a call on line 1 or line 2 on hold:

 Press LINE 1/FLASH or LINE 2/FLASH on a cordless handset, or press 1 LINE or 2 LINE on the telephone base.

To place a cell call on hold:

Press HOLD on cordless handset or the telephone base. CL) A On hold, CL) B On hold, or CL) A&B On hold appears on the handset and telephone base. A (P), (P) B, or A (P) B flashes on the screens of the cordless handset and telephone base.

To resume a cell call on hold:

 Press (*) A CELL or (*) B CELL on the cordless handset, or press CELL A (*) or CELL B (*) on the telephone base.

Equalizer

The equalizer feature enables you to change the audio quality to best suit your hearing.

Using a cordless handset:

- 1. While on a call on line 1, line 2 or a cell line, press **OPTION**.
- 2. Press ▼CID or ▲DIR to highlight Equalizer, and then press SELECT.
- 3. Press ▼CID or ▲DIR to select Natural (the default setting), Treble 1, Treble 2, or Bass, and then press SELECT.

Using the telephone base:

- 1. While on a call on line 1, line 2 or a cell line, press **OPTION**.
- Press VCID, ▲DIR, V/RECORD, or ▲/DELETE to highlight Equalizer, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to select Natural (the default setting), Treble 1, Treble 2, or Bass, and then press SELECT.



NOTES:

- If you press <)/SPEAKER to switch the call between a cordless handset and the handset speakerphone, or press SPEAKER <) to switch between the corded handset and telephone base speakerphone, the audio setting remains unchanged.
- The current equalizer setting remains unchanged until you select a new setting.

Chain dialing

Use this feature to initiate a dialing sequence from numbers stored in the directory, caller ID log, or redial list while you are on a call.

Chain dialing can be useful if you wish to access other numbers (such as bank account numbers or access codes) from the directory, caller ID log or redial list.

Using a cordless handset:

To access the directory while on a call:

- 1. Press **OPTION**.
- 2. Press ▼CID or ▲DIR to highlight Directory, and then press SELECT.
- 3. Press **▼CID** or **▲DIR** to highlight the desired directory, and then press **REVIEW**.
- 4. Press **▼CID** or **▲DIR** to highlight the desired entry or perform an alphabetical search (page 110).
- 5. Press **DIAL** to dial the number shown.

To access the caller ID log while on a call:

- 1. Press **OPTION**.
- 2. Press ▼CID or ▲DIR to highlight Caller ID log, and then press SELECT.
- 3. Press **▼CID** or **▲DIR** to highlight the desired number.
- 4. Press **DIAL** to dial the number shown.

To access the redial list while on a call:

- 1. Press **REDIAL/PAUSE** to show the most recently dialed number.
- 2. Press **VCID** or **ADIR** to highlight the desired number.
- 3. Press **DIAL** to dial the number shown.

Using the telephone base:

To access the directory while on a call:

- 1. Press **OPTION**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Directory, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired directory, and then press **REVIEW**.
- 4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired entry. Press DIAL to dial the number shown.

To access the caller ID log while on a call:

- 1. Press **OPTION**.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Caller ID log, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired number.
- 4. Press **DIAL** to dial the number shown.

To access the redial list while on a call:

- 1. Press **REDIAL/PAUSE** to show the most recently dialed number.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the desired number.
- 3. Press **DIAL** to dial the number shown.

notes:

- You cannot edit a directory entry while on a call. For more details about the directory, see pages 103-114.
- You cannot copy a caller ID entry into the directory while on a call. For more details about the caller ID log, see pages 115-122.
- Press OFF/cancel on a cordless handset or CANCEL on the telephone base to exit redial list, directory, or caller ID log during a call.

Telephone operation Redial

The telephone base and each cordless handset store the last 10 dialed numbers (up to 30 digits each) in the redial list. The redial entries of each cordless handset and the telephone base are independent.

Review the redial list

Using a cordless handset:


- 1. Press **REDIAL/PAUSE** in idle mode.
- Press ▼CID, ▲DIR, or REDIAL/PAUSE repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.


Press **off/CANCEL** to exit.

Using the telephone base:

- 1. Press **REDIAL/PAUSE** in idle mode.
- Press ▼CID, ▲DIR, ▼/RECORD, ▲/DELETE, or REDIAL/PAUSE repeatedly to browse until the desired number displays. The telephone base beeps twice at the end of the list.

Press **CANCEL** to exit.

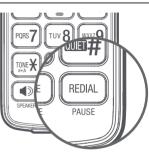

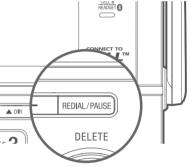

Dial a redial entry

Using a cordless handset:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, or **REDIAL/PAUSE** repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.
- 3. Press LINE 1/FLASH, LINE 2/FLASH, or **I**)/SPEAKER to dial using line 1 or line 2, or press (P) A CELL or (P) B CELL to dial using the cell line.

-OR-

- Press LINE 1/FLASH, LINE 2/FLASH, or ◄)/SPEAKER to use line 1 or line 2, or press (♠) A CELL or (♠) B CELL to use the cell line, and then press REDIAL/PAUSE.
- 2. Press ▼CID, ▲DIR, or **REDIAL/PAUSE** repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.
 - If you are using the cell line, press **INSERT** to select the desired number.
- 3. Press **DIAL** to dial the number displayed.

-OR-

You can also insert the area code to the redial number before dialing.

- 1. Enter the area code in idle mode, and then press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, or **REDIAL/PAUSE** repeatedly to browse until the desired number displays, and then press **INSERT**. The area code will be added in front of the selected redial number.
- 3. Press LINE 1/FLASH, LINE 2/FLASH, or)/SPEAKER to dial using line 1 or line 2, or press () A CELL or () B CELL to dial using the cell line.

Using the telephone base:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to browse until the desired number displays. The telephone base beeps twice at the end of the list.
- 3. Press LINE 1, LINE 2, or SPEAKER ◄) to dial using line 1 or line 2, or press Cell A(𝒫) or CELL B(𝒫) to dial using the cell line.

-OR-

- Press LINE 1, LINE 2, or SPEAKER ◄) to use line 1 or line 2, or press Cell A(¶) or CELL B(¶) to use the cell line, and then press REDIAL/PAUSE.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, ▲/DELETE, or REDIAL/PAUSE repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.
 - ▶ If you are using the cell line, press **INSERT** to select the desired number.
- 3. Press **DIAL** to dial the number displayed.

-OR-

You can also insert the area code to the redial number before dialing.

- 1. Enter the area code in idle mode, and then press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE, or REDIAL/PAUSE repeatedly to browse until the desired number displays, and then press INSERT. The area code will be added in front of the selected redial number.
- 3. Press LINE 1, LINE 2, or SPEAKER ◄) to dial using line 1 or line 2, or press Cell A(¶) or CELL B(¶) to dial using the cell line.

Save a redial entry to the directory

Using a cordless handset:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press **▼CID**, **▲DIR**, or **REDIAL/PAUSE** repeatedly to browse until the desired number displays.
- 3. Press SAVE.
- 4. The handset displays **EDIT NUMBER**. Use the dialing keys to edit the number, if necessary.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - <u>Press and hold</u> **MUTE/DELETE** to erase all digits.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press and hold **REDIAL/PAUSE** to insert a dialing pause (a **p** appears).
- 5. Press **NEXT**.
- 6. Press **▼CID**, **▲DIR** to select one of the following types:
 - ▶ Home
 - ▶ Cell
 - ▶ Work
 - Other
- 7. Press **NEXI**. The screen displays **ENTER NAME**. Use the dialing keys (page 106) to enter a name.
 - Press MUTE/DELETE or BACKSP to erase a character.
 - Press and hold MUTE/DELETE to erase all characters.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
- 8. Press SAVE. The screen displays Saved. You hear a confirmation tone.

Using the telephone base:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, ▲/DELETE, or REDIAL/PAUSE repeatedly to browse until the desired number displays.
- 3. Press **SAVE**.
- 4. The handset displays **EDIT NUMBER**. Use the dialing keys to edit the number, if necessary.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase all digits.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - Press and hold **REDIAL/PAUSE** to insert a dialing pause (a **p** appears).

Telephone operation Redial

- 5. Press **NEXT**.
- 6. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following types:
 - Home
 - ▶ Cell
 - ▶ Work
 - ▶ Other
- 7. Press **NEXT**. The screen displays **ENTER NAME**. Use the dialing keys (page 106) to enter a name.
 - ▶ Press ▲/DELETE or BACKSP to erase a character.
 - ▶ Press and hold ▲/DELETE to erase all characters.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
- 8. Press **SAVE**. The screen displays **Saved**. You hear a confirmation tone.

Delete a redial entry from the directory

Using a cordless handset:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press **▼CID** or **▲DIR**, or **REDIAL/PAUSE** repeatedly to browse until the desired number displays.
- 3. Press **MUTE/DELETE** or **DELETE** to delete the displayed number. You hear a confirmation tone.

Using a the telephone base:

- 1. Press **REDIAL/PAUSE** in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, ▲/DELETE, or REDIAL/PAUSE repeatedly to browse until the desired number displays.
- 3. Press **DELETE** to delete the displayed number. You hear a confirmation tone.

Multiple handset use

Use the intercom feature for conversations between a cordless handset and the telephone base, two cordless handsets, or a cordless handset/telephone base and a cordless headset/speakerphone (sold separately). You can buy additional expansion handsets (AT&T model **TL86003**), cordless headset, and cordless speakerphones (AT&T model **TL80133**) for this telephone base to expand your telephone system (up to 12 handsets or 10 handsets and two cordless headset/speakerphones).

To initiate, answer, and end an intercom call:

Using a cordless handset:

- Press MENU in idle mode to enter the main menu. Press ▼CID or ▲DIR to highlight Intercom, and then press SELECT.
 - ► The handset shows INTERCOM TO:. Use the dialing keys to enter a specific device number (0 for the telephone base, 1-9 for handsets 1-9, TONE¥ followed by 0-2 for handsets 10-12, # for a single cordless headset/speakerphone, # followed by 1 or 2 for cordless headset/speakerphone 1 or cordless headset/ speakerphone 2, respectively), or press ▼CID or ▲DIR to highlight the desired device and press SELECT. Your handset screen shows Calling HANDSET X or Calling Base.



1	\$
INTERCOM TO:	
BASE	0
HANDSET	2
BACK SELEC	T

The destination device(s) rings and shows **HANDSET X is calling** (**HANDSET** represents the handset name, **X** represents the handset number).

- To answer the intercom call, press LINE 1/FLASH, LINE 2/FLASH, ◀୬/SPEAKER, (Ŷ) A CELL, (Ŷ) B CELL, any dialing key (0-9, TONE¥), or press ANSWER on the destination handset. Both devices now show Intercom.
- 3. To end the intercom call, press **END**, **OFF/CANCEL**, or place the cordless handset into the charger; or press **END** on the telephone base. The other party hear four beeps. Both devices display **Intercom ended**.

Using the telephone base:

- Press MENU in idle mode to enter the main menu.
 Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Intercom, and then press SELECT.
 - The telephone base shows INTERCOM TO:. Use the dialing keys to enter a specific handset number (1-9 for handsets 1-9, TONE¥ followed by 0-2 for handsets 10-12, # for a single cordless headset/ speakerphone, # followed by 1 or 2 for cordless headset/speakerphone 1 or cordless headset/ speakerphone 2, respectively), or press ▼CID, ▲DIR,



▼/RECORD, or ▲/DELETE to highlight the desired handset and press
SELECT. The telephone base shows Calling HANDSET X.

The destination device(s) rings and shows **BASE is calling**.

- To answer the intercom call, press 1 LINE, 2 LINE, SPEAKER ◄), CELL A⁽ⁿ⁾, CELL B⁽ⁿ⁾, any dialing key (0-9, TONE¥), ANSWER, or lift the corded handset. Both devices now show Intercom.
- 3. To end the intercom call, press **END**, **OFF/CANCEL**, or place the cordless handset into the charger; or press **END** on the telephone base. The other party hear four beeps. Both devices display **Intercom ended**.

NOTES:

- Before the intercom call is answered, you can cancel it by pressing OFF/cancel on the cordless handset or END on the telephone base.
- If the called device does not answer within 100 seconds, or it is in use, on a call, or out of range, the initiating device shows No answer. Try again. and returns to the outside call.
- To temporarily silence the intercom ringer, press SILENCE, OFF/CANCEL, or MUTE/DELETE on the cordless handset, or press SILENCE or CANCEL on the telephone base.
- You can only use one pair of devices at a time to make intercom calls.

Answer an incoming call during an intercom call

When you receive an incoming call on line 1 or line 2 during an intercom call, the two devices on the intercom call hear an alert tone. The screens display **12**, **22**, or **122**, and **Incoming call**, and then the caller ID. The telephone base rings and all other handsets ring.

To answer a call on line 1 or line 2 during an intercom call:

Using a cordless handset:

- Press LINE 1/FLASH or LINE 2/FLASH to answer the call on line 1 or line 2. The intercom call ends automatically.
- Press OFF/CANCEL to end the intercom call without answering the incoming call. The telephone continues to ring.

Using the telephone base:

- Press 1 LINE or 2 LINE to answer the call on line 1 or line 2. The intercom call ends automatically.
- Press BACK, and then END to end the intercom call without answering the incoming call. The telephone continues to ring.

When you receive an incoming cell call during an intercom call, the two devices on the intercom call hear an alert tone, and their screens display $\exists (\P), (\P) \exists$, or $\exists (\P), \Pi \exists$, and then the caller ID. The telephone base rings and all other handsets ring.

To answer a cell call during an intercom call:

Using a cordless handset:

- Press (*) A CELL or (*) B CELL to answer the cell call and the intercom call ends automatically.
- Press OFF/CANCEL to end the intercom call without answering the incoming call. The telephone continues to ring.

Using the telephone base:

- Press CELL A⁽ⁿ⁾ or CELL B⁽ⁿ⁾ to answer the cell call. The intercom call ends automatically.
- Press **REJECT**, and then **END** to end the intercom call without answering the incoming call. The telephone stops ringing.



NOTE: During an intercom on the paired cordless headset or speakerphone, press **ON/OFF** or **Φ** on the cordless headset, or press **) PHONE** on the **TL80133** cordless speakerphone to end the intercom session. The ringer of the incoming call rings. Press the same key to answer the incoming call.

Multiple handset use Call transfer using intercom

Use the intercom feature to transfer an outside call to another system device or the telephone base. You can also share an outside call with another system device or the telephone base.

To transfer or share an outside call using intercom: Using a cordless handset:

- 1. When on an outside call, press **OPTION**.
- 2. Press **SELECT** to choose **Intercom**. The call is automatically put on hold.
 - The handset displays INTERCOM TO:. Use the dialing keys to enter a specific handset number (1-9 for handsets 1-9, TONE¥ followed by 0-2 for handsets 10-12, # for a single cordless headset/speakerphone, and # followed by 1 or 2 for cordless headset/speakerphone 1 or cordless headset/speakerphone 2, respectively), or press ▼CID or ▲DIR to select a destination device, and then press SELECT.

The call is automatically put on hold. Your handset screen displays Calling HANDSET X, Calling BASE. The destination device rings and displays HANDSET X is calling.

- To answer the intercom call on the other device, press ANSWER, LINE 1/FLASH, LINE 2/FLASH, INSUER, IN A CELL, IN B CELL, or any dialing key (0-9 or TONEX) on the destination handset, or press 1 LINE, 2 LINE, or SPEAKER IN on the telephone base. Both handsets and the telephone base show Intercom and the outside call is still on hold.
 - ► To answer the intercom call with the cordless headset, press **b** on the headset.
- 4. From this intercom call, you have the following options:
 - You can transfer the call. Press OPTION, and then press SELECT to select Transfer on the calling handset. Your screen shows Call transferred. The other handset automatically connects to the outside call.



- You can let the other device join you on the outside call in a 3-way conversation. Press OPTION, and then
 ▼CID or ▲DIR to highlight Share call, and press SELECT.
- You can end the intercom call and continue the outside call with your cordless handset. Press OFF/CANCEL, IND, LINE 1/FLASH, LINE 2/FLASH,
 A CELL, or B CELL on your cordless handset. The ended intercom call party hears four beeps, and the destination device screen shows Intercom ended.

- If you want to cancel an intercom call and reconnect to the outside call before the destination handset answers, press **off/CANCEL** or **END** on the originating handset.
- If the called device does not answer within 100 seconds, or it is in use, on a call, or out of range, the initiating device shows No answer. Try again. and returns to the outside call.

Multiple handset use Call transfer using intercom

Using the telephone base:

- 1. When on an outside call, press **OPTION**.
- 2. Press **SELECT** to choose **Intercom**. The call is automatically put on hold.
 - The telephone base displays INTERCOM TO:. Use the dialing keys to enter a specific handset number (1-9 for handsets 1-9, TONE¥ followed by 0-2 for handsets 10-12, # for a single cordless headset/speakerphone, and # followed by 1 or 2 for cordless headset/speakerphone 1 or cordless headset/speakerphone 2, respectively), or press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to select a destination handset, and then press SELECT.

The call is automatically put on hold. Your telephone base screen displays **Calling HANDSET X**. The destination device rings and displays **BASE is calling**.

- To answer the intercom call on any destination handset, press ANSWER, LINE 1/FLASH, LINE 2/FLASH, ◀୬/SPEAKER, ☞A CELL, ☞B CELL or any dialing key (0-9 or TONE¥) on the destination handset. Both handsets and the telephone base show Intercom and the outside call is still on hold.
 - ► To answer the intercom call with the cordless headset, press **b** on the headset.
- 4. From this intercom call, you have the following options:
 - You can transfer the call. Press OPTION, and then press SELECT to select Transfer on the telephone base. Your screen shows Call transferred. The other handset automatically connects to the outside call.



- You can let the other device join you on the outside call in a 3-way conversation. Press OPTION, and then ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Share call, and press SELECT.
- You can end the intercom call and continue the outside call with your telephone base. Press CANCEL, IND, 1 LINE, 2 LINE, SPEAKER ◄», CELL A(n), or CELL B(n) on the telephone base. The destination device screen shows Intercom ended.

NOTES:

- If you want to cancel an intercom call and reconnect to the outside call before the destination handset answers, press CANCEL or END on the telephone base.
- If the called device does not answer within 100 seconds, or it is in use, on a call, or out of range, the initiating device shows No answer. Try again. and returns to the outside call.

Multiple handset use Push-to-talk (PTT)

You can directly broadcast messages from one handset or telephone base to the speakerphone of one or a group of other devices. <u>Press and hold</u> **PUSH TO TALK** on a handset or **PTT** on the telephone base to begin a two-way communication.

- Only one device can talk at a time. While talking to another device, <u>press and hold</u> PUSH TO TALK on the handset or PTT on the telephone base.
- You must release **PUSH TO TALK** on the handset or **PTT** on the telephone base, so the other person can respond.
- Only one PTT session can be active at a time.
- While PTT is in use between two devices, other devices cannot use the intercom feature but can access the answering system.
- When you attempt to place a PTT call to another device which is accessing the answering system or on an intercom call or outside call, your device screen shows Not available at this time.

NOTE: The PTT function is not available when **QUIET** mode is on.

Turn PTT on or off


Using a cordless handset:

- 1. Press **PUSH TO TALK** when the handset is not in use. The **PUSH TO TALK** menu displays.
- 2. Press **▼CID** or **▲DIR** to highlight **PTT On/Off**, and then press **SELECT**.
- 3. Press ▼CID or ▲DIR to choose On or Off, and then press SELECT.

Using the telephone base:

- 1. Press **PTT** when the telephone base is not in use. The **PUSH TO TALK** menu displays.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight PTT On/Off, and then press SELECT.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to choose **On** or **Off**, and then press **SELECT**.

	NOTE: The handset or the telephone base screen displays PTT when PTT is turned off.
	when PTT is turned off.

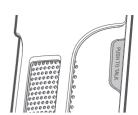

	1
ie	PUSH TO TALK
	BASE
	PTT On/Off
	BACK SELECT
Γ	ê 🔶
	INCOMING PTT
	√On Off
	BACK SELECT
p	USH TO TALK
HANDS	
	On/Off
BA	CK 🗧 🗧 ISELECT
 √On	NCOMING PTT
0ff	
	CK 🗘 SELECT



^{Multiple handset use} Push-to-talk (PTT)

PTT call to a single device

Using a cordless handset:

- 1. There are a few ways to begin a PTT call to a single device. When the handset is not in use:
 - ▶ If you have one handset, press and hold **PUSH TO TALK**.
 - If you have more than one handset:
 - Press **PUSH TO TALK** on the handset, and then use the dialing keys to enter the destination device number.

-OR-

 Press PUSH TO TALK on the handset. Press ▼CID or ▲DIR to highlight the destination device number, and then press SELECT or PUSH TO TALK.

The handset shows **Connecting to HANDSET X...** (**HANDSET** represents the handset name, **X** represents the destination handset number) or **Connecting to BASE 0...** (**BASE** represents the base name) for a few seconds. When the connection is made, both your and the destination device screens display **Press and hold [PTT] to talk**.

- Press and hold PUSH TO TALK. A chirp indicates your microphone is on. Speak towards the device. Your voice is broadcast to the destination device. While you are speaking, your handset shows PTT TO HANDSET X or PTT TO BASE 0.
- Release **PUSH TO TALK** after speaking. Both devices beep once again and the screens show <u>Press and hold</u> [PTT] to talk, and then you can <u>press and hold</u> **PUSH TO TALK** to continue speaking or the destination device can respond (see **Answer a PTT call** on page 100).
- 4. To end the PTT call, press **OFF/CANCEL** or **END**, or place the handset in the charger. The handset shows **Push to talk ended**.



NOTE: After **PUSH TO TALK** is released, the PTT call remains open for a short time. If no one presses **PUSH TO TALK** within 10 seconds, the PTT call ends automatically.

^{Multiple handset use} Push-to-talk (PTT)

Using the telephone base:

- 1. There are a few ways to begin a PTT call to a single handset. When the telephone base is not in use:
 - ▶ If you have one handset, press and hold PTT.
 - If you have more than one handset:
 - Press **PTT**, and then use the dialing keys to enter the destination handset number.

-OR-

 Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight the destination handset number, and then press SELECT or PTT.

The telephone base shows **Connecting to HANDSET X... (HANDSET** represents the handset name, **X** represents the destination handset number) for a few seconds. When the connection is made, both the telephone base and destination handset display **Press and hold [PTT] to talk**.

- Press and hold PTT. A chirp indicates your microphone is on. Speak towards the telephone base. Your voice is broadcast to the destination handset. While you are speaking, the telephone base shows PTT TO HANDSET X.
- Release PTT after speaking. Both devices beep once again and the screens show <u>Press and hold</u> [PTT] to talk, and then you can <u>press and hold</u> PTT to continue speaking or the destination device can respond (see Answer a PTT call on page 100).
- 4. To end the PTT call, press **CANCEL** or **END**. The telephone base shows **Push to talk Ended** for a few seconds.



NOTE: After **PTT** is released, the PTT call remains open for a short time. If no one presses **PTT** within 10 seconds, the PTT call ends automatically.

^{Multiple handset use} Push-to-talk (PTT)

PTT call to multiple devices

When there are multiple handsets registered to the phone system, PTT supports one-to-group calls. PTT supports a maximum of one-to-four calls when one to five handsets are registered, and a maximum of one-to-three calls when six or more handsets are registered. The first three or four registered handsets will be able to use this feature. Other handsets can only use PTT for one-to-one calls.

To call multiple devices:

Using a cordless handset:

- 1. You have two ways to call multiple devices. When the handset is not in use:
 - <u>Press and hold</u> **PUSH TO TALK** until the handset shows **Connecting** to group....
 - Press PUSH TO TALK. Press VCID or ADIR to choose Group. Press
 SELECT or press PUSH TO TALK and your handset shows Connecting to group.....

When the connection is made, both the caller and the destination parties hear a beep. The speakerphones on all other devices automatically activate.

- 2. You need to <u>press and hold</u> **PUSH TO TALK** when you want to speak. Speak towards the handset. Your voice is broadcast to all devices.
- 3. Release **PUSH TO TALK** after speaking.
- 4. Any extension can reply (see Answer a PTT call on page 100).



NOTE: After **PUSH TO TALK** is released, the PTT call remains open for a short time. If no one presses **PUSH TO TALK** within 10 seconds, the PTT call ends automatically.

Using the telephone base:

- 1. You have two ways to call multiple handsets. When the telephone base is not in use:
 - Press and hold PTT until the screen shows Connecting to group....
 - ▶ Press PTT. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose Group. Press SELECT or PTT and the telephone base shows Connecting to group....

When the connection is made, both the caller and the destination parties hear a beep. The speakerphones on all other devices automatically activate.

- 2. You need to <u>press and hold</u> **PTT** when you want to speak. Speak towards the telephone base. Your voice is broadcast to all devices.
- 3. Release **PTT** after speaking.
- 4. Any extension can reply (see Answer a PTT call on page 100).



NOTE: After **PTT** is released, the PTT call remains open for a short time. If no one presses **PTT** within 10 seconds, the PTT call ends automatically.

Answer a PTT call

You can respond to a PTT call, as described below.

Using a handset or the telephone base:

- When your device receives a PTT call, it beeps and shows Press and hold [PTT] to talk.
- 2. When the other party is speaking, your speakerphone light is on, and your device shows:
 - PTT From HANDSET X To device(s): X (the first X represents the initiating handset number, and the second X represents your handset number; a maximum of four handset numbers appear).
 -OR-
 - PTT From BASE 0 To device(s): X (the X represents your handset number; a maximum of four handset numbers appear).
- When your speakerphone light is off (the screen shows Press and hold [PTT] to talk), press and hold PUSH TO TALK on your handset or PTT on your telephone base. You will hear a chirp. Speak towards the device.
 - While you are speaking, your device shows PTT To Handset: X

 (X represents the handset numbers of one or more destination handsets; a maximum of four handset numbers appear) or
 PTT To device(s): X (X represents the devices numbers of one or more destination handsets; a maximum of four recipient device numbers appear).
 - Your voice is broadcast to all destination devices.

After speaking, release **PUSH TO TALK** on your handset or **PTT** on your telephone base. Your device will beep. After the beep, if your speakerphone light is off, you can <u>press and hold</u> **PUSH TO TALK** on your handset or **PTT** on your telephone base to continue speaking, or the destination device can respond.

Change a one-to-one PTT call to an intercom call

You can convert a one-to-one PTT session to an intercom call.

Using a cordless handset or the telephone base:

- 1. When your device shows **Press and hold [PTT] to talk**, press **INTCOM**. The screen shows **Switch to Intercom?**.
- Press SELECT. Your device displays Calling BASE or Calling HANDSET X. The destination device briefly shows Push to talk Ended, and then HANDSET X is calling or BASE is calling. The destination device rings.
- Press LINE 1/FLASH, LINE 2/FLASH, or any dialing keys (0-9, or TONE¥) on the destination handset, or press 1 LINE, 2 LINE, or any dialing keys (0-9, or TONE ¥) on the telephone base to answer the intercom call. Both devices now show Intercom.
- 4. To end the intercom call, press **OFF/CANCEL** or **END** on your cordless handset, or place the cordless handset in the charger; or press **END** on the telephone base. Both screens show **Intercom ended**.

Answer an incoming call during a PTT call

When you receive an outside call during PTT, there is an alert tone.

Using a cordless handset or the telephone base:

- During a one-to-group PTT call, press LINE 1/FLASH, LINE 2/FLASH,
 (*) A CELL, or (*) B CELL on the initiating handset, or press LINE 1, LINE2,
 CELL A(*), or CELL B(*) on the telephone base. The PTT call ends automatically and the outside call is answered.
- During a one-to-group PTT call, press LINE 1/FLASH, LINE 2/FLASH,
 A CELL, or P B CELL on any one of the destination handsets, or press
 1 LINE, 2 LINE, CELL A P, or CELL B P on the telephone base. That device answers the outside call. The PTT call continues for the rest of the PTT participants.
- To leave the PTT call without answering the incoming call, press
 OFF/CANCEL on your handset or CANCEL on your telephone base. The telephone continues to ring.

Make an outgoing call during PTT call

Using a cordless handset or the telephone base:

- During a one-to-one PTT call, press LINE 1/FLASH or LINE 2/FLASH on your handset or 1 LINE or 2 LINE on the telephone base to get a dial tone. The PTT call ends automatically.
- During a one-to-group PTT call, press LINE 1/FLASH or LINE 2/FLASH on the initiating handset or 1 LINE or 2 LINE on the telephone base. The PTT call ends automatically and you get a dial tone.
- During a one-to-group PTT call, press LINE 1/FLASH or LINE 2/FLASH on any one of the destination handsets or 1 LINE or 2 LINE on the telephone base. That device gets a dial tone. The PTT call continues for the rest of the PTT participants.

End or leave a PTT call

Using a cordless handset or the telephone base:

For one-to-one PTT calls, both initiating and destination devices can end the PTT call. For PTT calls to multiple devices, the initiating device can end the PTT call. If any one of the destination devices leaves the PTT call, the call continues until all participants or the initiator hangs up.

Press **OFF/CANCEL** or **END** on the handset, or press **CANCEL** or **END** on the telephone base. The screens show **Push to talk Ended**.

-OR-

Place the cordless handset in the charger. The handset returns to idle mode. The telephone base screen shows **Push to talk Ended**.



NOTE: After **PUSH TO TALK** on the handset or **PTT** on the telephone base is released, the PTT call remains open for a short time. If no one presses **PUSH TO TALK** on the handset or **PTT** on the telephone base within 10 seconds, the PTT call ends automatically.

Directory About the directory

The home directory stores up to 200 entries with up to 30 digits for each phone number and 15 characters for each name. Each of the downloaded directories stores up to 1,500 entries with up to 30 digits for each phone number and 15 characters for each name.

- Directory entries are stored at the telephone base and shared by all cordless handsets. Any changes made on one device apply to all.
- Only one device can review the directory at a time. If another device tries to enter the directory, its screen shows Not available at this time.
- When there are no records in the directory, the screen shows
 Directory empty.
- When the directory is full and you try to save an entry, the screen shows Directory full.
- When you try to save a number already stored in the directory, the screen shows Number already saved.

Directory Create directory entries

Create a new entry in the home directory

Using a cordless handset:

- 1. Press **MENU** on the handset in idle mode to enter the main menu.
- 2. Press ▼CID or ▲DIR to highlight Directory, and then press SELECT.
- 3. Press **OPTION** to choose **Home**.
- 4. Press **SELECT** to choose **Add contact**. The screen displays **ENTER NUMBER**.
- 5. Use the dialing keys to enter a telephone number.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - ▶ Press **MUTE/DELETE** or **BACKSP** to erase a digit.
 - <u>Press and hold</u> **MUTE/DELETE** to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a dialing pause (a p appears).

-OR-

Copy a number from the redial list. Press **REDIAL/PAUSE**, and then **▼CID**, **▲DIR**, or **REDIAL/PAUSE** repeatedly to locate the number. Press **INSERT** to copy the displayed number.

- 6. Press **NEXT**.
- 7. Press **▼CID** or **▲DIR** to highlight one of the following types:
 - Home
 - Cell
 - Work
 - Other
- 8. Press **NEXT**. The screen displays **ENTER NAME**.
- 9. Use the dialing keys (see page 106) to enter a name (up to 15 characters).
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press **0** to add a space.
 - Press MUTE/DELETE or BACKSP to erase a character.
 - Press and hold MUTE/DELETE to erase all characters.
 - Press TONEX/a>A to change the next letter to upper or lower case.
- 10. Press **SAVE** to confirm and the screen shows **Saved**. You hear a confirmation tone.

Directory Create directory entries

Using the telephone base:

- 1. Press MENU on the telephone base in idle mode to enter the main menu.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Directory, and then press SELECT.
- 3. Press **OPTION** to choose **Home**.
- 4. Press **SELECT** to choose **Add contact**. The screen displays **ENTER NUMBER**.
- 5. Use the dialing keys to enter a telephone number.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase all digits.
 - Press and hold REDIAL/PAUSE to enter a dialing pause (a p appears).

-OR-

Copy a number from the redial list. Press **REDIAL/PAUSE**, and then **▼CID**, **▲DIR**, or **REDIAL/PAUSE** repeatedly to locate the number. Press **INSERT** to copy the displayed number.

- 6. Press **NEXT**.
- 7. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following types:
 - Home
 - Cell
 - Work
 - Other
- 8. Press **NEXT**. The screen displays **ENTER NAME**.
- 9. Use the dialing keys (see page 106) to enter a name (up to 15 characters).
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or /SKIP to move the cursor to the right.
 - Press 0 to add a space.
 - Press ▲/DELETE or BACKSP to erase a character.
 - <u>Press and hold</u> ▲/DELETE to erase all characters.
 - Press **TONEX/a>A** to change the next letter to upper or lower case.
- 10. Press **SAVE** to confirm and the screen shows **Saved**. You hear a confirmation tone.



NOTE: You can also download directory entries from your cell phone (see **Download directory** on page 44).

Directory Create directory entries

Dialing keys

Dialing keys	Characters by number of key presses										
	1	2	3	4	5	6	7	8	9	10	11
1	1		-	6	()	*	#	&	/	,
2	А	В	С	а	b	С	2				
3	D	E	F	d	e	f	3				
4	G	Н	I	g	h	i	4				
5	J	K	L	j	k		5				
6	М	Ν	0	m	n	0	6				
7	Р	Q	R	S	р	q	r	S	7		
8	Т	U	V	t	u	V	8				
9	W	Х	Y	Z	w	Х	у	Z	9		
0	space	0									
*											
#											

NOTE: When entering a name in the directory, the first letter of each word is automatically capitalized.

Add a predialed telephone number to the directory

You can save a predialed telephone number to the directory.

Using a cordless handset:

- Enter the telephone number when in idle mode, and then press SAVE to move on to edit the number, and then press NEXT.
- 2. Press **VCID** or **ADIR** to highlight one of the following types:
 - Home
 - ▶ Cell
 - Work
 - ▶ Other
- 3. Press **NEXT**. The screen displays **ENTER NAME**.
- 4. Use the dialing keys to edit the name.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a character.
 - Press and hold MUTE/DELETE to erase all characters.
- 5. Press **SAVE** to save the entry. There is a confirmation tone and the screen shows **Saved**.

- 1. Enter the telephone number when in idle mode, and then press **SAVE** to move on to edit the number, and then press **NEXT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight one of the following types:
 - Home
 - ▶ Cell
 - ▶ Work
 - ▶ Other
- 3. Press **NEXT**. The screen displays **ENTER NAME**.
- 4. Use the dialing keys to edit the name.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a character.
 - ▶ Press and hold ▲/DELETE to erase all characters.
- 5. Press **SAVE** to save the entry. There is a confirmation tone and the screen shows **Saved**.

Directory Review the directory

Review directory entries

Using a cordless handset:

- 1. Press **ADIR** when in idle mode.
- 2. Press **▼CID** or **▲DIR** to highlight a directory, and then press **REVIEW**.
- 3. Press **▼CID** or **▲DIR** to browse.

-OR-

- 1. Press **MENU** when in idle mode.
- 2. Press ▼CID or ▲DIR to highlight Directory, and then press SELECT.
- 3. Press ▼CID or ▲DIR to highlight a directory, and then press **REVIEW**.
- Press ▼CID or ▲DIR to browse.
 -OR-
- 1. Press **OPTION** while on a call.
- 2. Press **▼CID** or **▲DIR** to highlight **Directory**, and then press **SELECT**.
- 3. Press **▼CID** or **▲DIR** to highlight a directory, and then press **REVIEW**.
- 4. Press **▼CID** or **▲DIR** to browse.

Directory Review the directory

Using the telephone base:

- 1. Press **DIR** when in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight a directory, and then press REVIEW.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to browse.
 -OR-
- 1. Press **MENU** when in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Directory, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight a directory, and then press REVIEW.
- 4. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to browse.

-OR-

- 1. Press **OPTION** while on a call.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Directory, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight a directory, and then press REVIEW.
- 4. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to browse.



NOTES:

- When the desired entry displays, press # (pound key) on the cordless handset or telephone base repeatedly to show different dialing options.
- Directory empty appears if there are no directory entries.

Directory Search the directory

3-character alphabetical search

You can use the enhanced 3-character search to find your contacts quickly and efficiently.

Using a cordless handset or the telephone base:

- 1. Follow the steps in **Review directory entries** on pages 108-109 to enter the directory.
- 2. When an entry appears, use the dialing keys to enter the letters associated with the name (see page 106). You can enter up to three letters for the search. The letters will show at the top left hand corner of the screen. After you have entered one to three letters, the system starts searching in the directory. If there is no name matching the letter(s) entered, the next closest match in alphabetical order appears. If necessary, press ▼CID or ▲DIR on the cordless handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base to browse.



NOTE: The cursor automatically moves to the next position two seconds after you enter a letter. If you do not enter another letter in the coming two seconds, the system starts searching in the directory.

Dial a directory entry

You can dial a directory entry on any line.

To dial a directory entry:

Using a cordless handset:

- 1. Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When the desired entry appears, press **#** (pound key) repeatedly to show different dialing options.
- 3. When the displayed number is in the correct format, press LINE 1/FLASH, LINE 2/FLASH, or <)/SPEAKER to dial using line 1 or line 2. Press (*) CELL A or (*) CELL B to dial using the cell line.

Using the telephone base:

- 1. Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When the desired entry appears, press **#** (pound key) repeatedly to show different dialing options.
- 3. When the displayed number is in the correct format, press **1 LINE**, **2 LINE**, **SPEAKER**, **(**), or lift the corded handset, to dial using line 1 or line 2. Press **CELL A (P**) or **CELL B (P**) on the telephone base to dial using the cell line.

Edit a directory entry

You can edit any directory entry. However, be aware that if you download a directory from a cell phone again, the directory is erased and replaced with the current cell phone directory. If you have edited the downloaded entries on your **TL87203**, those changes are lost. To avoid losing changes made to the downloaded directory, we suggest that you edit numbers in your cell phone, and then download the directory.

Using a cordless handset:

- 1. Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When a directory entry displays, press **EDIT**. The screen shows **EDIT**. **NUMBER** along with the phone number to be edited.
- 3. Use the dialing keys to edit the number:
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - Press and hold MUTE/DELETE to erase all digits.
 - Press and hold **REDIAL/PAUSE** to add a dialing pause (a **p** appears).
- 4. Press NEXT.

^{Directory} Dial, edit, or delete a directory entry

- 5. Press **▼CID** or **▲DIR** to highlight one of the following types.
 - Home
 - Cell
 - Work
 - ▶ Other
- 6. Press **NEXT**. The screen displays **EDIT NAME**.
- 7. Use the dialing keys to edit the name.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a character.
 - <u>Press and hold</u> **MUTE/DELETE** to erase all characters.
- 8. Press **SAVE** to save the entry. There is a confirmation tone and the screen shows **Saved**.

- 1. Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When a directory entry displays, press **EDIT**. The screen shows **EDIT NUMBER** along with the phone number to be edited.
- 3. Use the dialing keys to edit the number:
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - ▶ <u>Press and hold</u> ▲/**DELETE** to erase all digits.
 - Press and hold REDIAL/PAUSE to add a dialing pause (a p appears).
- 4. Press NEXT.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following types.
 - Home
 - Cell
 - Work
 - ▶ Other
- 6. Press **NEXT**. The screen displays **EDIT NAME**.
- 7. Use the dialing keys to edit the name.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a character.
 - ▶ <u>Press and hold</u> ▲/DELETE to erase all characters.
- 8. Press **SAVE** to save the entry. There is a confirmation tone and the screen shows **Saved**.

Edit the type of a directory entry

If you only want to edit the type of a directory entry:

Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).

- 1. When a directory entry displays, press **LABEL** on a cordless handset or **TONEX** on the telephone base.
- 2. Enter the corresponding shortcut keys shown in the following table.

Туре	Press
Home	1
Cell	2
Work	3
Other	4

-OR-

Press **CLEAR** to erase the assigned label.

Delete a directory entry

Using a cordless handset or the telephone base:

- 1. Search for the desired entry in the directory (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- When the desired entry appears, press MUTE/DELETE on the cordless handset, or DELETE on the telephone base. The screen displays Delete contact? and the name of the entry. Press YES to confirm.
- 3. The screen displays **Contact deleted**, and then the next alphabetical entry in the directory. You hear a confirmation tone.



NOTE: Once a directory entry is deleted, it cannot not be retrieved.





_{Directory} Dial, edit, or delete a directory entry

Remove a downloaded directory

Using a cordless handset:

- Search for the desired downloaded directory in the directory menu (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When the desired downloaded directory is chosen, press **OPTION**, and then press **▼CID** or **▲DIR** to highlight **Remove dir**.
- 3. Press **SELECT**. The screen displays **Directory Cell Phone A will be erased**.
- 4. Press **YES** to confirm. The screen displays **Erasing directory...**. You hear a confirmation tone.

- Search for the desired downloaded directory in the directory menu (see **Review directory entries** and **3-character alphabetical search** on pages 108-110).
- 2. When the desired downloaded directory is chosen, press **OPTION**, and then press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Remove dir**.
- 3. Press **SELECT**. The screen displays **Directory Cell Phone A will be erased**.
- 4. Press **YES** to confirm. You hear a confirmation tone.

^{Caller ID} About caller ID

This product supports caller ID services offered by most telephone service providers. Caller ID allows you to see the name, number, date and time of calls. The available caller ID information will appear after the first or second ring.

Information about caller ID with call waiting

Caller ID with call waiting lets you see the name and telephone number of the caller before answering the call, even while on another call.

It may be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate services (you may need to combine these services).
- You have only caller ID service, or only call waiting service.
- You don't subscribe to caller ID or call waiting services.

There are fees for caller ID services. In addition, services may not be available in all areas.

This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone service providers use compatible equipment. The time and date, along with the call information, are from the telephone service provider.

Caller ID information may not be available for every incoming call. Callers may intentionally block their names and/or telephone numbers. You can only view a maximum of 15 digits of every caller ID log entry.



NOTE: You can use this product with regular caller ID service, or you can use this product's other features without subscribing to caller ID or combined caller ID with call waiting service.

^{Caller ID} Caller ID log

How the caller ID log works

The telephone stores caller ID information about the last 200 incoming calls in the telephone base, which are shared by all lines (except PC line). Entries are stored in reverse chronological order. The phone deletes the oldest entry when the log is full to make room for new calls. This information is common to the telephone base and cordless handsets, so changes made using a cordless handset or the telephone base are reflected in all other devices. If you answer a call before the information appears on the screen, it does not show in the caller ID log.

r	-	
I	_	-7
I	=	=
I		_ 1

NOTE: Each entry may have up to 24 digits for the phone number and 15 characters for the name.

Missed (new) call indicator

When there are new or missed calls, the cordless handset screen shows **XX Missed calls** in idle mode, and the telephone base shows **S** in idle mode.

All new and missed entries are counted as missed calls. Each time you review a new caller ID log entry (indicated by $\mathbb{N} \to \mathbb{U}$ on the screen), the number of missed calls decreases by one.

If you do not want to review the missed calls one by one, but still want to keep them in the caller ID log, you can <u>press and hold</u> **OFF/CANCEL** on the cordless handset for four seconds when the handset is idle, or <u>press and hold</u> **CANCEL** on the telephone base for four seconds when the telephone base is idle. You will hear a confirmation tone. All the entries in the caller ID log become old (reviewed already), and the missed calls message goes away.



NOTE: If there are more than 99 missed calls, the handset screen will show XXX Missed calls.

Memory match

If the incoming telephone number matches the last 7 digits of a telephone number in your directory, the name that appears on the screen matches the corresponding name in your directory.

For example, if **Christine Smith** calls, her name appears as **Chris** if this is how you entered it into your directory.

E	_			h
I	-	-	_	Л
	-	_	_	
	-	-	-	1

NOTE: The number shown in the caller ID log will be in the format sent by the telephone service provider. The telephone service provider usually delivers ten-digit phone numbers (area code plus telephone number). If the telephone number of the caller does not match a number in your directory, the name will appear as it is delivered by the telephone service provider.

Caller ID operation

Review the caller ID log

Review the caller ID log to find out who called, to return the call, or to copy the caller's name and number into your directory. **Caller ID log empty** appears if there are no records in the caller ID log.

Using a cordless handset or the telephone base:


 When a cordless handset or the telephone base is in idle mode, press ▼CID on the handset or the telephone base to review the caller ID log in reverse chronological order starting with the most recent call.

-OR-


Review the caller ID log by pressing MENU. Press ▼CID or ▲DIR on the handset, or ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base, to highlight Caller ID log, and then press SELECT twice to select Review.

Press ▼CID or ▲DIR on the handset, or ▼CID,
 ▲DIR, ▼/RECORD, or ▲/DELETE on the telephone base, to scroll through the list.



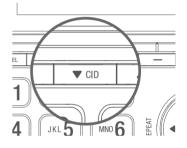

NOTE: Only one cordless handset or the telephone base can review the caller ID log at a time. If another device tries to enter the directory or caller ID log, it shows **Not available at this time**.

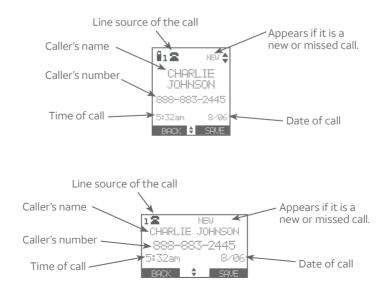


Caller ID operation

View dialing options

Although the incoming caller ID log entries have ten digits (the area code plus the seven-digit number), in some areas, you may need to dial only the 7 digits, 1 plus the seven digits, or 1 plus the area code plus the seven digits. You can change and store the number of digits that you dial in the caller ID log.

While reviewing the caller ID log, press **#** (pound key) repeatedly to show different dialing options for local and long distance numbers before dialing or saving the telephone number in the directory.

Press **1** repeatedly if you need to add or remove 1 in front of the telephone number before dialing or saving it in the directory, until the number is in the correct format for dialing.

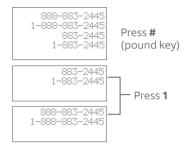

To call the number using line 1 or line 2:

Press LINE 1/FLASH, LINE 2/FLASH, or **()**/SPEAKER on a cordless handset, or press 1 LINE, 2 LINE, or SPEAKER () on the telephone base to call using line 1 or line 2.

-OR-

Lift the corded handset.

To call the number using a cell line:

Press (n) CELL A or (n) CELL B on a cordless handset, or CELL A (n) or CELL B (n) on the telephone base to call the number using the cell line.

Dial a caller ID log entry

Using a cordless handset:

- 1. When in the caller ID log, press **▼CID** or **▲DIR** to browse.
- 2. Press LINE 1/FLASH, LINE 2/FLASH, or (*)/SPEAKER to dial the displayed entry using line 1 or line 2.

-OR-

Press (P) CELL A or (P) CELL B to dial the display entry using the cell line.

Using the telephone base:

- 1. When in the caller ID log, press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to browse.
- 2. Press **1 LINE**, **2 LINE**, **SPEAKER ⊲**), or lift the corded handset to dial the displayed entry using line 1 or line 2.

-OR-

Press A(P) or CELL B(P) to dial the display entry using the cell line.

Save a caller ID log entry to the directory

Caller ID log entries can only be saved to the **Home** directory.

Using a cordless handset:

- 1. Select a desired entry in the caller ID log (see **Review the caller ID log** on page 117).
- 2. When the desired entry appears, press **#** (pound key) repeatedly to show different dialing options.
- 3. When the number is in correct format, press **SAVE**. The screen displays **EDIT NUMBER**.
- 4. Use the dialing keys to edit the number.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a digit.
 - Press and hold **MUTE/DELETE** to erase the entire entry.
 - Press and hold REDIAL/PAUSE to insert a dialing pause (a p appears).
- 5. Press **NEXT**.
- 6. Press **▼CID** or **▲DIR** to highlight one of the following types:
 - Home
 - ▶ Cell
 - Work
 - Other
- 7. Press **NEXT**. The handset displays **EDIT NAME**.
- 8. Use the dialing keys (page 106) to edit the name.
 - ▶ Press **▼CID** or **▲DIR** to move the cursor to the left or right.
 - Press MUTE/DELETE or BACKSP to erase a character.
 - Press and hold **MUTE/DELETE** to erase all characters.
 - Press # (pound key) to move the last word to the front. For example, Johnson Charlie becomes Charlie Johnson when you press # (pound key).
- 9. Press **SAVE** to confirm. The screen shows **Saved**.

Caller ID operation

- 1. Select a desired entry in the caller ID log (see **Review the caller ID log** on page 117).
- 2. When the desired entry appears, press **#** (pound key) repeatedly to show different dialing options.
- 3. When the number is in correct format, press **SAVE**. The telephone base displays **EDIT NUMBER**.
- 4. Use the dialing keys to edit the number.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a digit.
 - ▶ Press and hold ▲/DELETE to erase the entire entry.
 - Press and hold REDIAL/PAUSE to insert a dialing pause (a p appears).
- 5. Press **NEXT**.
- 6. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight one of the following types:
 - Home
 - Cell
 - Work
 - Other
- 7. Press **NEXT**. The telephone base displays **EDIT NAME**.
- 8. Use the dialing keys (page 106) to edit the name.
 - Press ▼CID or </REPEAT to move the cursor to the left. Press ▲DIR or
 >/SKIP to move the cursor to the right.
 - ▶ Press ▲/DELETE or BACKSP to erase a character.
 - ▶ <u>Press and hold</u> ▲/DELETE to erase all characters.
 - Press # (pound key) to move the last word to the front. For example, Johnson Charlie becomes Charlie Johnson when you press # (pound key).
- 9. Press **SAVE** to confirm. The telephone base shows **Saved**.



- If the caller's name you received from the telephone service provider is all in capital letters, the first letter of every word remains a capital letter, while other letters become lower case. However, the next letter after the prefix "Mac", "Mc", "D", "C" or "O", is kept as a capital letter. For example, the "D" in "MacDonald" is kept as a capital letter. Another exception is that "VAN DER" will be changed to "Van der".
- ▶ If the telephone number from the caller ID information has already been saved in the directory under a different name, the new name will overwrite the old one.

Caller ID operation

Delete caller ID log entries

To delete an entry:

Using a cordless handset:

Press MUTE/DELETE on the handset.

Using the telephone base:

Press **DELETE** on the telephone base to delete the shown entry.

To delete all entries:

Using a cordless handset:

- 1. Press **MENU** when in idle mode.
- 2. Press ▼CID or ▲DIR to highlight Caller ID log, and then press SELECT.
- 3. Press ▼CID or ▲DIR to highlight Delete all calls, and then press SELECT.
- 4. When the screen shows **Delete all calls?**, press **YES** to confirm. There is a confirmation tone and the screen returns to the previous menu.

- 1. Press **MENU** when in idle mode.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Caller ID log, and then press SELECT.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Delete all calls, and then press SELECT.
- 4. When the screen shows **Delete all calls?**, press **YES** to confirm. There is a confirmation tone and the screen returns to the previous menu.

Caller ID Reasons for missing caller ID information

There are occasions when other information or no information shows for various reasons:

On-screen message	Reason
PRIVATE NUMBER	The caller prefers not to show the phone number.
PRIVATE NAME	The caller prefers not to show the name.
PRIVATE CALLER	No name is sent and the caller prefers not to show the number. -OR- The caller prefers not to show the phone number and name.
UNKNOWN NUMBER	Your telephone service provider cannot determine the caller's number.
UNKNOWN NAME	Your telephone service provider cannot determine the caller's name.
UNKNOWN CALLER	No name is sent and your telephone service provider cannot determine the caller's number. -OR- Your telephone service provider cannot determine the caller's name
	and telephone number. Calls from other countries may also generate this message.

Use the answering system menu of the telephone base to set up the announcement message, turn on or off the answering system or message alert tone, activate call screening, or change the number of rings, remote access code or message recording time. If you turn off the answering system and you change any setting in the answering system setup menu, the answering system automatically turns on again.

You can also change the answering system settings using the **AT&T Softphone Call Manager** installed on your computer (see page 20). For detailed instructions, please refer to the **Installation and Operation Guide** in the **CD-ROM** which comes with the package.

Announcement

Your outgoing announcement plays when calls are answered by the answering system.

The telephone has a default outgoing announcement, *"Hello, please leave a message after the tone."* You can use this announcement, or record your own.

You can record an announcement up to 90 seconds. The system does not record any announcement shorter than two seconds.

To play a new outgoing announcement:

- When the telephone base is in idle mode, press
 MENU to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- 4. Press **SELECT** again to select **Announcement**.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Play annc**, and then press **SELECT**.



To record a new outgoing announcement:

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.



- 4. Press **SELECT** again to select **Announcement**.
- 5. Press **SELECT** to select **Record annc**. The system announces, *"Record after the tone. Press STOP when you are done."*
- Speak towards the telephone base to record your announcement. Press
 STOP to end recording. Your recorded announcement plays.
 -OR-
- 1. When the telephone base is in idle mode, press ▼/RECORD.
- 2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Announcement, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT. The system announces, "Record after the tone. Press STOP when you are done."
- 4. Speak towards the telephone base to record your announcement. Press **STOP** to end recording. Your recorded announcement plays.

To listen to the recorded announcement again, scroll to **Play annc** and press **SELECT** (see page 123).


To delete your outgoing announcement:

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- 4. Press **SELECT** again to select **Announcement.**
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Play annc**, and then press **SELECT**.
- 6. While the announcement is playing, press ▲/DELETE to delete the announcement. The screen shows Annc. Reset.

To reset your outgoing announcement:

- When the telephone base is in idle mode, press
 MENU to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- 4. Press **SELECT** again to select **Announcement.**
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Reset annc, and then press SELECT. The screen shows Reset to default annc?.

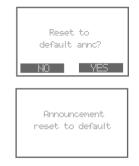



6. Press **YES** to confirm. The screen shows **Announcement reset to default**.

When your announcement is deleted, the system answers calls with the default announcement described on page 123. You cannot delete the default announcement.


Answer on/off

Unless you change it, the answering system is on and ready to record messages. You can turn the answering system off, but if you do so, the answering system does not answer calls and record incoming messages.

To turn the answering system on or off:

Using the telephone base:

Press **&/LINE 1 ANS ON/OFF** or **&/LINE 2 ANS ON/OFF** to turn the corresponding answering system on or off. If the answering system is turned on, it announces, *"Calls will be answered."* If the answering system is turned off, it announces, *"Calls will not be answered."*

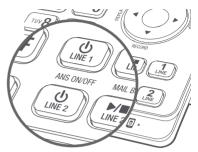

-OR-

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Answer ON/OFF, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight On or Off, and then press
 SELECT to save the setting. You hear a confirmation tone.





NOTE: If the answering system is off and there is an incoming call, the system answers after ten rings and announces, *"Please enter your remote access code."* For more information about remote access, see page 140.

Call screening on/off

Use this feature to choose whether incoming messages can be heard over the speaker when they are being recorded. If you turn call screening on, you hear the incoming message. While monitoring an incoming message, you can answer the call by pressing **LINE 1/FLASH**, **LINE 2/FLASH**, or **(*)/SPEAKER** on a cordless handset, or pressing **1 LINE**, **2 LINE**, or **SPEAKER (*)** on the telephone base. You can also lift the corded handset to answer the incoming call.

To change the setting:

5.

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.

Press **SELECT** to select **Call screening**.

- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Ans system setup, and then press SELECT.



- 6. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose On or Off.
- 7. Press **SELECT** to save the setting. You hear a confirmation tone.

NOTE: For more information on call screening, see page 134.

Number of rings

You can set the answering system to answer an incoming call after two, three, four, five or six rings. You can also select toll saver. If toll saver is selected, the answering system answers a call after two rings when you have new messages, and after four rings when there are no new messages. This feature allows you to check for new messages and avoid paying long distance charges when calling from out of your local area. By default, the answering system answers an incoming call after four rings.

To set the number of rings:

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- 4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Ans system setup, and then press SELECT.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **# of rings**, and then press **SELECT**.



- 6. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to choose among **6**, **5**, **4**, **3**, **2**, or **Toll saver**.
- 7. Press **SELECT** to save the setting. You hear a confirmation tone.

NOTE: If you set the number of rings for the answering system as 2 or 3 rings, the caller ID announce feature may not have enough time to announce the caller's full information.

Remote access code

To access your answering system remotely from any touch-tone phone, you need to enter a two-digit number (00-99). By default, the remote access code is **19**.

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Mailbox 1** or **Mailbox 2**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Ans system setup, and then press SELECT.
- Press VCID, ▲DIR, V/RECORD, or ▲/DELETE to highlight Remote code, and then press SELECT.
- 6. Use the dialing keys to enter a two-digit number. Press ▲/DELETE to backspace and delete a digit.
- 7. Press **SAVE** to save the setting. You hear a confirmation tone.



Message alert tone

When the message alert tone is set to **On**, and there is at least one new message, the telephone base beeps every 10 seconds. Unless you change it, the message alert tone is set to off.

There is no audible alert at the handset.

To change the setting:

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Ans system setup, and then press SELECT.
- 5. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Msg alert tone**, and then press **SELECT**.
- ANS SYSTEM SETUP # of rings Remote code Msg alert tone BACK \$ SELECT MSG ALERT TONE VOn Off BACK \$ SELECT
- 6. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose On or Off.
- 7. Press **SELECT** to save the setting. You hear a confirmation tone.



NOTES:

- The message alert tone beeps only if all the following conditions are met:
 - Answering system is on.
 - Message alert tone setting is on.
 - There are new messages.
- ▶ To temporarily turn off the message alert tone, see page 133.

Message recording time

You can set the recording time allowed for incoming messages. The message length is 3 minutes by default.

To change the setting:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Ans system setup, and then press SELECT.



- 5. Press **VCID**, **▲DIR**, **V/RECORD**, or **▲/DELETE** to highlight **Recording time**, and then press **SELECT**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to choose 3 minutes, 2 minutes, or 1 minute, and then press SELECT to save the setting. You hear a confirmation tone.

Answering system About the answering system

Answering system and voicemail indicators

Your telephone has separate indicators for two different types of voice messages: those left on its built-in digital answering system and those left in your service provider's voicemail (fees may apply). Your telephone's built-in digital answering system messages and voicemail messages are separate. Each alerts you to new messages differently.

- If QO and L1) XX New msgs and/or L2) XX New msgs display on the telephone base and handsets, there are new messages in the built-in answering system. To listen to messages recorded on your digital answering system, press ▶/■/LINE 1 MAIL BOX or ▶/■/LINE 2 MAIL BOX on the telephone base. To listen to messages with a cordless handset, see To listen to messages on a cordless handset on page 135.
- If ∑¹, ∑ z, or ∑¹z, and L1) Voicemail and/or L2) Voicemail display on telephone base and handsets, your telephone service provider is indicating that it has new voicemail for you. To listen to your voicemail, dial an access number provided by your telephone service provider, followed by a security code or PIN.

Some telephone service providers bundle or combine multiple services like voicemail and call waiting, so you may not be aware that you have voicemail. To check what services you have and how to access them, contact your telephone service provider.

To use your voicemail service rather than the answering system, turn off the answering system. To use the answering system rather than your voicemail service, contact your telephone service provider to deactivate the voicemail service.

Using the answering system and voicemail together

You can also use your telephone answering system and voicemail together by setting your built-in answering system to answer before voicemail answers, as described below. To learn how to program your voicemail settings, contact your telephone service provider. If you are on a call, or the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail is set to answer. For example, if your voicemail answers after six rings, set your answering system to answer after four rings. Some voicemail providers may program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Answering system About the answering system

Message capacity

Each answering system (mailbox) can record and store up to 99 messages, depending on the length of each message. Individual messages can be up to three minutes (see **Message recording time** on page 131), and the maximum recording time is approximately 22 minutes. The actual recording time depends on individual message characteristics. Messages remain available for replay until you delete them.

When there are new messages (including memos) on the answering system, the number of messages stored shows in the message counter.

If the answering system has less than three minutes of recording time left, it announces, "Less than three minutes to record," before message playback at the cordless handset or the telephone base. **L1) Rec mem low** and/or **L2) Rec mem low** display on the device screen in idle mode. When you turn on the answering system at the telephone base, it announces, "Calls will be answered. Less than three minutes to record."

If the memory is full, the answering system announces, "*Memory is full*," before message playback. The device screen displays **L1) Rec mem full** and/or **L2) Rec mem full** in idle mode. Once the memory is full, you cannot turn the answering system back on if it has been turned off, nor can you record new messages until old ones have been deleted. **Memory full** displays if you want to turn on the answering system on the handset but there is no memory.

Voice prompts

The system provides voice prompts to guide you through the setup procedures at the telephone base, message playback, remote access and recording outgoing announcements.

Temporarily turning off the message alert tone

If the message alert tone is turned on, the telephone base beeps every 10 seconds when there are new messages. Pressing any telephone base key temporarily silences the message alert tone.

The message alert tone resumes when you receive another message.

Answering system About the answering system

Call screening

To screen a call at the telephone base:

If the answering system and call screening are on (see **Call screening on/off** on page 127), the announcement and the incoming message broadcast at the telephone base when a call is answered by the answering system.

Options while a message is being recorded:

- Press ▼/VOLUME/▲ on the telephone base to adjust the call screening volume.
- Press ▶/■/LINE 1 MAIL BOX, ▶/■/LINE 2 MAIL BOX or SILENCE to temporarily silence the call screening.
- Press ▶/■/LINE 1 MAIL BOX, ▶/■/LINE 2 MAIL BOX or SCREEN to temporarily turn on the call screening if call screening is set to off.
- ▶ Press 1 LINE, 2 LINE, SPEAKER (), or lift the corded handset to answer the call.

To screen a call at the handset:

If the answering system is on and your answering system is recording a message, press **SCREEN** to screen the call on your cordless handset and the screen displays the caller ID information. If you do not subscribe to caller ID service, the handset shows **Incoming call**.

Options while a message is being recorded:

- ▶ Press ▼CID/VOLUME or ▲DIR/VOLUME to adjust the call screening volume.
- Press **OFF/CANCEL** or **SILENCE** to temporarily silence the call screening.
- Press SCREEN to temporarily turn on the call screening if call screening is set to off.
- Press I/SPEAKER to broadcast the announcement and the incoming message through the speakerphone. Press again to turn off the speakerphone.

Call intercept

Answering system Message playback

If you have both new and old messages, you can play the new messages first, and then the old messages. The caller ID information displays on the screens when you play messages and you can call back the caller.

When playback begins, the handset and telephone base screens display the message status, caller ID information, and time and date of the message recorded. You hear the total number of messages followed by the day and time of the message. After the last message, the telephone announces "End of messages" and the screen displays **End of messages**.

To listen to messages at the telephone base:

- 1. Press ►/■/LINE 1 MAIL BOX or ►/■/LINE 2 MAIL BOX on the telephone base to listen to the messages.
 - If there are new and old messages, press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to select Play new msgs or Play old msgs, and then press SELECT.

When the telephone base is playing a message, its screen shows **[2]-Call info** and the caller's name or number. If the caller's information is unavailable, the handset shows **No caller info**.

The system announces the number of messages, and then begins playback. The message sequence is shown on the telephone base. If there are no recorded messages, the telephone base shows **No messages** and you hear, *"You have no message."*

To listen to messages on a cordless handset:

- 1. When the handset is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Play messages**.
- 3. Press ▼CID or ▲DIR to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
 - If there are new and old messages, press ▼CID or ▲DIR to select Play new msgs or Play old msgs, and then press SELECT.
 - If there are only new or only old messages, they will play automatically.

The system announces the number of messages, and then begins playback. The message sequence is shown on the handset. If there are no recorded messages, the handset shows **No messages** and you hear, *"You have no messages."*

Answering system Message playback

Options during playback

When a message is playing, you can adjust the playback volume, skip, repeat, pause or delete the message.

When messages are playing on the telephone base:

- ▶ Press ▼/VOLUME/▲ to adjust the speaker volume.
- ▶ Press ►/SKIP or SKIP to skip to the next message.
- ▶ Press **</REPEAT** or **REPEAT** to repeat the message currently playing.
- ▶ Press **</REPEAT** or **REPEAT** twice to listen to the previous message.
- ▶ Press ▲/DELETE to delete the current message. The system advances to the next message.
- Press **2** to pause the playback and show the caller ID information.
 - Press 1 LINE, 2 LINE, SPEAKER (), or DIAL to use line 1 or line 2, or press Cell A() or CELL B() to use a cell line to call back the caller. If necessary, press QUIET # (pound key) or 1 to show different dialing options.
 - Press CANCEL or BACK to restart the playback. If you do not call back within 10 seconds, message playback restarts.
- Press 1 LINE, 2 LINE, CELL A(P), or CELL B(P) to pause the message playback. The telephone base screen displays Call back? with the caller ID information. Press DIAL to call back the caller, or BACK to restart the message playback. If the dialing format used is not correct, and then use the option, as mentioned above, to choose the correct format before calling back the caller.
- ▶ Press ▶/■/LINE 1 MAIL BOX, ▶/■/LINE 2 MAIL BOX, or CANCEL to stop the playback.

Answering system Message playback

When messages are playing on a cordless handset:

- Press ()/SPEAKER to play the messages through the handset earpiece.
 Press ()/SPEAKER again to return to playing messages through the speakerphone.
- Press ▼CID/VOLUME or ▲DIR/VOLUME to adjust the speakerphone volume.
- Press **SKIP** to skip to the next message.
- Press **REPEAT** to repeat the message currently playing. Press **REPEAT** twice to listen to the previous message.
- Press MUTE/DELETE to delete the current message.
- Press **2** to pause the playback and show the caller ID information.
 - Press LINE 1/FLASH, LINE 2/FLASH, <)/SPEAKER, or DIAL to use line 1 or line 2, or press () A CELL or () B CELL to use a cell line to call back the caller. If necessary, press # (pound key) or 1 to show different dialing options.
 - Press OFF/CANCEL or BACK to restart the playback. If you do not call back within 10 seconds, message playback restarts.
- Press LINE 1/FLASH, LINE 2/FLASH, () A CELL, or () B CELL to pause the message playback. The handset displays Call back? with the caller ID information. If the dialing format used is not correct, press QUIET # (pound key) or 1 to show different dialing options. Press DIAL to call back the caller, or BACK to restart the message playback. If the dialing format used is not correct, and then use the option, as mentioned above, to choose the correct format before calling back the caller.
- Press **OFF/cancel** to stop the playback.

Answering system Message playback

Delete all old messages

You can only delete old (reviewed) messages. You cannot delete new messages until you review them. You cannot retrieve deleted messages.

To delete all old messages on the telephone base:

- 1. When the telephone is idle, press \blacktriangle /DELETE.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT. The screen shows Delete all old messages?.
- Press YES to confirm. The screen displays Deleting... followed by All old msgs deleted!. You hear a confirmation tone.



-OR-

- 1. Press **MENU** when in idle mode to enter the main menu.
- 2. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Answering system**, and then press **SELECT**.
- 3. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT.
- 4. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Delete all old, and then press SELECT. The screen shows Delete all old messages?.
- 5. Press **YES** to confirm. The screen displays **Deleting...** followed by **All old msgs deleted!**. You hear a confirmation tone.

Answering system Recording and playing memos

Memos are your own recorded messages used as reminders for yourself or others using the same answering system. You can record your own memos using the telephone base. Play and delete them the same way as incoming messages.

Record a memo

Using the telephone base:

- 1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
- 2. Press **SELECT** to select **Answering system**.
- 3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Mailbox 1** or **Mailbox 2**, and then press **SELECT**.

 Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Record memo, and then press SELECT. The system announces, "Record after the tone. Press STOP when you are done."



- 5. Speak towards the handset to record a memo.
- 6. Press **STOP** to stop recording. The systems announces, *"Recorded."* and then returns to the previous menu.

-OR-

- 1. When the telephone base is in idle mode, press ▼/RECORD.
- 2. Press **SELECT** to choose **Memo**.
- Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Mailbox 1 or Mailbox 2, and then press SELECT. The system announces, "Record after the tone. Press STOP when you are done."
- 4. Speak towards the handset to record a memo.
- 5. Press **STOP** to stop recording. The systems announces "*Recorded.*", and then returns to the previous menu.



NOTES:

- The system announces "Memory is full," if you attempt to record a memo when the memory is full.
- Each memo can be up to four minutes in length.
- Memos shorter than two seconds are not recorded.

Playback a memo

Play memos the same way as messages. See **Message playback** on pages 135-138.

Answering system Remote access

You can reach your answering system remotely by dialing your home telephone number from any touch-tone telephone.

To remotely access the answering system:

- 1. Dial your telephone number from any touch-tone telephone.
- 2. When the system answers, enter the two-digit remote access code (**19** is the default code, see page 129 to change it).
 - The system automatically announces the number of new or old messages (if any), and then begins to play them.
- 3. You can also enter the following remote commands.

Remote commands

1	Press to listen to all messages.
2	Press to listen to new messages only.
3	Press to delete the current message (during playback).
33	Press twice to delete all old messages.
4	Press to repeat the current message (during playback).
5	Press to stop any operation (including recording).
*5	Press to listen to a list of remote commands.
6	Press to skip to the next message (during playback).
*7	Press to record a new announcement.
8	Press to end remote access (the call will be terminated).
0	Press to turn the answering system on or off.

4. Hang up or press **8** to end the call.

Answering system Remote access

Cut out and carry the remote access wallet card at the back of this user's manual for quick reference.

I					h
l	Ξ				I
l	-	-	-	•	I
L	_	_	_		I

NOTES:

- If you do not press any keys after you enter the remote access code, all new messages play. If there are no new messages, all old messages play.
- Once the new messages have played, the telephone announces the help menu options. If you
 do not press any key within 20 seconds, the remote access call automatically disconnects.
- ▶ When the answering system is turned off, the telephone answers after 10 rings, and announces, *"Please enter your remote access code."*
- ▶ When the memory is full, the answering system answers incoming calls after 10 rings and announces, "Memory is full. Enter the remote access code."

Appendix Adding and registering cordless handsets/headsets/ speakerphones

Your telephone can support up to 12 DECT 6.0 cordless handsets (AT&T model **TL86003**, sold separately), or up to ten cordless handsets and two DECT cordless headsets (sold separately) and/or cordless speakerphones (AT&T model **TL80133**, sold separately). Visit

www.telephones.att.com/accessories for a list of compatible DECT 6.0 cordless headsets and speakerphones. Each new cordless handset, headset or speakerphone must be registered to the telephone base before use. You must register each cordless device separately.

To register a speakerphone to this telephone system, please refer to the corresponding user's manual for details. To register a cordless handset and cordless headset, see below.

The handset and headset provided within your **TL87203** product box are already registered as **HANDSET 1**, and **HDST/SPK 1**. Additional handsets and headsets are assigned numbers in the sequential order they are registered (up to **HANDSET 12**, or **HANDSET 10** and **HDST/SPK 2**).

Register a cordless handset to your telephone base

Using the telephone base:

- 1. Before you begin registration, make sure the handset is out of the charger and shows **To register HS, see manual**.
- 2. Press MENU on the telephone base in idle mode.
- 3. Press **▼CID**, **△DIR**, **▼/RECORD**, or **△/DELETE** to highlight **Settings**, and then press **SELECT**.
- 4. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Registration**, and then press **SELECT**.
- 5. The telephone base shows **Registering... Please wait**.
- 6. Press # on the cordless handset for registration, and the handset shows Registering... Please wait. It takes about 90 seconds to complete the registration process. Both the telephone base and cordless handset display HANDSET X Registered (X represents the registered handset number), and beep when registration completes.







NOTE: You cannot register a handset if any other system device is in use.





Appendix Adding and registering cordless handsets/headsets/ speakerphones

Register a cordless headset to your telephone base

Using the telephone base:

- 1. Before you begin registration, make sure the battery is properly installed in the headset (see page 16). The **v** light flashes slowly in red and blue to indicate the headset is not registered.
- 2. Place the headset in the headset charger and allow it to charge for at least one hour before beginning registration.
- 3. Remove the headset from the charger.
- 4. Press **MENU** on the telephone base in idle mode.
- 5. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Settings, and then press SELECT.
- 6. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Registration, and then press SELECT.
- 7. The telephone base shows **Registering... Please wait**.
- 8. Place the headset back to the charger. The ${\bf \Phi}$ light flashes quickly in red and blue.



It takes about 60 seconds to complete the registration process. The $\boldsymbol{\vartheta}$ light turns red when the headset is registered but not fully charged, or turns blue when it is registered and fully charged.

To verify the registration, press the $\mathbf{0}$ button on the headset and check for a dial tone. If the registration fails, you hear the voice prompt "Not registered" and the $\mathbf{0}$ light on the headset flashes slowly in red and blue.

To reset the headset, remove it from the headset charger and try the registration process again.



NOTE: You cannot register a headset if any other system device is in use.

_{Appendix} Deregister all devices

You may need to deregister all devices if:

- You have 12 registered devices and need to replace one of them.
 - -OR-
- You wish to reassign the designated cordless handset or headset number of your registered devices.

You must first deregister all devices, and then individually register each device again.

To make deregistration easier, read all of the following instructions before you begin.

Deregister all devices from the telephone base

All devices, including cordless headsets and speakerphones paired to your telephone base, will be deregistered after the deregistration process.

- 1. Make sure that all cordless handsets are out of charger before you begin deregistration.
- Press and hold HOLD on the telephone base for about 10 seconds. The telephone base shows Deregister all devices?. Release HOLD.
- 3. Quickly press **HOLD** again or press **YES** within two seconds. If the telephone base returns to the idle screen, start again from Step 1.
- 4. The telephone base shows **Deregistered all devices**, and then returns to the idle screen. All system handsets display **To register HS, see manual.** and you hear a confirmation tone when the deregistration completes. The deregistration process takes about 10 seconds to complete. To register the handset(s) to the telephone base again, follow the registration instructions on the previous page.





NOTES:

- If the deregistration process fails, you may need to reset the system and try again. To reset, unplug the power from the telephone base and plug it back in.
- You cannot deregister the devices if any other system device is in use.

Cordless handset screen icons

	1
12	Line 1 or Line 2 - On steadily when line 1 and/or line 2 is in use, or there is an incoming call on line 1 and/or line 2.
122	
р (р)	CELL A or CELL B - On steadily when Cell A line and/or CELL B line is in use, or there is an incoming call on Cell A line and/or CELL B line.
(p) 🖯	
e (b)	
Að	Bluetooth connected devices - There are Bluetooth connected devices on the active devices list.
🚷 В	the active devices list.
A B	Bluetooth disconnected devices - There are Bluetooth disconnected
8в	devices on the active devices list.
	Battery status - Battery is charging (animated display).
0	Battery status - The battery icon flashes when the battery is low and needs charging.
()	Speakerphone - The speakerphone is in use.
	Voicemail - You have new voicemail on line 1 and/or line 2 from your telephone service provider.
∑ ₂	
heu	New caller ID log - New and missed calls.
MUTE	MUTE - The handset microphone is off.
ZZ	Ringer off - The handset ringer is off.
PT	No incoming PTT - The incoming PTT function on the handset is off.
₽C	PC CALL ringer off - The handset ringer for PC call is off.

Telephone base screen icons

12	LINE 1 or LINE 2 - On steadily when line 1 and/or line 2 is in use, or there is an incoming call on line 1 and/or line 2.
122	
д (р)	CELL A or CELL B - On steadily when Cell A line and/or CELL B line is in use, or there is an incoming call on Cell A line and/or CELL B line.
(1)	
a (p) B	
А 🕅 Ø В	Bluetooth connected devices - There are Bluetooth connected devices on the active devices list.
A 8	Bluetooth disconnected devices - There are Bluetooth disconnected devices on the active devices list.
₹.»	Wireless Bluetooth headset - On steadily when a wireless Bluetooth headset is in use on line 1 or line 2.
	Voicemail - You have new voicemail on line 1 and/or line 2 from your telephone service provider.
NEW	New caller ID log - Missed and new calls.
MUTE	Mute - Microphone is muted.
2	Directory Search Bar - 3-character Search
S 222	Number of missed call - Missed call indication for landlines and cell lines.
Zz	Ringer off - The telephone base ringer is off.
PTT	No incoming PTT - The incoming PTT function on the telephone base is off.
₽C	PC CALL ringer off - The telephone base ringer for PC call is off.

Cordless handset alert tones

One short beep	Tone of each key press, if key tone is turned on.
One long beep	Indication to begin recording a message, memo or announcement.
Two short beeps	You are pressing CID/VOLUME OF DIR/VOLUME on a cordless handset when the volume is already at its highest or lowest setting.
	-OR-
	Call waiting tone.
	-OR-
	Error tone.
	-OR-
	Registration slots are full.
Confirmation tone (three rising tones)	The system has completed the command successfully.
Four beeps	The other party has ended your intercom call.
	-OR-
	The cordless handset has gone out of range from the base during a call.
Four short beeps	Low battery warning.
Four rising tones	Your Android cell phone has received mobile notifications.


Telephone base alert tones

One short beep	Tone of each key press, if key tone is turned on.
One long beep	Indication to begin recording a message, memo or announcement. Indicates the start of message recording during call screening or the end of a message playback session.
Two short beeps	You are pressing ♥/VOLUME/▲ on the telephone base when the volume is already at its highest or lowest setting. -OR- Call waiting tone. -OR- Error tone. -OR- Registration slots are full.
Confirmation tone (three rising tones)	The system has completed the command successfully.
Four beeps	The other party has ended your intercom call.
Four short beeps	Registration failure tone.
Four rising tones	Your Android cell phone has received mobile notifications.
Beeps every 10 seconds	Message alert.

Headset alert tones

One long beep	The headset is ready to take your voice command. (You have to install the AT&T Softphone Call Manager before using this feature. For installation and operation instructions of the software, refer to the Installation and Operation Guide which can be found in the CD-ROM in the package. You may also visit www.telephones.att.com/downloads to download it.)	
One short beep every 30 seconds	The microphone is muted.	
Two beeps	 Error alert tone. The ringer volume has reached its lowest setting. The listening volume has reached its highest or lowest setting. The speaking volume has reached its highest or lowest setting. Any key is pressed while the headset is out of range. 	
Two low beeps	Call waiting alert tone.	
Two rapid beeps every 20 seconds	Low battery warning.	
Three rising beeps	A conference call has started.	
Three rapid beeps every 20 seconds	The headset is out of range.The headset is not yet registered.	
Three rapid beeps	The headset is powering on or off.	

Telephone base and cordless handset lights

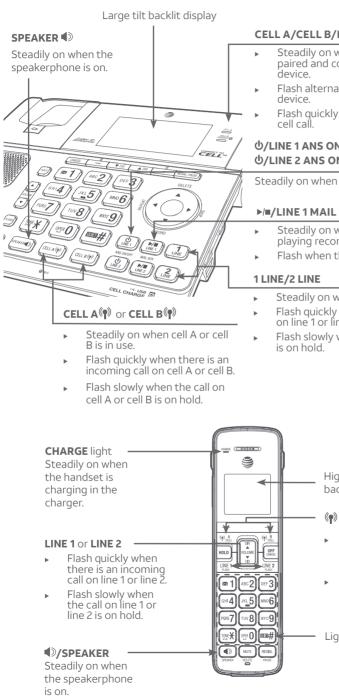

CELL A/CELL B/HEADSET (B) lights

- Steadily on when the telephone base is paired and connected with a Bluetooth
- Flash alternately while pairing a Bluetooth
- Flash guickly when there is an incoming

心/LINE 1 ANS ON/OFF/ **也/LINE 2 ANS ON/OFF**

Steadily on when the answering system is on.

▶/■/LINE 1 MAIL BOX/ ▶/■/LINE 2 MAIL BOX

- Steadily on when the answering system is playing recorded messages.
- Flash when there are new messages.
- Steadily on when line 1 or line 2 is in use.
- Flash quickly when there is an incoming call on line 1 or line 2.
- Flash slowly when the call on line 1 or line 2

High contrast backlit LCD display

(P) A CELL or (P) B CELL

- Flash guickly when there is an incoming call on cell A or cell B.
- Flash slowly when the call on cell A or cell B is on hold.

Lighted keypad

Headset lights

ပံ light status	
Red	 On when the headset is charging in the headset charger.
	• Flashes every 10 seconds to indicate the battery is low when the headset is not in the headset charger.
	► Flashes three times to indicate the headset is powering off.
Blue	 On when a fully charged and registered headset is in the headset charger.
	► Flashes three times to indicate the headset is powering on.
	Flashes twice every three seconds when the headset is in use.
	Flashes four times every four seconds when there is an incoming call.
	 Flashes every 10 seconds when a fully charged and registered headset in idle mode is out of the headset charger.
Red and blue	Flashes slowly when the headset is not registered.
	 Flashes quickly when the headset is trying to register to a headset base or telephone base.
Off	► The battery is dead.
	No battery is installed.
	► The headset is powered off.

Answering sys is On during quiet mode	QUIET mode is turned on, and the answering system is automatically turned on.
BASE is calling	The telephone base is calling.
Bluetooth system busy	You are trying to make a cell call or access the Bluetooth menu when the Bluetooth link is already being used.
Call transferred	You have transferred an outside call to another device.
Caller ID 109 empty	There are no entries in the caller ID log.
Callin9 EASE 0	The handset is calling the telephone base (for intercom calls).
Calling HANDSET X	The handset or telephone base is calling another handset (for intercom calls). The telephone base is transferring an outside call to a handset.
CELL A	Cell A line is on a call.
CELL D	Cell B line is on a call.
CL)A: <application></application>	The cell phone that you paired with this telephone received a mobile notification.
CL)A in use	Cell A line is being used.
CL)A low batt	Message received from Alerts manager that your cell phone's battery is low.
CL)A On hold	A call on Cell A line has been put on hold.
CL)A Ringer off	The ringer of Cell A line is turned off.
CL)8: <application></application>	The cell device that you paired with this telephone received a mobile notification.
CL>B in use	Cell B line is being used.
CL)8 low batt	Message received from Alerts manager that your cell device's battery is low.
CL)B On hold	A call on Cell B line has been put on hold.
CL)B Ringer off	The ringer of Cell B line is set to off.
CL)Ringers off	The ringers of both cell lines are set to off.
CL)A&B in use	Both cell lines are being used.
CL)A&B On hold	Calls on both cell lines have been put on hold.
CL) Downloading	The system is downloading a directory from a cell phone.
Connection failed	A Bluetooth device failed to establish a connection with your telephone system.
Contact deleted	A directory entry is deleted.

	- 1 10 10 10 10
Directory empty	There are no directory entries.
Directory full	The directory is full. You cannot save any new entries unless you delete some current entries.
Ended	You have just ended a call.
HANDSET X is calling	Another system handset is calling.
Intercom	The device is on an intercom call.
Intercom ended	The intercom call has just ended.
L1)Ans sys off	The answering system of line 1 is turned off.
L1) In use	Line 1 is being used.
L1)No line	There is no telephone line connection to line 1.
L1>On hold	A call on line 1 has been put on hold.
L1)Rec mem full	The system recording time for line 1 is full.
L1)Rec mem low	The system recording time for line 1 is low.
L1)Ringer off	The ringer of line 1 is turned off.
LI)Voicemail	A new voicemail is detected in line 1.
L1)XX New mege	Displays on telephone base screen when you have new messages in the answering system of line 1.
L2) Ans ses off	The answering system of line 2 is turned off.
L2) In use	Line 2 is being used.
L2>No line	There is no telephone line connection to line 1.
L2>On hold	A call on line 2 has been put on hold.
L2)Rec mem full	The system recording time for line 2 is full.
L2)Rec mem low	The system recording time for line 2 is low.
L2)Ringer off	The ringer of line 2 is turned off.
L2)Voicemail	A new voicemail is detected in line 2.
L2) XX New mege	Displays on telephone base screen when you have new messages in the answering system of line 2.
Line 1	Line 1 is on a call.
Line 2	Line 2 is on a call.
Low battery	The battery is low. You should charge the battery.
Microphone ON	Mute is off so the other party can hear your voice.
Muted	The microphone is off. The other party cannot hear you.

No AC power. System can only access Line 1.	The base's corded handset is lifted during an AC power failure. If there is an AC power failure, it is still possible to dial out and receive incoming calls on line 1 using the corded handset.
No answer. Try again	The device(s) you are trying to transfer a call to is out of range, off hook, or has no power.
No battery	The handset in the charger has no battery installed.
No Bluetooth device is ready for connection.	There is no Bluetooth device paired to the telephone system when you press CELL A or CELL B/HEADSET 3 on the telephone base or handset.
No caller info	The caller information is unavailable.
No entries found. Download from SIM only?	There are no entries found when you download a cell phone directory from the cell memory.
No entries found. Download from Phone only?	There are no entries found when you download a cell phone directory from your SIM card. There are no entries found in either the cell or SIM card when you download a cell phone directory from both memories.
No messages	There are no messages in the answering system.
No signal. Call ended.	The phone lost connection with the telephone base or did not have a strong enough signal and the phone call ended.
Not available at this time	Someone else is already using the directory or caller ID log. When a handset tries to access the answering system or Bluetooth menu during battery backup mode.
Aunber already saved	The telephone number you have entered is already in the directory.
Out of range OR no power at base	The telephone base has lost power, or the handset is out of range.
** Paging **	The cordless handset is paged by the telephone base.
Paging all devices	The telephone base is paging all devices.
PC CALL	PC line is on a call.
PC CALL On hold	A call on PC line has been put on hold.
Place in char9er	The battery is very low. The handset should be charged.

PTT From HANDSET X To devices: X	One handset has started a PTT session to another handset and telephone base.
PTT TO HANDSET X	You have started the PTT process with a cordless handset.
PTT To BASE Ø	You have started the PTT process with the telephone base.
Push to talk Ended	The PTT session is ended.
Quiet mode is off	QUIET mode is turned off.
Registering Please wait	The handset is registering to the telephone base.
Registration slots are full	The telephone base has the maximum of 12 handsets registered to it.
Registration failed	The handset registration is not successful.
Ringer muted	The ringer is off temporarily while the device is ringing.
Saved	An entry has been successfully saved in the directory.
To register HS, see manual.	Screen display before handset registration.
Unable to call. Try again	You try to join a call when there are already four handsets on that call. You try to make an outside call when another device is transferring a call with the intercom feature.
XX Missed calls	There are missed calls in the caller ID log.
XXX Missed calls	There are more than 99 missed calls in the caller ID log.

If you have difficulty with your phone, please try the following suggestions. For Customer Service, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

I cannot pair my cell phone to the telephone base.

- Make sure you have cellular coverage.
- Make sure your cell phone is compatible with your telephone system. Check the Bluetooth compatibility list at www.telephones.att.com/bluetooth.
- Make sure the Bluetooth function of your cell phone is turned on. See the user's manual of your cell phone for more information.
- Make sure that you set your cell phone to search for devices.
- If the telephone systems in your cell phone device history list, delete it and try pairing again.
- Carefully follow the pairing instructions on pages 37-38 and make sure that your cell phone is not connected to any other Bluetooth device.
- Turn off your cell phone, and then turn it on again.
- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the suggestions mentioned above.

I cannot pair my Bluetooth headset to the telephone base.

- Make sure that your Bluetooth headset is in discoverable mode when pairing with the telephone base. See the user's manual of your headset for more information on how to set your headset to discoverable mode.
- Make sure your headset is compatible with your telephone system.
 Check the Bluetooth compatibility list at
 www.telephones.att.com/bluetooth.
- Carefully follow the pairing instructions on pages 39-40 and make sure that your headset is not connected to any other Bluetooth device.
- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the suggestions mentioned above.

I cannot connect my cell phone with the telephone base.

- Make sure that the Bluetooth function of your cell phone is turned on.
 See the user's manual of your cell phone for more information.
- Make sure that your Bluetooth cell phone is not connected to any other Bluetooth device.
- Turn off your cell phone, and then turn it on again.
- Make sure that your cell phone is on the active devices list.
- For some cell phones, you must authorize the **TL87203** device in your cell phone's Bluetooth feature. See the user's manual of your cell phone for more information.
- Manually connect your cell phone to your telephone system. Refer to the user's manual of your cell phone for more information.

I cannot connect my Bluetooth headset with the telephone base.

- Make sure that your Bluetooth headset is not connected to any other Bluetooth device.
- Make sure that your headset is on the active devices list.

I cannot put my headset in discoverable mode.

- Refer to the user's manual of your headset for information on how to set your headset to discoverable mode.
- Make sure that the headset is not connected to any other Bluetooth device in order to successfully pair and connect to the telephone base.
- Carefully follow the pairing process on pages 39-40.
- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in. Repeat the suggestions mentioned above.

I don't know how to search for or add new devices on my cell phone.

- Most cell phones have the Bluetooth feature in the connection or setup menus. Please refer to the user's manual of your cell phone.
- In general, press the menu key on your cell phone, and then look for the Bluetooth menu in the settings or connection menu. In the Bluetooth menu, select the option to search for or add new devices.

My cell phone disconnects with the telephone base.

- ▶ Turn off your cell phone, and then turn it on again.
- Make sure that you are not using your cell phone when on a cell call.

My cell phone is connected to the telephone base, but I cannot make a cell call.

- Make sure that your cell phone is not in use when you are trying to make a cell call.
- For some smartphones, make sure that the cellular function is turned on.

Bluetooth system busy appears on the display.

- Make sure that your cell phone is not in use when connected and on the active devices list.
- Make sure that your cell phone or headset is not connected to any other Bluetooth device.
- > Your telephone system can only use one Bluetooth device at a time.

The PIN on the telephone base does not work.

- The default PIN is **0000**.
- If you have changed the PIN, it will appear on the telephone base in the pairing process.

The listening volume of my cell call is too loud or quiet.

 During a cell call, if the listening volume is too loud or quiet, try changing the volume on your cell phone. On some cell phones, changing the volume on the cell phone affects your cell call volume on the **TL87203**.

I cannot hear any audio on my telephone system when on a cell call.

- Make sure that your cell phone's volume is not too low or muted.
- Reset the telephone base. Unplug the unit's electrical power. Wait for approximately 15 seconds, and then plug it back in.
- Turn off your cell phone, and then turn it on again.

I cannot download contacts from my cell phone to my TL87203.

- Make sure that your cell phone is paired and connected to the base.
- Make sure you place your cell phone next to the base while downloading.
- If your cell phone does not support the download, you can send the directory from your cell phone. The system can receive the directory automatically. See the user's manual of your cell phone for more information.

I see duplicate entries in my downloaded directory.

 If you see duplicate directory entries, you can delete them manually. Another option is to download again either your SIM card or phone memory, but not both.

Some of my cell phone contacts were not imported to my TL87203.

Try copying the contacts from your SIM card to your cell phone memory first, and then download from your phone memory. If that doesn't work, try copying the contacts from your cell phone memory to your SIM card, and then download from your SIM card. For more information on how to transfer contacts between your SIM card and your phone memory, refer to the user's manual of your cell phone.

Can the TL87203 help the poor cell phone reception in my house?

 If your cell phone has poor reception in your home, the **TL87203** cannot improve the reception. However, if you have a location in your house with better reception, you can leave your cell phone in that location while you use **TL87203** cell line. In order for this to work, the cell phone must be within 30 feet of the telephone base for optimal performance.

The phone doesn't play my iPhone ringtone when there is an incoming call.

- Make sure your iPhone operating system is iOS 4.1 or later.
- Make sure you have turned on the **Cell ringer** feature (page 47).

The iPhone ringtone played is unclear or too loud with noise.

- The quality of ringtone played on your telephone is subject to individual ringtone characteristics.
- Try using another iPhone ringtone to test the quality.

I cannot make or receive softphone calls on PC line.

- Make sure you have connected the telephone base to your computer by using the USB cable.
- Make sure you have installed and launched the software AT&T Softphone Call Manager on your computer. (see page 20).

I cannot make a voice command call.

- Make sure you have connected the telephone base to your computer by using the USB cable.
- Make sure you have installed and launched the software AT&T Softphone Call Manager on your computer. (see page 20).
- Make sure you have added the desired entries into the phonebook directory inside the AT&T Softphone Call Manager on your computer.

My telephone doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure that the battery connector is securely plugged into the handset.
- Make sure that the battery is securely installed in the cordless headset.
- Make sure the telephone line cord is securely and firmly plugged into the telephone base and the telephone wall jack.
- Charge the battery in the cordless handset for at least 11 hours. For optimum daily performance, return the cordless handset to the charger when not in use.
- Charge the battery in the cordless headset for at least three hours. For optimum daily performance, return the cordless headset to its charger when not in use.
- Reset the headset. Power off the headset and then power it on.
- If the cordless handset battery is depleted, charge the handset for at least 30 minutes before you use it. Refer to page 14 for details.
- Reset the telephone base. Unplug the electrical power. Wait for approximately 15 seconds, and then plug it back in. Allow up to one minute for the handset and telephone base to reset.
- You may need to purchase a new battery. Please refer to
 Battery installation and charging (pages 14-16) in this user's manual.

The display shows No line. I cannot get a dial tone.

- ▶ Try all the suggestions mentioned above.
- If the previous suggestions do not work, disconnect the telephone line cord from your telephone and connect the telephone line cord to another telephone.
- If there is no dial tone on the other telephone either, your telephone line cord may be defective. Install a new telephone line cord.
- If changing the telephone line cord does not help, the wall jack (or the wiring to this wall jack) may be defective. Try using a different wall jack in your home to connect your **TL87203** telephone, or contact your telephone service provider (charges may apply).

I cannot dial out.

- ▶ Try all the suggestions mentioned above.
- Make sure you have a dial tone before dialing. The cordless handset may take a second or two to find the telephone base and produce a dial tone. This is normal. Wait an extra second before dialing.
- Eliminate any background noise. Noise from a television, radio or other appliances may cause the phone to not dial out properly. If you cannot eliminate the background noise, first try muting the cordless handset before dialing, or dialing from another room with less background noise.
- If other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

My cordless handset or headset isn't performing normally.

- Make sure the power cord is securely plugged into the telephone base. Plug the power adapter into a different working electrical outlet not controlled by a wall switch.
- Move the handset or headset closer to the telephone base. You might have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds, and then plug it back in. Allow up to one minute for the handset and telephone base to reset.
- Reset the headset. Power off the headset and then power it on.
- Other electronic products such as HAM radios and other DECT phones, can cause interference to your cordless telephone. Try installing your telephone as far away as possible from these types of electronic devices.

Out of range appears on my cordless handset.

- Ensure you plug the telephone base in properly and the power is on.
- Move the cordless handset closer to the telephone base. You may have moved out of range.
- Reset the telephone base. Unplug the electrical power. Wait for 15 seconds, and then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Other electronic products such as HAM radios and other DECT phones, can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.

The handset battery does not hold a charge.

- If the cordless handset is in the charger and the charge light is not on, refer to **The charge light is off** (page 165).
- Charge the battery in the cordless handset for at least 10 hours. For optimum daily performance, return the cordless handset to the charger when not in use.
- If the battery is depleted, it may take approximately 30 minutes to charge the handset before it shows Low battery. Refer to the table on page 14 for details.
- You may need to purchase a new battery. Please refer to Battery installation and charging in this user's manual on pages 14-16.

The headset battery does not charge.

- Make sure that the battery is securely installed in the cordless headset.
- If the cordless headset is in its headset charger but the b light on the headset does not turn on, refer to The b light on the headset is off while charging on page 168.
- Charge the battery in the cordless headset for at least three hours. For optimum daily performance, return the cordless headset to the headset charger when not in use.
- You may need a new battery. Refer to the **Battery installation** section on page 14.
- Your headset might be defective. Refer to the Limited warranty section on pages 181-182 for further instructions.

I get noise, static, or weak signals even when I'm near the telephone base.

- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (pages 11-12). The filter prevents noise and caller ID problems as a result of DSL interference. Please contact your DSL service provider for more information about DSL filters.
- You may be able to improve the performance of your cordless phone by installing your new telephone base as far as possible from any other existing cordless telephone system that may already be installed.
- Other electronic products such as HAM radios and other DECT phones, can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Do not install this phone near a microwave oven or on the same electrical outlet. You may experience decreased performance while the microwave oven is operating.

- If you plug your phone in with a modem or a surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, relocate your phone or modem farther apart from one another, or use a different surge protector.
- Move your phone to a higher location. The phone may have better reception in a high area.
- If other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

I hear other calls while using my phone.

 Disconnect the telephone base from the telephone jack, and plug in a different telephone. If you still hear other calls, call your telephone service provider.

I experience poor sound quality when using the cordless handset speakerphone.

- For increased sound quality while using the cordless handset speakerphone, place the handset on a flat surface with the dial pad facing up.
- When using the cordless handset speakerphone, controlling background noise in your environment is essential. While you are listening to your party, press MUTE/DELETE to temporarily turn your microphone off. When it is your turn to speak, remember to press MUTE/DELETE again to turn the microphone on.
- Excessive background noise will cause a speakerphone to fade in and out. Try controlling the background noise by turning off and audio devices near the speakerphone. Also, try to avoid interrupting the person at the other end of the conversation while they are speaking. If background noise cannot be controlled, you should terminate speakerphone operation and return to normal handset mode.

My cordless handset does not ring when I receive a call.

- Make sure that the ringer is not off. Refer to Ringer volume on page 49 in this user's manual.
- Make sure you plug in the telephone line cord securely into the telephone base and the telephone jack. Make sure you plug in the power cord securely.
- The cordless handset may be too far from the telephone base.
- Charge the battery in the cordless handset for at least 10 hours. For optimum daily performance, return the cordless handset to charger when not in use.
- You may have too many extension phones on your telephone line to allow all of them to ring simultaneously. Try unplugging some of the other phones.
- The layout of your home or office may be limiting the operating range. Try
 moving the telephone base to another location, preferably to a
 higher location.
- If other phones in your home are having the same problem, contact your telephone service provider (charges may apply).
- Test a working phone at the phone jack. If another phone has the same problem, contact your telephone service provider (charges may apply).
- Other electronic products can cause interference with your cordless phone. Try installing your phone as far away as possible from electronic devices such as television sets, VCRs, or other cordless telephones.
- Remove the battery. Install the battery again and place the cordless handset into charger. Wait for the cordless handset to re-establish its connection with the telephone base. Allow up to one minute for this to take place.
- Your line cord may be defective. Try installing a new line cord.

I cannot hear a ring tone from the headset when there is an incoming call.

- The headset does not have an external ringer. You can only hear the ring tone when you are wearing the earpiece.
- If you have pressed MUTE/voice on the headset when it is ringing, it mutes the ring tone of the headset. The ring tone resumes on the next call.

My calls cut in and out while I'm using my cordless handset.

- Other electronic products such as HAM radios and other DECT phones, can cause interference with your cordless phone. Try installing your phone as far away as possible from these types of electronic devices.
- Do not install this phone near a microwave oven or on the same electrical outlet. You may experience decreased performance while the microwave oven is operating.
- If you plug your phone in with a modem or surge protector, plug the phone (or modem/surge protector) into a different location. If this does not solve the problem, relocate your phone or modem farther apart from one another, or use a different surge protector.
- Move your telephone base to a higher location. The phone may have better reception when installed in a high area.
- If other phones in your home are having the same problem, contact your telephone service provider (charges may apply).

The charge light is off.

- Make sure you plug the power and line cords in correctly and securely.
- Unplug the electrical power from the charger. Wait for 15 seconds, and then plug it back in. Allow up to one minute for the cordless handset and telephone base to reset.
- Clean the charging contacts on the cordless handset and charger each month with a pencil eraser or cloth.
- A blinking **CHARGE** light is an indication that the battery is not connected to the handset or is missing completely. Ensure that the battery is installed properly.

My caller ID isn't working.

- Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your phone.
- The caller may not be calling from an area that supports caller ID.
- Both your and your caller's telephone service providers must use caller ID compatible equipment.
- If you subscribe to high-speed Internet service (DSL digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack (pages 11-12). The filter prevents noise and caller ID problems resulting from DSL interference. Please contact your DSL service provider for more information about DSL filters.

System does not receive caller ID when on a call.

Make sure you subscribe to caller ID with call waiting features from your telephone service provider. Caller ID features works only if both you and the caller are in areas offering caller ID service, and if both telephone service providers use compatible equipment.

Incomplete messages.

- If a caller leaves a very long message, part of it may be lost when the system disconnects the call after the maximum recording time you have set.
- If the caller pauses for longer than seven seconds, the system stops recording and disconnects the call.
- If the system's memory becomes full during a message, the system stops recording and disconnects the call.
- If the caller's voice is very soft, the system may stop recording and disconnect the call.

Difficulty hearing messages.

- ▶ Press **VOLUME/**▲ to increase the telephone base speaker volume.
- ▶ Press ▲ DIR/VOLUME to adjust the message playback volume on a cordless handset.

System does not answer after the correct number of rings.

- If toll saver is activated, the number of rings changes to two when you have new messages stored (page 128).
- If the memory is full or the system is off, the system will answer after ten rings.
- In some cases, the answering system is affected by the ringing system used by your telephone service provider.
- If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail (page 128). To determine how many rings activate your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. If that solves the problem, consult your fax machine documentation for information on compatibility with answering systems.

System does not respond to remote commands.

- Make sure to enter your remote access code correctly (page 140).
- Make sure you are calling from a touch-tone phone. When you dial a number, you should hear tones. If you hear clicks, the phone is not a touchtone telephone and cannot activate the answering system.
- The answering system may not detect the remote access code while your announcement is playing. Try waiting until the announcement is over before entering the code.
- There may be interference on the phone line you are using. Press dialing keys firmly.

System does not record messages.

- Make sure the answering system is on. L1) Ans sys off or L2) Ans sys off should not appear on the handset and the U/LINE 1 ANS ON/OFF or U/LINE 2 ANS ON/OFF light on the telephone base should be on.
- Make sure the memory of the answering system is not full.
- If you subscribe to voicemail service, change the number of rings so that your answering system answers before your voicemail (page 128). To determine how many rings activate your voicemail, contact your telephone service provider.
- If there is a fax machine connected to the same telephone line, try disconnecting the fax machine. If that solves the problem, consult your fax machine documentation for information on compatibility with answering systems.

System announces, "Time and day not set."

You need to reset the system clock (page 52).

Outgoing announcement is not clear.

- When you record your announcement, make sure you speak in a normal tone of voice, about nine inches from the handset or the telephone base.
- Make sure there is no background noise (TV, music, etc.) while recording.

Voicemail and Show on the screens, and I don't know why.

Your telephone has both a built-in answering system and voicemail indication. If Voicemail and appear on the screens, and then your telephone has received a signal from your telephone service provider that you have a voicemail message waiting for you to retrieve from them. Contact your telephone service provider for more information on how to access your voicemail.

I cannot retrieve voicemail messages.

Your telephone has both a built-in answering system and voicemail indication. They are independent features and each alerts you to new messages differently (page 132). If you subscribe to voicemail service from your telephone service provider, contact your telephone service provider for more information on how to access your voicemail.

I've set my LCD language to Spanish or French and I don't know how to change it back to English.

- Press MENU on your cordless handset or base in idle mode, and then enter 364# on the handset or base. You hear a confirmation tone.
- Press OPTION on your cordless handset or base during a call, and then enter 364# on the handset or base. You hear a confirmation tone.

I subscribe to a nontraditional telephone service that uses my computer to establish connections, and my telephone doesn't work.

- Make sure your computer is powered on.
- Make sure your Internet connection is working properly.
- Make sure that the software is installed and running for your nontraditional telephone service.
- If you are using a firewall, it may prevent access to your nontraditional telephone service provider. Contact your service provider for more information.

The blacktriangle light on the headset is off while charging.

- Make sure the power cord is plugged in correctly and securely.
- Make sure that the battery is securely installed in the cordless headset.
- Make sure the headset is sitting properly in the charger to charge.
- Unplug the unit's electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless headset and headset charger to reset.
- Clean the cordless headset and headset charger charging contacts each month using a pencil eraser or dry cloth.
- Your headset or headset charger might be defective. Refer to the Limited warranty section on pages 181-182 for further instructions.

Common cure for electronic equipment.

If the telephone does not seem to be responding normally, try putting the cordless handset in the charger. If it does not fix the problem, do the following (in the order listed):

- 1. Disconnect the power to the telephone base.
- 2. Disconnect the cordless handset battery.
- 3. Wait a few minutes.
- 4. Connect power to the telephone base.
- 5. Remove the battery. Replace the battery and place the cordless handset into the charger.
- 6. Wait for the cordless handset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.

Taking care of your telephone

- Your cordless telephone contains sophisticated electronic parts, so you
 must treat it with care.
- Avoid rough treatment.
- Place the handset/headset down gently.
- Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

 Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

- Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL. Pull the unit out by the unplugged cords.

Appendix Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- Read and understand all instructions in the user's manual. Observe all markings on the product.
- Avoid using a telephone during a thunderstorm. There might be a slight chance of electric shock from lightning.
- Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset/ headset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. In an inadequately ventilated environment, the user should not plug the phone into a power outlet, nor put a charged handset/headset into the cradle where there are concentrations of flammable or flame-supporting gases. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Do not use this product near water or when you are wet. For example, do not use it in a wet basement or shower, nor next to a swimming pool, bathtub, kitchen sink, and laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- If this product does not operate normally, read the **Troubleshooting** section on pages 156-169 of this user's manual. If you cannot solve the problem, or if the product is damaged, refer to the **Limited warranty** section on pages 181-182. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- ▶ Replace batteries only as described in your user's manual (pages 14-16). Do not burn or puncture batteries they contain caustic chemicals.
- The power adapters are intended for a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- ► For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

> Use only the power adapters provided with this product. To obtain a replacement, visit our

website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

 Use only the supplied rechargeable batteries or replacement batteries (model BT183342/ BT283342/BT191665/BT291665). To order, visit our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

 To prevent risk of fire or battery explosion, replace with the correct battery type. Dispose of used batteries according to the instructions.

Appendix Important safety information

Especially about cordless telephones

- Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet which is not controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- Rechargeable batteries: This product contains nickel-metal hydride rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner.
 Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.
- Lithium-ion rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.



The RBRC[®] Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. You may call 1-800-8-BATTERY[®] for locations accepting spent Ni-MH batteries.

 ${\sf RBRC}^{\circledast}$ and 1-800-8-BATTERY $^{\circledast}$ are registered trademarks of the Rechargeable Battery Recycling Corporation.



The RBRC[®] Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle lithium-ion rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. You may call 1-800-8-BATTERY[®] for locations accepting spent Li-ion batteries.

 ${\rm RBRC}^{\otimes}$ and 1-800-8-BATTERY $^{\otimes}$ are registered trademarks of the Rechargeable Battery Recycling Corporation.

Appendix Important safety information

CAUTION

- There may be a risk of explosion if you use a wrong type of batteries. Use only the supplied rechargeable batteries or replacement batteries (model BT183342/BT283342/BT191665/ BT291665).
- Change this product's batteries only in accordance with the instructions and limitations specified in this manual.
- As with any batteries, do not allow conductive materials such as rings, bracelets or keys to come in contact with the metallic parts of the battery. The battery or conductor may overheat and cause harm.
- Do not open or damage the batteries. Released electrolyte is corrosive and may cause injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Do not dispose of the batteries in a fire. Check with local waste management codes for special disposal instructions. To prevent fire or shock hazard, do not expose this product to water or any type of moisture.
- Observe proper polarity orientation between the battery and metallic contacts.
- Do not disassemble your headset. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients:

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Especially about telephone answering systems

Two-way recording: This unit does not sound warning beeps to inform the other party that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process, and then inform the other party that you are recording the conversation.

SAVE THESE INSTRUCTIONS

In compliance with the bilingual requirements for safety, caution, and warning markings of Canadian Federal and Provincial/Territorial statutes and regulations, the French version of Important safety information is included.

Mesures de sécurité importantes



Ce symbole vous alertera d'informations importantes ou d'instructions d'entretien pouvant apparaître dans ce guide d'utilisation. Respectez toujours les mesures de sécurité et de sécurité de base lorsque vous utilisez ce produit, afin de réduire les risques de blessures, d'incendie, ou d'électrocution.

Information relative à la sécurité

- Veuillez lire et comprendre toutes les instructions de ce guide d'utilisation. Relectez toutes les inscriptions apparaissant sur le produit.
- Évitez d'utiliser le téléphone pendant un orage. Il pourrait y avoir un faible risque d'électrocution.
- N'utilisez pas un téléphone près d'une fuite de gaz. Dans certaines circonstances, une flammèche pourrait se produire lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné ou le casque d'écoute est déposé sur son chargeur. Ceci est un événement fréquent associé avec la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher un téléphone dans une prise de courant, et ne devrait pas déposer un combiné chargé dans le chargeur, si le téléphone se trouve dans un environnement comportant une concentration de gaz inflammables ou ignifuges, à moins de se trouver dans un endroit où la ventilation est adéquate. Une flammèche dans de tels environnements pourrait provoquer une explosion. De tels environnements peuvent comprendre : les endroits où de l'oxygène à des fins médicales est utilisé sans ventilation adéquate; des endroits où se trouvent des gaz industriels (dissolvants de nettoyage, des vapeurs de gazoline, etc.), une fuite de gaz naturel, etc.
- N'utilisez pas ce produit près de l'eau ou lorsque vous êtes mouillés. Par exemple, ne l'utilisez pas dans des sous-sols humides ou sous la douche, ou près d'une piscine, d'un bain, d'un évier de cuisine, ou d'une cuve de lavage. N'utilisez pas de liquides, ou de vaporisateurs aérosol de nettoyage. Si le produit entre en contact avec du liquide, débranchez immédiatement le fil téléphonique ou le cordon d'alimentation. Ne rebranchez pas le produit avant qu'il soit complètement sec.
- Installez cet appareil dans un endroit protégé où personne ne peut trébucher sur les cordons d'alimentation ou la ligne téléphonique. Protégez les câbles contre les dommages ou l'abrasion.
- Si le produit ne fonctionne pas correctement, consultez la section Dépannage (Troubleshooting) des pages 156-169 de ce guide d'utilisation. Si vous ne pouvez pas régler le problème, ou si le produit est endommagé, consultez la section Garantie limitée (Limited warranty) des pages 181-182. N'ouvrez pas ce produit, sauf tel qu'indiqué dans le guide d'utilisation. L'ouverture du produit ou le remontage inadéquat pourrait vous exposer à des tensions dangereuses ou autres dangers.
- Remplacez les piles uniquement tel que décrit dans votre guide d'utilisation (pages 14-16). N'incinérez pas et ne percez pas les piles — elles contiennent des produits chimiques caustiques.
- Les adaptateurs secteurs sont conçus pour être orientés verticalement ou installés sur le plancher. Les broches ne sont pas conçues pour se maintenir en place si la fiche est branchée dans une prise de courant au plafond, sous la table ou sous une armoire.
- Pour les produits à brancher à une prise de courant, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.



MISES EN GARDE:

- N'utilisez que les adaptateurs inclus avec ce produit. Pour obtenir une pièce de rechange, visitez notre site Web au **www.telephones.att.com** ou composez le 1-800-222-3111. Au Canada, composez le 1-866-288-4268.
- N'utilisez que la piles de rechargeable incluse ou la piles de rechange (modèle BT183342/ BT283342/BT191665/BT291665). Pour commander, visitez notre site Web

www.telephones.att.com ou composez le 1-800-222-3111. Au Canada, composez le 1-866-288-4268.

 Afin de prévenir les risques d'incendie ou d'explosion de la pile, replacez la pile avec une pile du même type. Jetez les piles épuisées en respectant les instructions.

Spécifiquement en rapport avec les téléphones sans fil

- Confidentialité : Les mêmes caractéristiques qui rendent les téléphones sans fil si pratiques créent également des restrictions. Les appels téléphoniques sont transmis entre le socle du téléphone et le combiné par le biais d'ondes radio, et il se peut que vos conversations téléphoniques soient interceptées par d'autres équipements de réception d'ondes radio au sein de la portée du téléphone sans fil. Pour cette raison, vous ne devez pas considérer les conversations sur un téléphone sans fil comme étant aussi confidentielles que celles d'un téléphone à cordon.
- Alimentation électrique : La base de ce téléphone sans fil doit être branchée à une prise de courant électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne peuvent pas être effectués à partir du combiné si la base n'est pas branchée, si elle est hors fonction ou si le courant électrique est coupé.
- Interférences potentielles aux téléviseurs : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et magnétoscopes. Pour réduire ou prévenir de tels parasites, ne pas déposer la base du téléphone sans fil à proximité d'un téléviseur ou magnétoscope, ni directement sur celui-ci. Si votre téléviseur affiche des interférences, éloignez le téléphone sans fil de celui-ci afin de réduire les parasites.
- Piles rechargeables : Ce produit comporte des piles rechargeables à l'hydrure métallique de nickel. Usez de prudence lorsque vous manipulez de telles piles et veillez à ne pas les courtcircuiter avec des matériaux conducteurs, tels que des bagues, bracelets et clés. La pile ou le conducteur peut surchauffer et vous brûler. Respectez la polarité adéquate entre les piles et le chargeur de piles.
- Piles rechargeables à l'hydrure métallique de nickel : Jetez ces piles de manière sécuritaire. N'incinérez pas et ne peercez pas les piles. Comme pour les autres piles du même type, si elles sont brûlées ou percées, des matières corrosives peuvent s'en échapper, ce qui risque de causer des brûlures ou autres blessures corporelles.
- Piles rechargeables au lithium-ion: Jetez ces piles de manière sécuritaire. N'incinérez pas et ne peercez pas les piles. Comme pour les autres piles du même type, si elles sont brûlées ou percées, des matières corrosives peuvent s'en échapper, ce qui risque de causer des brûlures ou autres blessures corporelles.



Le sceau de l'organisme de recyclage RBRC^{MD} sur les piles à l'hydrure métallique de nickel signifie que le fabricant de cet appareil participe volontairement au programme industriel visant à reprendre et recycler ce type de piles lorsqu'elles ne servent plus, au sein du territoire des États-Unis et du Canada. Vous devez apporter ces piles chez un détaillant participant ou le centre de recyclage le plus près de chez vous. Ou vous pouvez composer le 1-800-8BATTERY^{MD} afin de connaître les endroits qui acceptent les piles à l'hydrure métallique de nickel mortes.

RBRC^{MD} et 1-800-8-BATTERY^{MD} sont des marques déposées de Rechargeable Battery Recycling Corporation.



Le sceau de l'organisme de recyclage RBRC^{MD} sur les piles au lithium-ion signifie que le fabricant de cet appareil participe volontairement au programme industriel visant à reprendre et recycler ce type de piles lorsqu'elles ne servent plus, au sein du territoire des États-Unis et du Canada. Vous devez apporter ces piles chez un détaillant participant ou le centre de recyclage le plus près de chez vous. Ou vous pouvez composer le 1-800-8-BATTERY^{MD} afin de connaître les endroits qui acceptent les piles au lithium-ion mortes.

RBRC^{MD} et 1-800-8-BATTERY^{MD} sont des marques déposées de Rechargeable Battery Recycling Corporation.

MISES EN GARDE

- Il y a une faible risque d'explosion si vous utilisez le mauvais type de pile. N'utilisez que la pile rechargeable incluse ou conçue pour fonctionner avec votre appareil (modèle BT183342/ BT283342/BT191665/BT291665).
- Remplacez cette pile en respectant les instructions et les limitations spécifiées dans ce guide d'utilisation.
- Comme avec tout matériaux conducteur, veillez à ne pas court-circuiter les bornes de la pile avec des matériaux conducteurs, tels que des bagues, bracelets et clés. La pile ou le conducteur peut surchauffer et vous brûler. La pile ou les conducteurs peuvent surchauffer et causer des blessures.
- N'ouvrez pas et n'endommagez les piles. L'électrolyte qui s'en dégagerait est corrosif et peut causer des blessures aux yeux ou à la peau. L'électrolyte est toxique si avalé.
- N'incinérez pas les piles. Vérifiez auprès des autorités locales pour les instructions de mise aux rebus locales. Afin de prévenir les risques d'incendies, n'exposez pas ce produit à l'eau ou à l'humidité.
- Veuillez respecter la polarité des piles et des bornes métalliques.
- Ne démontez pas votre casque d'écoute. Aucune pièce pouvant être réparée par l'utilisateur ne se trouve à l'intérieur de l'appareil. Confiez la réparation à un technicien qualifié.

Mesures préventives pour les utilisateurs de stimulateurs cardiaques implantés dans l'organisme

Stimulateurs cardiaques (ne s'applique qu'aux téléphones sans fil numériques) :

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-unis, la firme WTR recommande aux médecins :

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en fonction.
- Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causé par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

Mode ECO

Lorsque le socle communique avec le combiné, le mode ECO sera activé automatiquement. Ceci réduit la consommation d'énergie selon la distance entre le socle du téléphone et le combiné.

Spécifiquement en rapport avec les répondeurs téléphoniques

Enregistrement deux voies : Cet appareil n'émet pas de bips d'avertissement qui permettent de prévenir l'autre partie que vous enregistrez la conversation. Pour assurer votre conformité aux règlements fédéraux ou provinciaux en rapport avec les enregistrements des conversations téléphoniques, vous devriez informer l'autre partie lorsque vous activez l'enregistrement.

CONSERVEZ CES INSTRUCTIONS

Appendix FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See Installation Instructions in the user's manual

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03. the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited Warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- Remain on the line and briefly explain the reason for the call before hanging up. .
- Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this telephone.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 1.0. The REN indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

Appendix FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules.

These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

For body worn operation, this handset has been tested and meets the FCC RF exposure guidelines when used with the accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Appendix California Energy Commission battery charging testing instructions

This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended for California Energy Commission (CEC) compliance testing only. When the CEC battery charging testing mode is activated, all telephone functions on the cordless handsets and cordless headsets, except battery charging, will be disabled.

To activate the CEC battery charging testing mode:

- 1. Press and hold **HOLD** on the telephone base for about 10 seconds in idle mode. The telephone base shows **Deregister all devices?**. Then, release **HOLD**.
- 2. Quickly press HOLD again or press YES within two seconds.



When the cordless handset successfully enters the CEC battery charging testing mode, the cordless handset screen displays **To register HS, see manual.**

When the cordless handset fails to enter this mode, repeat Step 1 to Step 2 mentioned above.

To deactivate the CEC battery charging testing mode:

Register your handsets and headsets back to the telephone base. See pages 142-143 for handset and headset registration instructions.



Appendix Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to our website at

www.telephones.att.com or call 1 (800) 222-3111. In Canada, dial 1 (866) 288-4268.

1. What does this limited warranty cover?

The manufacturer of this AT&T branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative repairs or replaces at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain the defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer returns the repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- PRODUCT returned without a valid proof of purchase (see item 6 on the next page); or
- ▶ Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

Appendix Limited warranty

5. How do you get warranty service?

To obtain warranty service, visit **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, please dial **1 (866) 288-4268**.

NOTE: Before calling for service, please review the user's manual. A check of the PRODUCT's controls and features might save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer notifies you and requests that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

- ▶ Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- Include "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you might also have other rights that vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation might not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion might not apply to you.

Please retain your original sales receipt as proof of purchase.

Appendix Technical specifications

RF frequency band	DECT frequency: 1921.536 - 1928.448 MHz
	Bluetooth frequency: 2402.000 - 2480.000 MHz
Channels	DECT channel: 5 Bluetooth channel: 79
Telephone base voltage (AC voltage, 60Hz)	96 - 129 Vrms
Telephone base voltage (AC adapter output)	6VDC @ 600mA 5.1VDC @1000mA
Handset battery	2.4VDC 400mAh, AAAx2, Ni-MH battery pack
Handset charger voltage (AC adapter output)	6VAC @300mA
Headset battery	3.7V 240mAH, Li-ion battery
Headset charger (AC adapter output)	6VDC @400mA
USB port output current (Type A)	500mA per port

Operation	Operating time*
Talk time (cordless handset)	up to 7 hours
Talk time (cordless handset speakerphone)	up to 5 hours
Standby	up to 7 days

* Operating times vary depending on your actual use and the lifespan of the battery.

DECT 6.0 digital technology

The AT&T DECT 6.0 products offer unsurpassed range performance and sound clarity. This is achieved through a unique antenna design and advances in noise-filtering technology. An independent laboratory has confirmed that AT&T DECT 6.0 products perform up to 45% better in range competitions against similarly equipped phones of the leading competition. Now, calls can be taken in the basement, backyard and garage with exceptional sound quality. can be taken in the basement, backyard and garage with exceptional sound quality.

Telephone operating range

This cordless telephone operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can communicate over a certain distance — which can vary with the locations of the telephone base and handset, the weather, and the construction of your home or office.

Redefining long range coverage and clarity

This telephone base comes with an antenna which gives much better clarity and covers a longer range than before.

HD audio

HD audio improves sound quality by expanding and rebuilding frequencies that are lost with traditional phone calls. There is no additional telephone service requirement to use HD audio. It is designed to work with standard telephone service. Your system will automatically enhance all received sound with HD audio.

Simulated full-duplex handset speakerphone

The simulated full-duplex speakerphone on your handset allows both ends of a call to speak and be heard at the same time. Optimal performance is subject to external factors and individual usage.

_{Index} Index

A

Active device, 42-43 Add a Bluetooth headset, 39-40 Add a cell phone, 37-38 Alerts manager, 35 Alert tones handset, 147 headset, 149 telephone base, 148 Announcement, 123 Answer a call on line 1 or line 2, 67 Answer a cell call. 70 Answer a home call. 68.71 Answer an incoming call during an intercom call, 93 during PTT, 101 Answer an incoming cell call while on line 1 or line 2, 73 Answering system and voicemail, 132 Answering system settings, 123-131 AT&T Softphone Call Manager, 20

B

Battery charging, 14–16 Battery installation, 15–16 Behind the neck band, 31–33 Bluetooth, 33–47 Bluetooth connection from idle mode, 41 Bluetooth features, 33–35 Bluetooth glossary, 36 Bluetooth headset, 39–40 Bluetooth setup, 37–47

С

Caller ID (CID) add entries to phone directory, 119 dial entries, 118 Call intercept, 134 Call waiting on the cell line, 72 Cell call, 70–71 Cell phone download directory, 44–45 Cell ringer, 47 Chain dialing, 85–86 Change PIN, 47 Connect an active device, 42, 46 Connect to Cell, 35 Cordless handset quick reference guide, 2–5 ringer tone, 50 ringer volume, 49 screen icons, 145 speakerphone, 81 temporary ringer silencing, 80 voicemail indicator, 132 Cordless headset quick reference guide, 10 temporary ringer silencing, 80

D

Date and time, 52 Delete a caller ID log entries, 121 a directory entry, 113 all old messages, 138 a message, 136 Delete a message, 136–137 Dialing from a record in the caller ID history, 118 Directory, 103-114 dial a number, 111 download, 44-45 edit entries, 111 name search, 110 new entry, 104-105 Display screen messages, 152–155 Download directory, 44-45 DSL, 11, 12

E

Earbud, 26 Ear hook, 27–29 End a call on line 1 or line 2, 67 End a cell call, 70 End a home call, 67 End mute, 82 Expand your telephone system, 142–143

_{Index} Index

F

Find handset, 80

Н

HD audio, 183 Head band, 29–30 Headset, 39 alert tones, 149 attachments, 26–32 earpiece ringer, 66 lights, 151 Hold, 83 Home area code, 59

L

Important safety information, 171–173 Installation, 11–13 battery, 15–16 Intercom, 91–95

L

Lights, 151 Limited warranty, 181–182 Listening volume, 82

Μ

Make a call, 17 Make a call on line 1 or line 2, 67 Make a cell call, 70 Make an outgoing call during PTT call, 102 Memory match, 116 Memos, 139 Message alert tone, 130 playback, 135–138 Message capacity, 133 Mute, 82

N

Neck band, 31–33

0

Operating range, 183 Over the ear hook, 27–29 Over the head band, 29–30

Ρ

Paging, 80 Phonebook, 103 PTT, 96–102 Pulse dialing, 63 Push-to-talk, 96–102

Q

Quick reference guide, 6–14 QUIET mode, 64

R

Record announcement, 123–124 Redial, 87–90 Registration, 142–143 Remote access code, 129, 140 Repeat messages, 136, 137 Replace a handset, 144 Ringtone share, 33

S

Safety information, 171–173 Share an outside call, 81 Skip messages, 136, 137 Softphone, 75 Speakerphone, 81 Stop messages, 136, 137

T

Take a call off mute, 82 Technical specifications, 183 Telephone base quick start guide, 6–9 ringer tone, 50 ringer volume, 49 screen icons, 146 temporary ringer silencing, 80 Telephone base installation, 11–13 Telephone operating range, 183 Troubleshooting, 156–169

U

USB port, 19

_{Index} Index

V


Voice command, 76 Voicemail, 132 Volume, 82

W

Wall-mounting, 21–22 Warranty, 181–182

Remote access wallet card

The wallet card lists the commands needed to control your answering system from any touch-tone telephone.

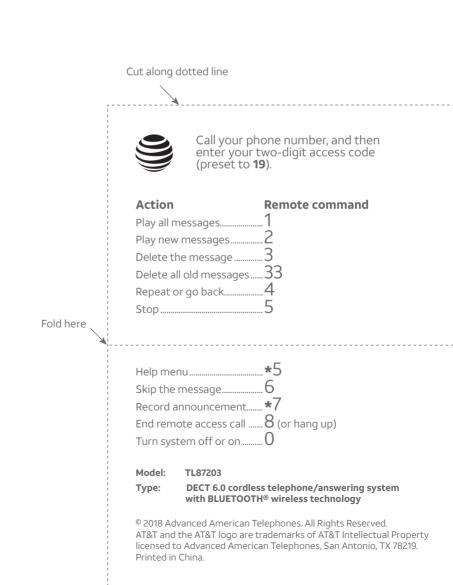



www.telephones.att.com

The *Bluetooth*[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

 © 2018 Advanced American Telephones. All Rights Reserved.
 AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219.
 Microsoft Lync[®], Microsoft Outlook[®], Skype[®], Windows XP[®], Windows XP[®], Windows Vista[®] and Windows Media Player[®] are registered trademarks of Microsoft Corporation. Connect to Cell[™] is a trademark of Advanced American Telephones. Android[®] and Google Play[®] are registered trademarks of Google Inc. iPhone[®] is a registered trademark of Apple, Inc.
 IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. All other trademarks are the properties of their respective owners. RBRC[®] and 1-800-8-BATTERY[®] are registered trademarks of the Rechargeable Battery Recycling Corporation. Printed in China, Issue 10 AT&T 07/18.