




at&t

User's manual

TL7700

DECT 6.0

accessory cordless headset

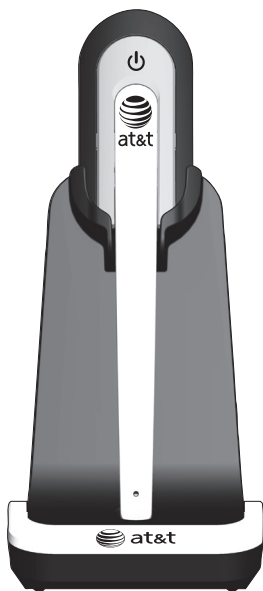

Congratulations

on your purchase of this AT&T product. Before using this AT&T product, please read the **Important safety information** section on pages 26-29 of this manual. Please thoroughly read this user's manual for all the feature operations and troubleshooting information necessary to install and operate your new AT&T product. You can also visit our website at

www.telephones.att.com or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.

Model number: TL7700 (Headset and headset charger)

Type: DECT 6.0 accessory cordless headset

Serial number: _____

Purchase date: _____


Place of purchase: _____

Both the model and serial numbers of your AT&T product can be found on the bottom of the headset charger.

Save your sales receipt and original packaging in case it is necessary to return this product for warranty service.

Parts checklist

Check to make sure the headset package includes the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

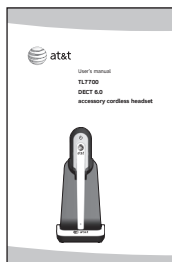

User's manual



Cordless headset with medium-sized earbud attached



Headset charger



Battery pack (battery with battery compartment cover attached)



Headset charger power adapter



2 earbuds



2 over-the-ear hooks



Over-the-head band



Behind-the-neck band

User's manual

TL7700 DECT 6.0 accessory cordless headset

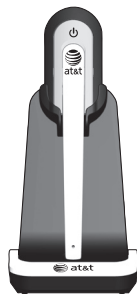


Table of contents


Getting started

Quick reference guide - headset.....	1
Headset lights	1
Headset alert tones.....	3
Quick reference guide - headset charger	4
Installation.....	5
Battery installation.....	6
Battery charging and connecting charger power... 7	
Add and register headsets	8
Register a headset to an AT&T DECT cordless telephone base	9
Replace a headset	10
Deregister all headsets from an AT&T DECT cordless telephone base	10
Headset attachments	11
Earbud	11
Over-the-ear hook	12
Over-the-head band	15
Behind-the-neck band	17

Appendix

Troubleshooting	19
Important safety information	26
Safety information.....	26
Especially about cordless headsets	27
Precautions for users of implanted cardiac pacemakers.....	29
Pacemaker patients.....	29
Maintenance.....	30
FCC Part 68 and ACTA.....	31
FCC Part 15.....	33
Limited warranty.....	34
Technical specifications	38
DECT 6.0 digital technology.....	38
Operating range.....	38
Extended range and clarity	38

Quick reference guide - headset

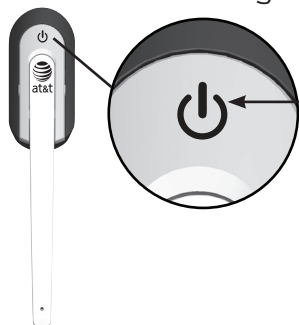


⏻ (On/off button and light)

Press to make, answer or end a call.

Headset lights

⏻ light status	
Red	<ul style="list-style-type: none"> On when the headset is charging in the headset charger. Flashes every 10 seconds to indicate the battery is low when the headset is not in the headset charger. Flashes three times to indicate the headset is powering off.
Blue	<ul style="list-style-type: none"> On when a fully charged and registered headset is in the headset charger. Flashes three times to indicate the headset is powering on. Flashes twice every three seconds when the headset is in use. Flashes four times every four seconds when there is an incoming call. Flashes every 10 seconds when a fully charged and registered headset in idle mode is out of the headset charger.
Red and blue	<ul style="list-style-type: none"> Flashes slowly when the headset is not registered. Flashes quickly when the headset is trying to register to a telephone base.
Off	<ul style="list-style-type: none"> The battery is dead. No battery is installed. The headset is powered off.

Quick reference guide - headset

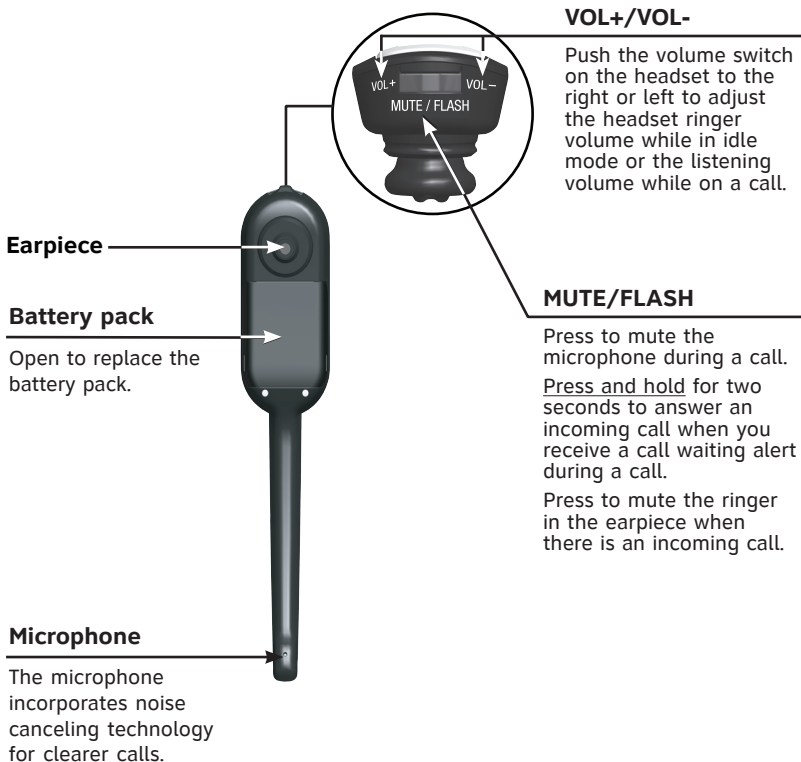

Quick reference guide - headset


Headset alert tones

One short beep	<ul style="list-style-type: none">• Headset key tone.
One short beep every 30 seconds	<ul style="list-style-type: none">• Muted headset microphone alert tone.
Two beeps	<ul style="list-style-type: none">• Error alert tone.• The ringer volume is at its lowest setting.• The listening volume is at its highest or lowest setting.• Any key is pressed while the headset is out of range
Two low beeps	<ul style="list-style-type: none">• Call waiting alert tone.
Two rapid beeps every 20 seconds	<ul style="list-style-type: none">• Low battery warning.
Three rising beeps	<ul style="list-style-type: none">• A conference call starts.
Three rapid beeps every 20 seconds	<ul style="list-style-type: none">• The headset is out of range.• The headset is not yet registered.
Ring tone	<ul style="list-style-type: none">• Incoming call alert tone.• Ring back tone.
Three rapid beeps	<ul style="list-style-type: none">• The headset is powering on or off.

Quick reference guide - headset charger


Magnetic charging mount

Place the headset here for charging.

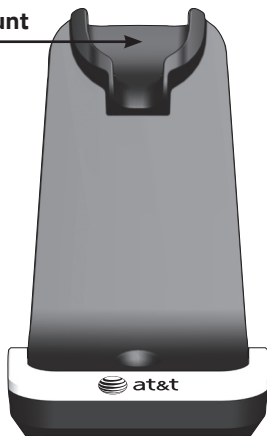

Power cord slot

Place the power cord here

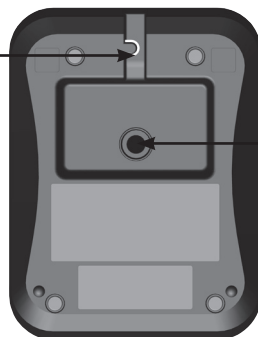

You must install and charge the battery before using the headset.



See pages 6-7 for easy instructions.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.


Avoid placing the telephone base too close to:

- Communication devices such as television sets, VCRs or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of a washing machine or work bench.


Battery installation

The battery is permanently attached to the battery compartment cover (known as the battery pack). Do not try to separate them from each other. After installing the battery pack, charge it for at least 15 minutes. You may be able to make and receive short calls. For optimal performance, charge the headset battery for at least three hours before use. When fully charged, the headset battery provides approximately 12 hours of talk time or 5 days of standby time. **When the headset is not in use, recharge by returning it to the headset charger.**

1. Insert the battery pack into the battery compartment.

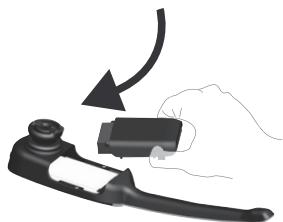


2. Press down on the battery pack until it clicks into place.

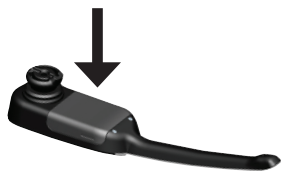

NOTES:


- Remove any headset attachment (earbud excluded) before battery replacement.
- To order a replacement battery pack (model BT191665), visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.


Battery charging and connecting charger power



After installing the battery, charge the headset by placing it in the magnetic charging mount as shown below. The  light turns on when the headset is charging.

1. Plug the small end of the headset charger power adapter into the power jack at the bottom of the headset charger. Place the power cord in the power cord slot.

Plug the headset charger power adapter into an electrical outlet not controlled by a wall switch.

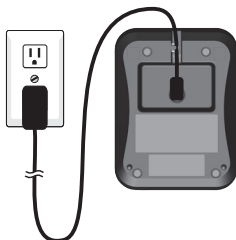

2. Insert the headset into the magnetic charging mount.
3. The magnet holds the top of the headset in place. The  light turns on.

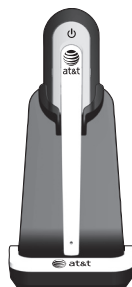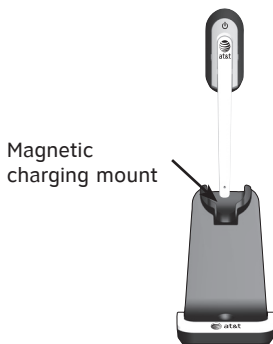

IMPORTANT INFORMATION

Use only the supplied rechargeable battery pack or replacement battery pack (model BT191665). To order, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Add and register headsets

You must register your new TL7700 headset with a compatible AT&T DECT 6.0 telephone before use (see page 9). The telephone base recognizes and counts a headset the same as a handset.




Refer to your telephone user's manual for the maximum number of handsets and headsets that you can register to the telephone. If you have the maximum number of handsets registered, you need to follow the deregistration information in your telephone user's manual before you can register a headset. Visit


www.telephones.att.com for a list of compatible telephones.



You can only register the headset to one product at a time. You must deregister the headset before registering it to another telephone (see page 10).

Add and register headsets

Register a headset to an AT&T DECT cordless telephone base

1. Make sure the battery is properly installed in the headset (see page 6). The  light on the headset flashes slowly in red and blue to indicate the headset is not registered.
2. Place the headset in the headset charger and allow it to charge for at least one hour before beginning registration.
3. Remove the headset from the charger.
4. On the telephone base of the cordless phone, press and hold  /**HANDSET LOCATOR** until the red **IN USE** light turns on (about four seconds) and then release the button.
5. Place the headset back to the charger.
The  light flashes quickly in red and blue.

It takes about 60 seconds to complete the registration process. The  light turns red when the headset is registered but not fully charged, or turns blue when it is registered and fully charged.

To verify the registration, press the  button on the headset and check for a dial tone. If the registration fails, you hear the voice prompt "Not registered" and the  light on the headset flashes slowly in red and blue.

To reset the headset, remove it from the headset charger and try the registration process again.



NOTE: The button used for registration on your cordless telephone system may be different. Refer to your telephone user's manual for detailed information.





Replace a headset

You may need to deregister your headsets if:

- You have already registered the headset and now wish to register your headset to a different AT&T DECT telephone.
- OR-
- You have registered the maximum number of headsets and need to replace one of them. You must first deregister all headsets, and then register each headset you wish to use again, one at a time.

Please read carefully through all the instructions on this page before beginning the deregistration process.

Deregister all headsets from an AT&T DECT cordless telephone base

1. Press and hold  **HANDSET LOCATOR** on the telephone base for about 10 seconds until the **IN USE** light starts to flash, then release the button.
2. Immediately press  **HANDSET LOCATOR** again. You must press  **HANDSET LOCATOR** while the **IN USE** light is still flashing. (The light flashes for about five seconds.)
It takes about 10 seconds to complete the deregistration process. The  light flashes slowly in red and blue when the deregistration process is successful.
3. To register the headset(s) to the telephone base again, follow the registration instructions on page 9.



NOTES:

- You cannot deregister the headset(s) if any system handset/headset is in use.
- Even if the battery is depleted, you can still deregister the headset by following the steps above.
- The button used for deregistration on your cordless telephone system may be different. Refer to your telephone user's manual for detailed information.


Headset attachments

Earbud

There are three sizes of earbuds provided. The medium-sized earbud is already attached to the headset.


To remove the earbud from the headset earpiece:

Hold both sides of the earbud. Twist and pull the earbud until it separates from the earpiece.

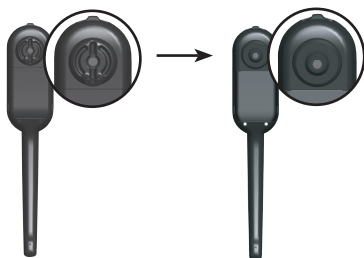

To attach the earbud to the headset earpiece:

1. Choose an appropriate earbud.
2. Position the earbud on the earpiece as shown below.
3. Press the earbud down on the earpiece until it clicks into place. Move the earbud around so that the protruding bump on the earbud is pointing towards your mouth when placed on your ear.

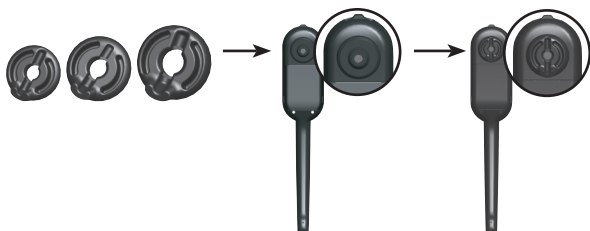

Headset attachments

Over-the-ear hook

There are two sizes of ear hooks provided. You can choose the suitable ear hook to attach to the headset.

To adjust the headset to wear on the left or right ear:

- To wear on the left ear:
 1. Make sure the ear hook ring is positioned as shown in Figure 1 before installation.
 2. Attach the ear hook ring. See the next page for instructions.

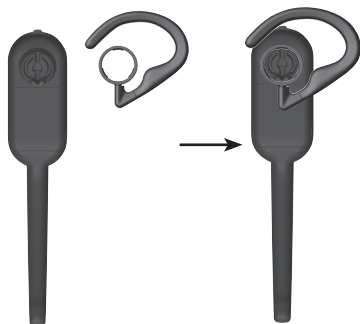


Figure 1

- To wear on the right ear:
 1. Make sure the ear hook ring is positioned as shown in Figure 2 before installation.
 2. Attach the ear hook ring. See the next page for instructions.

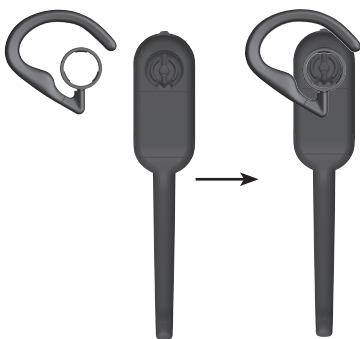


Figure 2

Headset attachments

To attach the ear hook to the headset:

1. Remove any headset attachment (earbud excluded) connected to the headset earpiece.
2. Insert the earpiece into the ear hook ring as shown in Figure 3.
3. Press the edge of the ear hook ring towards the earpiece until it clicks into place as shown in Figure 4.
4. Hook the headset onto the desired ear. Adjust the angle of the headset until the microphone is pointing towards your mouth as shown in Figure 5.



Figure 3

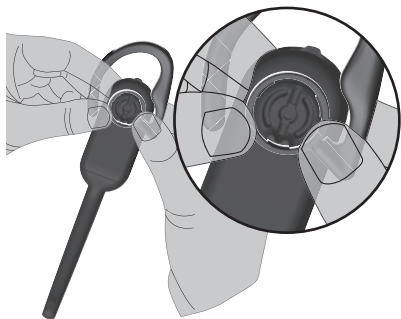


Figure 4

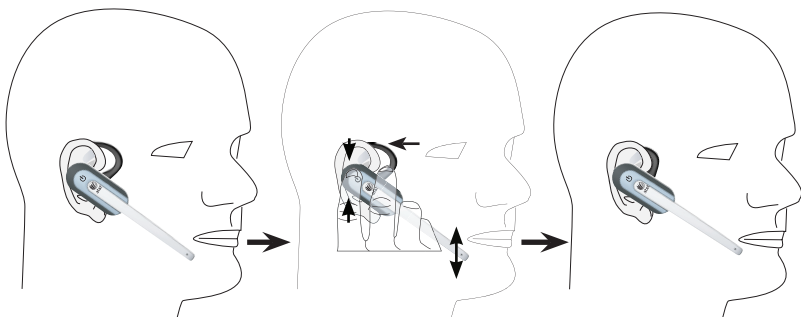


Figure 5

Headset attachments

To remove the ear hook from the headset:

Hold the headset with one hand. Twist and pull the ear hook with your other hand until it separates from the earpiece.



Headset attachments

Over-the-head band

To attach the head band to the headset:

1. Remove any headset attachment (earbud excluded) currently connected to the headset.
2. Insert the earpiece into the head band ring as shown in Figure 6.
3. Push the earpiece towards the head band ring until it clicks into place as shown in Figure 7.
4. Adjust the head band to fit your head. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth as shown in Figure 8.

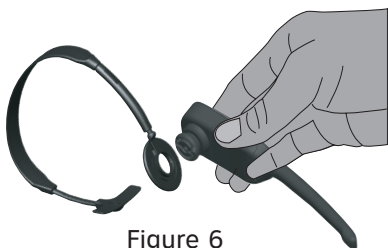


Figure 6

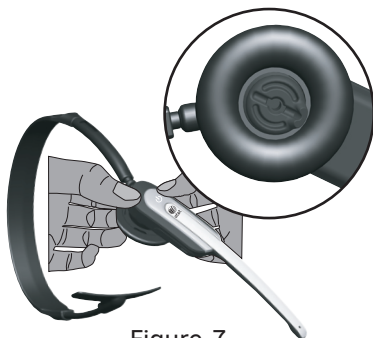


Figure 7

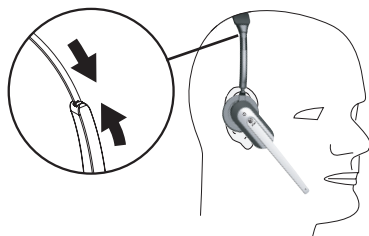


Figure 8




NOTES:

- To wear on your other ear, rotate the headset within the head band ring.
- Firmly grip the padded head band ring with one hand whenever adjusting the headset microphone up or down (see Figure 8).

Headset attachments

To remove the head band from the headset:

Hold the headset with one hand and the head band ring with your other hand. Twist and pull the headset until it separates from the head band ring.

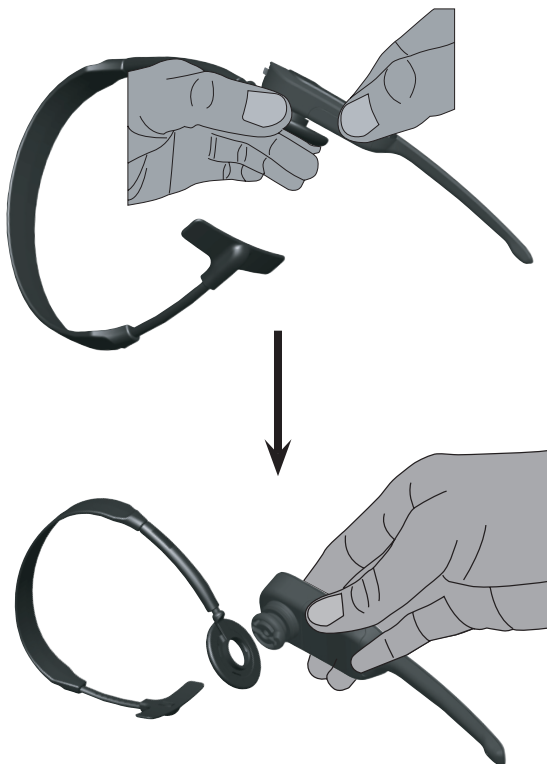

Headset attachments

Behind-the-neck band

To attach the neck band to the headset:

1. Remove any headset attachment (earbud excluded) currently connected to the headset.
2. Insert the earpiece into the neck band ring as shown in Figure 9.
3. Push the earpiece towards the neck band ring until it clicks into place as shown in Figure 10.
4. Place the neck band around your neck with the padded neck band rings over your ears.
5. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth as shown in Figure 11.



NOTE: To wear on your other ear, remove the headset from the neck band (see page 18) and then attach it to the other side of the neck band by following the steps above.



Figure 9



Figure 10


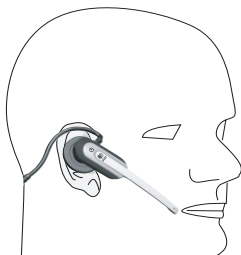


Figure 11

Headset attachments

To remove the neck band from the headset:

Hold the headset with one hand and the neck band ring with your other hand. Twist and pull the headset until it separates from the neck band ring.

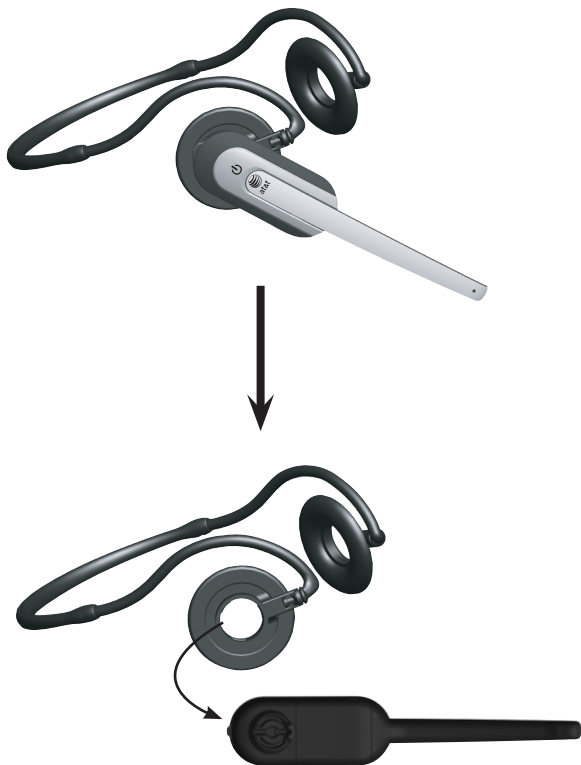

Troubleshooting

If you have difficulty with your telephone, please try the suggestions below. For customer service, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

My headset doesn't work at all.

- Make sure the power cord is securely plugged in.
- Make sure that the battery is securely installed in the cordless headset.
- Charge the battery in the cordless headset for at least three hours. For optimum daily performance, return the cordless headset to its charger when not in use.
- Reset the headset. Power off the headset and then power it on.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless headset. Try installing your telephone base as far away as possible from these types of electronic devices.
- You may need to purchase a new battery. Refer to page 6 of this user's manual.

The other party cannot hear my voice during a call.

- Adjust the speaking volume during a call.

There is no dial tone.

- Try all the suggestions above.
- Move the cordless headset closer to the telephone base. You might have moved out of range.
- Your telephone line cord may be defective. Install a new telephone line cord.
- Another phone on the same phone line may be in use.

Troubleshooting

- If the previous suggestions do not work, disconnect the telephone base from the telephone jack and connect another phone to that jack. If there is no dial tone on that phone either, the problem is in your wiring or local service. Contact your telephone service provider.

The battery does not charge.

- Make sure that the battery is securely installed in the cordless headset.
- If the cordless headset is in its headset charger but the **⓪** light on the headset does not turn on, refer to **The ⓪ light on the headset is off while charging** on page 24.
- Charge the battery in the cordless headset for at least three hours. For optimum daily performance, return the cordless headset to the headset charger when not in use.
- You may need a new battery. Refer to the **Battery installation** section on page 6.
- Your headset might be defective. Refer to the **Limited warranty** section on pages 34-37 for further instructions.

I cannot dial out.

- Try all the suggestions above.
- You must use a telephone on the same line to dial out. Once you have dialed the number, you can press **⓪** to join the call.
- If other phones in your home or office are having the same problem, the problem is in your wiring or local service. Contact your telephone service provider (charges may apply).

My cordless headset isn't performing normally.

- Make sure the power cord is securely plugged into the headset charger. Plug the unit into a different working electrical outlet not controlled by a wall switch.

Troubleshooting

- Move the cordless headset closer to the telephone base. You might have moved out of range.
- Reset the headset. Power off the headset and then power it on.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless headset. Try installing your telephone base as far away as possible from these types of electronic devices.

I get noise, static, or a weak signal even when I'm near the telephone base.

- If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Contact your DSL service provider for more information about DSL filters.
- You may be able to improve the performance of your cordless headset by installing the telephone base at least one foot from any cordless telephone system. If separating them by one foot does not help, try moving the headset farther away.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless headset. Try installing your telephone base as far away as possible from these types of electronic devices.
- Do not install this headset near a microwave oven or in the same electrical outlet. You may experience decreased performance while the microwave oven is operating.
- If your headset is located near a modem, move your headset and modem further apart from each other.
- Relocate your telephone base to a higher location. You may experience better reception by elevating the telephone base.

Troubleshooting

- If other phones in your home or office are having the same problem, the problem is in your wiring or local service. Contact your telephone service provider (charges may apply).

I cannot hear a ring tone from the headset when there is an incoming call.

- The headset does not have an external ringer. You can only hear the ring tone when you are wearing the earpiece.
- If you have pressed **MUTE/FLASH** on the headset when it is ringing, it mutes the ring tone of the headset. The ring tone resumes on the next call.
- You may have too many extension phones on your telephone line to allow all of them to ring simultaneously. Try unplugging some of the other phones.
- The layout of your home or office might be limiting the operating range. Try moving the telephone base to another location, preferably to a higher location.
- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless headset. Try installing your telephone base as far away as possible from these types of electronic devices.
- Install the battery again, and then place the cordless headset in the headset charger. Wait for the cordless headset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.
- Your telephone line cord may be defective. Install a new telephone line cord.
- If other phones in your home or office are having the same problem, the problem is in your wiring or local service. Contact your telephone service provider (charges may apply).

Troubleshooting

- Test a working phone at the phone jack. If another phone has the same problem, there may be a problem with the phone jack, wiring or service. Contact your telephone service provider (charges may apply).

I hear other calls while using my headset.

- Plug a different telephone into the telephone jack that you are currently using. If you still hear other calls, the problem is probably in your building's wiring or local service. Call your telephone service provider.

I want to use my headset with a different telephone base.

- You need to deregister the headset from the current telephone base (page 10), and then register it to the new telephone base (page 9).

My calls cut in and out while I'm using my cordless headset.

- Other electronic products such as HAM radios and other DECT phones can cause interference with your cordless headset. Try installing your telephone base as far away as possible from these types of electronic devices.
- Do not install the headset near a microwave oven or on the same electrical outlet. You may experience decreased performance while the microwave oven is operating.
- If your headset is located near a modem, move your headset and modem further apart from each other.
- Relocate your telephone base to a higher location. The headset will have better reception when not installed in a low area.
- If other phones in your home or office are having the same problem, the problem is in your wiring or local service. Contact your telephone service provider (charges may apply).

Troubleshooting

I cannot register the headset.

- You must be using a compatible AT&T DECT 6.0 telephone. Visit **www.telephones.att.com** for a list of compatible telephones.
- Your DECT 6.0 telephone has a maximum number of handsets that may be registered to the telephone base. In terms of registration, the telephone base treats a headset like a handset. Refer to your telephone user's manual for the maximum number of handsets allowed. If the maximum number of handsets are already registered, you need to follow the deregistration instructions in the telephone user's manual, then register the handsets and/or headsets you wish to use again, one at a time.

The light on the headset is off while charging.

- Make sure the power and line cords are plugged in correctly and securely.
- Make sure that the battery is securely installed in the cordless headset.
- Make sure the headset is sitting properly in the charger to charge.
- Unplug the unit's electrical power. Wait for 15 seconds, then plug it back in. Allow up to one minute for the cordless headset and headset charger to reset.
- Clean the cordless headset and headset charger charging contacts each month using a pencil eraser or dry cloth.
- Your headset or headset charger might be defective. Refer to the **Limited warranty** section on pages 34-37 for further instructions.

Troubleshooting

Common cure for electronic equipment.

- If the unit does not seem to be responding normally, try putting the cordless headset in its charger. If it does not fix the problem, do the following (in the order listed):
 1. Disconnect the power to the headset charger.
 2. Remove the cordless headset battery.
 3. Wait a few minutes.
 4. Connect the power to the headset charger.
 5. Install the battery again, and then place the cordless headset into the headset charger.
 6. Wait for the cordless headset to reestablish its connection with the telephone base. Allow up to one minute for this to take place.

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- **Read and understand all instructions in the user's manual. Observe all markings on the product.**
- **Avoid using a headset during a thunderstorm.** There may be a slight chance of electric shock from lightning.
- **Do not use the headset to report a gas leak in the vicinity of the leak.** Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the headset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the headset charger into a power outlet, and should not put a charged headset into the cradle, if the headset charger is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- **Do not use this product near water, or when you are wet.** For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- **Install this product in a protected location** where no one can trip over any line or power cords. Protect cords from damage or abrasion.

Important safety information

- **If this product does not operate normally, see the Troubleshooting section on pages 19-25 of this user's manual.** If you cannot solve the problem, or if the product is damaged, refer to the **Limited warranty** section on pages 34-37. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltage or other risks.
- **Replace batteries only as described in your user's manual.** Do not burn or puncture batteries — they contain caustic chemicals.
- **This power adapter is intended to be correctly oriented in a vertical or floor mount position.** The prongs are not designed to hold the plug in place if it is plugged into a ceiling, an under-the-table or a cabinet outlet.



Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Especially about cordless headsets

- **Privacy:** The same features that make a cordless headset convenient create some limitations. Telephone calls are transmitted between the telephone base and the headset by radio waves, so there is a possibility that your cordless headset conversations could be intercepted by radio receiving equipment within range of the cordless headset. **For this reason, you should not think of cordless headset conversations as being as private as those on corded telephones.**
- **Electrical power:** The telephone base of this cordless headset must be connected to a working electrical outlet which is not controlled by a wall switch. **Calls cannot be made from the headset if the telephone base is unplugged or switched off, or if the electrical power is interrupted.**

Important safety information

- **Potential TV interference:** Some cordless headsets operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless headset near or on top of a TV or VCR. If interference is experienced, moving the cordless headset farther away from the TV or VCR will often reduce or eliminate the interference.
- **Rechargeable batteries:** This product contains lithium-ion rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- **Lithium-ion rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.



The RBRC[™] Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle lithium-ion rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. Or you may call 1-800-8-BATTERY for locations accepting spent Li-ion batteries.

CAUTION

- There may be a risk of explosion if you use a wrong type of battery. Use only the supplied rechargeable battery or replacement battery (model BT191665).
- Change this product's batteries only in accordance with the instructions and limitations specified in this manual.
- As with any batteries, do not allow conductive materials such as rings, bracelets or keys to come in contact with the metallic parts of the battery. The battery or conductor may overheat and cause harm.

Important safety information

- Do not open or damage the batteries. Released electrolyte is corrosive and may cause injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Do not dispose of the batteries in a fire. Check with local waste management codes for special disposal instructions. To prevent fire or shock hazard, do not expose this product to water or any type of moisture.
- Observe proper polarity orientation between the battery and metallic contacts.
- Do not disassemble your headset. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable **digital cordless devices** and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep digital cordless devices at least six inches from the pacemaker.
- Should NOT place digital cordless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the digital cordless device at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using digital cordless devices.

SAVE THESE INSTRUCTIONS

Maintenance

Taking care of your headset

- Your cordless headset contains sophisticated electronic parts, so it must be treated with care.
- Avoid rough treatment.
- Place the headset down gently. Save the original packing materials to protect your headset if you ever need to ship it.

Avoid water

- Your headset can be damaged if it gets wet. Do not use the headset outdoors in the rain, or handle it with wet hands. Do not install the headset charger near a sink, bathtub or shower.

Electrical storms

- Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your headset

- Your headset has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or mild soap.
- Do not use excess water or cleaning solvents of any kind.

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORD FROM THE WALL. Then pull the unit out by the unplugged cords.

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US: AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g. if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment may not be used with party lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to

FCC Part 68 and ACTA

notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g. police, fire, medical) in these locations. If you do store or test emergency numbers, please:

Remain on the line and briefly explain the reason for the call before hanging up.

Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

This product meets the applicable Industry Canada technical specifications.

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules.

These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The headset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian ICES-003.

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to: In the United States of America, visit

www.telephones.att.com or call **1 (800) 222-3111**.

In Canada, call **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T-branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative will repair or replace at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer will return repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

Limited warranty

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or, (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or

Limited warranty

- PRODUCT returned without a valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service in the United States of America, visit **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, call **1 (866) 288-4268**. NOTE: Before calling for service, please review the user's manual; a check of the PRODUCT's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

- a. Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and

Limited warranty

- b. Include a “valid proof of purchase” (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- c. Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer’s responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specifications

RF frequency band	1921.536MHz - 1928.448MHz
Channels	5
Operating temperature	32°F - 122°F 0°C - 50°C
Headset voltage	3.2VDC - 4.2VDC
Charger voltage (AC adapter output)	6VDC @400mA
Replacement battery	3.7V 240mAH

DECT 6.0 digital technology

The AT&T DECT 6.0 products offer unsurpassed range performance and sound clarity. This is achieved through a unique antenna design and advances in noise-filtering technology. An independent laboratory has confirmed that AT&T DECT 6.0 products outperform the range claims of other headsets. Now calls can be taken in the basement, backyard and garage with exceptional sound quality.

Operating range

This cordless headset operates within the maximum power allowed by the Federal Communications Commission (FCC). Even so, this headset and its base can communicate over only a certain distance, which can vary with the locations of the headset and its base, the weather, and the construction of your home or office.

Extended range and clarity

The TL7700 is a fully cordless DECT 6.0 headset offering a range of up to 500 ft. Sound level protection technology conforms to the current regulations and is used to filter out the loud and high-pitched noises.



www.telephones.att.com